





27020GCC

& www.russellhobbs.com





Read the instructions, keep them safe, pass them on if you pass the appliance on. Remove all packaging before use.



IMPORTANT SAFEGUARDS

Follow basic safety precautions, including:

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.

If the cable is damaged, it must be replaced by the manufacturer, its service agent, or someone similarly qualified, to avoid hazard.

- ▲ The surfaces of the appliance will get hot.
- Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
- Don't put frozen meat or poultry in the appliance defrost fully before use.
- Cook meat, poultry, and derivatives (mince, burgers, etc.) till the juices run clear. Cook fish till the flesh is opaque throughout.
- Don't try to cook anything in the body of the cooker cook only in the removable bowl.
- Don't reach over the appliance, and keep hands, arms, face, etc. clear of the escaping steam.
- Fill with at least 1 cup of water.
- Don't fill above the top of the fill mark.
- Don't cover the appliance or put anything on top of it.
- Unplug the appliance when not in use.
- Don't use accessories or attachments other than those we supply.
- Don't use the appliance for any purpose other than those described in these instructions.
- Don't use the appliance if it's damaged or malfunctions.

HOUSEHOLD USE ONLY

PARTS

- 1. Knob
- 2. Lid
- 3. Fill mark
- 4. Bowl
- 5. Switch

- 6. Lights
- 7. Measuring cup
- 8. On/off switch
- 9. Spatula
- You may wash these parts in a dishwasher

BEFORE USING FOR THE FIRST TIME

Wash the bowl and lid in warm soapy water, rinse and dry.

PREPARATION

1. Sit the appliance on a stable, level, heat-resistant surface, near a power socket.

- 2. Don't use the appliance near or below curtains, shelves, cupboards, or anything else likely to be damaged by the escaping steam.
- 3. Have oven gloves (or a cloth) to hand, and a heat-resistant mat or dinner plate to put the bowl on after cooking.
- 4. Put the bowl inside the cooker.

COOKING

- 1. Use the measuring cup to put the rice into the bowl.
- 2. Fill the bowl with water up to the number corresponding to the number of cups of rice used.
- 3. Give the bowl quarter of a turn each way, to ensure the bottom of the bowl makes good contact with the element.
- 4. Put the lid on the bowl.
- 5. Put the plug into the power socket. Move the on/off switch to I. Move the switch to the \$ position. The \$ light will come on.
- 6. Move the switch to **\$\$**. The **\$** light will go out.
- 7. When the rice is cooked, the switch will move to **ý**, the **∭** light will go out, and the **j** light will come on.
- 8. Let the rice rest for about 10 minutes, then unplug the cooker.
- 9. Put on the oven gloves.
- 10. Steam and hot air will escape when you lift the lid. Tilt it slightly to direct the steam away from you.
- 11. Lift out the bowl and set it down on a heat-resistant mat or dinner plate.
- 12. Use the spatula to turn and mix the rice, to let all the steam escape.

ADDITIONAL INGREDIENTS

- If you add any additional ingredients (raisins, fruit, nuts, etc.), you should reduce the amount of rice to compensate for the amount of water they'll absorb.
- Raisins and dried fruit will absorb as much water as rice, so put them into the measuring cup along with the rice.
- Nuts won't generally absorb much water, so you can normally add them after you've measured the rice.

FINISHED?

- 1. Switch off the appliance and unplug it.
- 2. Don't move the rice cooker with the full bowl inside it. It will be heavy, and the cable may catch on something as you move.
- 3. Remove the bowl from the rice cooker before emptying it. If you try to remove food from the bowl while it's in the rice cooker, you may spill the contents into the rice cooker. This will damage it.

CARE AND MAINTENANCE

- 1. Switch off the appliance, unplug it and let it cool.
- 2. Wash the bowl and lid in warm soapy water, rinse and dry.
- 3. Wipe all surfaces with a clean damp cloth.
- You may wash these parts in a dishwasher.

RECYCLING



To avoid environmental and health problems due to hazardous substances, appliances and rechargeable and non-rechargeable batteries marked with one of these symbols must not be disposed of with unsorted municipal waste. Always dispose of electrical and electronic products and, where applicable, rechargeable and non-rechargeable batteries, at an appropriate official recycling/collection point.

- مفتاح التشغيل/الإيقاف .3 علامة الملء .8 وعاء أداة التحكم .9 .4
 - .5

AE

ملعقة صيدلي ويمكنك غسل هذه الأجزاء في غسالة صحون 000

قبل الاستعمال للمرة الأولى

اغسل الوعاء والغطاء والسلة في ماء صابوني دافئ واشطف وجفف.

التحضير

- ضع الجهاز على سطح ثابت ومستوي ومقاوم للحرارة فلا تضع الجهاز بالقرب من الستائر أو تحت الأرفف أو .1 الخرائن أو بالقرب من أي شيء يمكن أن يتعرض للتلف من جراء خروج البخار.
- استخدم قفازات جهاز الطُّبخ (أو قطعة قماش) للتناول وحصيرة مقاومة للحرارة أو لوحة عشاء لوضع الوعاء بعد .2 الطبخ.
 - ضم الوعاء داخل جهاز الطبخ. .3

الطبخ

- أستخدم كوب القياس لوضع الحبوب (الأرز والشوفان، الخ) في الوعاء.
- قم بملء الوعاء بالماء إلى الرقم المناظر لعدد أكواب الأرز المستخدمة.
- أدر الوعاء ربع لفة في كل اتجاه لضمان تلامس أسفل الوعاء جيدا مع العنصر.
 - 4. ضع الغطاء على الوعاء.
 - أوصل قابس الجهاز بالذيار الكهربائي. ضع مفتاح التشغيل بوضعية].
 - 6. سوف تضيئ اللمبة (.
 - 7. انقل أداة التحكم إلى ///
 - 8. سوف تنطفئِ اللمبة (.
- عند طبخ الأرز، سوف تنتقل أداة التحكم إلى { وسوف تنطفئ اللمبة \> وسوف تضئ اللمبة }.
 - 10. اترك بقيّة الأرز حوالي 10 دقائق ثم افصل جهاز الطبخ.
 - 11. قم بارتداء قفازات جهاز الطبخ.
- 12. سوف يخرج البخار والهواء الساخن عند رفع الغطاء. فقم بإمالته قليلا لتوجيه البخار بعيدا عنك.
 - ارفع الوعاء وضعه على حصيرة مقاومة للحرارة أو لوحة عشاء.
 - استَخدم ملعقة لتقليب وخلط الأرز للسماح بخروج جميع بخار.

المكونات الإضافية

- إذا قمت بإضافة أي مكونات إضافية (زبيب وفواكه ومكسرات، الخ)، يجب تقليل كمية الأرز لتعويض كمية الماء التي ستمتص.
 - وسوف يمتص الزبيب والفواكه المجففة كميات كبيرة من الماء كالأرز ولذلك ضعه في كوب قياس مع الأرز.
 - عموما لن تمتص المكسرات كميات كبيرة من الماء ولذلك يمكنك عادة إضافتها بعد الأرز المقاس.

هل انتهيت؟

- 1. افصل الجهاز.
- لا تحرك جهاز طبخ الأرز بالوعاء الممتلئ بداخله. فسوف يكون ثقيلا وقد يشتبك الكبل بأي شيء وأنت تتحرك.
- 3. أخرج الوعاء من جهاز طبخ الأرز قبل تفريغه. وإذا حاولت إخراج الطعام من الوعاء أثناء وجوده في جهاز طبخ الأرز، فقد تنسكب المحتويات في جهاز طبخ الأرز. وهذا سيعرضه للتلف.

العناية والصيانة

- أوقف الجهاز وافصله ودعه يبرد.
- اغسل الأجزاء القابلة للنقل في ماء صابوني دافئ واشطف وجفف.
 - قم بمسح جميع الأسطح بقطعة قماش مبللة.
 - سي ويمكنك غسل هذه الأجزاء في غسالة صحون.

عادة التدوير



لتجنب المشاكل البيئية والصحية الناجمة عن المواد الخطرة، يجب عدم التخلص من الأجهزة، والبطاريات القابلة لإعادة الشحن والبطاريات غير القابلة لإعادة الشحن التي تحمل علامة واحدة من هذه الرموز مع نفايات البلدية غير المصنفة. يجب دائمًا التخلص من المنتجات الكهربائية والإلكترونية، وكذلك إذا أمكن، البطاريات القابلة لإعادة الشحن وغير القابلة لإعادة الشحن، في نقطة رسمية مناسبة لإعادة التدوير/تجميع المخلفات.

T22-9001693