

RUSSELL HOBBS ErP Data Sheet

Column A Model	Column B Model name	Column C Mode	Column D Power Consumption (W)	Column E Remarks
19270-56, 19270*****, 21140, 21140*****	Steamer	Off auto-off The appliance operated approximately 60mins and turned into "OFF" when the timer is strtled to 60mins.	0.0 0.0	
20920, 20920-56, 20922-56 (LW-126C)	Crepe maker	Off	0.0	
N20630AMZ	Steam Iron	Off	0.3	
21396 (TA4001-CB, TA7700-CE, TA7701K-CE)	Toaster	Standby	0.3	
22340, 22340-56, 23470-56, 23471, 23471-56, 23470-56C, RHBL300, 23472-56, 23472, 23475-56	Blender	Off	0.0	
22601-56	Toaster	Off	0.1	
22610, 22610-56, 22620, 22620-56, 22611, 22611-56, 22613, 22613-56	Coffee maker	Off	0.0	
22760, 22760*****, 26010, 26010*****	Juice Extractor	Standby	0.4	
23820, 23820-56, 2382W-XY	Blender	Off	0.0	
23960, 23970, 20569, 2396WXYZ, 2397WXYZ, 2056WXYZ,	Blender	Off	0.1	
23986-56, RHC100, RHC100WXYZ	Steam Iron	Off	0.0	
	Steam Iron	Off auto-off The appliance operated approximately 0.5min (horizontal)/8mins (vertical) and turned into "OFF"	0.3 0.4	
24010, 27010-56, 27011-56, 26780, 2401WXYZ, 2701WXYZ,2678WXYZ	Coffee maker	Off	0.4	
24020, 2402WXYZ	Coffee maker		0.4	
24030, 24050, 24390, 2403WXYZ, 2405WXYZ, 2439WXYZ	Coffee maker		0.4	
24040, 2404WXYZ	Coffee maker		0.4	
RHT112, RHT112WXYZ, 24370, 2437WXYZ, RHT114, RHT114WXYZ, 24380, 2438WXYZ	Toaster	Off	0.0	
24411, 2441W-XY, RHT041, RHT041WXY, 26290, 2629W-XY	Toaster	Off	0.0	
24540, 2454WXYZ, 24530, 2453WXYZ, 24520, 2452WXYZ	Sandwich maker	\	\	No power switch
24630, 24630-56	Popcorn maker	Off	0.0	
24660, 24660-56, 24661, 24661-56, 2466WXYZ, RHMFP5, RHMFP5WXYZ	Chopper	Off	0.1	
24690, 24691,24700, 24701, 24702, 24703, 24710, 24690WXYZ, 24691WXYZ,24700WXYZ, 24701WXYZ, 24702WXYZ, 24703WXYZ, 24710WXYZ, RHSM5BLK, RHMS5WXYZ	Hand blender	Off	0.3	
25580, 25580-56, 25580WXYZ	Steam Iron	Off	0.0	
25630, 25630-56, 2563WXYZ,RHSM6000, RHSM6000WXYZ	Slow cooker	Off	0.2	
25900, 25910, 25900WXYZ, 25910WXYZ	Steam Iron	Off	0.3	
26390, 26390-56, 2639WXYZ, RHT722, RHT722WXYZ	Toaster	Off	0.0	
26470, 26470-56, 26480, 26480-56, 28440, 28440-56, 2647WXYZ, 2647WXYZ-56, 2648WXYZ, 2648WXYZ-56, 2844WXYZ, 2844WXYZ-56	Steam Iron	Off	0.0	
26461, 26461-56, RHC250, RHC200, 2646WXYZ, 2646WXYZ-56,	Steam Iron	Off auto-off The appliance operated approximately 0.5min (horizontal)/8mins (vertical) and turned into "OFF"	0.4 0.4	
26750,2675WXYZ, 26750-70, 2675WXYZ-70, RHK2675, RHK2675BLK, RHK2675WXYZ	Kettle	Off	0.0	
26760, 26770, RHT2676BLK, RHT2677BLK	Toaster	Off	0.0	
26800, 26800-56, 2680WXYZ	Sandwich maker	\	\	No power switch
26810, 26810-56, 2681WXYZ	Sandwich maker	\	\	No power switch
27020, 27030, 27040, 27020WXYZ, 27030WXYZ, 27040WXYZ	Rice cooker	Off	0.0	
27080-56, 2708WXYZ	Rice cooker	Off	0.0	
27110, 27110-56, 27111, 27111-56 2711WXYZ, RHFP2711, RHFP2711WXYZ	Food processor	Off	0.1	
27120, 27121, 2712WXYZ, RHBL2712, RHBL2712WXYZ	Blender	Off	0.1	
27130-56, 27131-56, RHMFP2713, 2713WXYZ, RHMFP2713WXYZ	Chopper	Off	0.2	
27140-56, 27141-56, RHSM2714, 2714WXYZ, RHSM2714WXYZ	Hand blender	Off	0.2	
27280-56, 27280WXYZ, 27281-56, 27281WXYZ,RHC2728, RHC2728WXYZ	Steam Iron	Off auto-off When the appliance montionless and upright position willrun into auto off mode after 8 mins	0.3 0.3	

27360, 27360-70, RHK2736, 2736WXYZ, 2736WXYZ-70, RHK2736WXYZ	Kettle	Off	0.0	
27370-56, 2737WXYZ, RHT2737, RHT2737WXYZ	Toaster	Off	0.0	
27450, 27450-70, 2745WXYZ, 2745WXYZ-70	Kettle	Off	0.4	
27550, 27560	Hand blender	Off	0.3	
27600, 27600-56, 27600WXYZ, RHC2760, RHC2760WXYZ	Handheld steamer	Off	0.3	
		Standby	0.4	
27610, 27620, 27630, RHAF2761, RHAF2762, RHAF2763, 2761WXYZ, 2762WXYZ, 2763WXYZ, RHAF2761WXYZ, RHAF2762WXYZ, RHAF2763WXYZ	Air fryer	Off	0.3	
27680, 27680-56, 27680WXYZ, RHAF2768, RHAF2768WXYZ	Air fryer	Off	0.4	
27740, 2774WXYZ, RHT82, RHT514, RHT82WXYZ, RHT514WXYZ	Toaster	Off	0.0	
27660, 27660-56, 2766WXYZ	Fabric Shaver	\	\	Battery operated, only charging with USB cable
20750, 20750-56, 2075WXYZ	Toaster	Off	0.0	
24080, 2408WXYZ	Toaster	Off	0.0	
24090, 24091, 24092, 24093, 24094, 2409WXYZ	Toaster	Off	0.0	
27390, 27390-56, 2739WXYZ	Toaster	Off	0.0	
28270 2827WXYZ RHMC30, RHMC30WXYZ	Rice cooker	Off	0.2	
RHMC20, RHMC20WXYZ	Multicooker	Off	0.0	
22780, 22780-56, 2278WXYZ	Oven	Off	0.0	
23380, 23380-56, 2338W-XY	Toaster	Off	0.0	
26550, 2655WXYZ, 26910, 2691WXYZ, RHT2655BLK, RHT2655WXYZ	Toaster	Off	0.0	
25141, 2514WXYZ, 23230, 2323WXYZ	Toaster	Off	0.0	
14048-56, 14048, 1404WXYZ	Egg boiler	Off	0.0	
15199, 15199-56, 1519WXYZ	Hotplate	Off	0.0	
18790, 1879WXYZ, 28361, 2836WXYZ	Toaster	Off	0.0	
21391-56, 21395-56, 21396-56, 23510-56, 23520-56, 23610-56	Toaster	Off	0.0	
24570, 2457WXYZ	Deep Fryer	Off	0.2	
24580, 2458WXYZ	Deep Fryer	Standby	0.3	
20680, 20680-56, 20690-56, 20681-56, 20682, 20682-56	Coffee maker	Standby	0.8	
22740-56, 22750-56, 23200	Slow cooker	Off	0.0	
21680, 2168WXYZ	Toaster	Off	0.0	
21690, 2619WXYZ, 27250, 2725WXYZ	Toaster	Off	0.2	
23310-57, 23310-56, 23340-56, 2331X, 2331X-56, 2334X-56, 2334X	Toaster	Off	0.0	
17888-56, 1788WXYZ	Griddle	\	\	no power switch
23980, 23990, 27090, 26261, 26261-56, 23980WXYZ, 23990WXYZ, 27090WXYZ, 26261WXYZ, 26261-56WXYZ	Steam Iron	Off	0.0	
23991-56, 23991-56WXYZ	Steam Iron	Off	0.3	
		auto-off	0.4	
		The appliance operated approximately 0.5min (horizontal)/8mins (vertical) and turned into "OFF"		
23300, 23300-56, 2330W-XY	Steam Iron	Off	0.4	
		auto-off	0.4	
		The appliance operated approximately 8mins (vertical) and turned into "OFF"		
22550-56, 2255WXYZ	Grill	Off	0.0	
21644, 2164WXYZ, 26061, 2606WXYZ, 21650, 2165WXYZ, 26070, 2607WXYZ	Toaster	Off	0.0	
28550, 28550-56, 2855WXYZ	Handheld Steamer	Off	0.5	
28040, 28040-56, 28040WXYZ, 28041, 28041-56, 28041WXYZ, 27410, 27410-56, 27410WXYZ	Handheld Steamer	Off	0.4	
		auto-off	0.4	
		The appliance operated approximately 15mins and turned into "OFF"		
27220, 27220-56, 27220WXYZ	Handheld Steamer	Off	0.4	
		auto-off	0.4	
		The appliance operated approximately 15mins and turned into "OFF"		
25591, 25591WXYZ, 25592, 25592WXYZ		Off	0.0	

	Handheld Steamer	auto-off The appliance operated approximately 15mins and turned into "OFF"	0.0	
24360, 2436SXYZ, 24360-70, 2436S-70XYZ, RHK112WHI, RHK112SYZ	Kettle	OFF	0.0	
24720WXYZ, 24710WXYZ, 24722WXYZ, RHBL5WXYZ	Table Blender	Off	0.1	
24310, 2431WXYZ, 23250, 2325WXYZ	Toaster	Off	0.0	
27500	Food Processor	Off	0.4	
26050, 26051, 26052, 26053, 26380, 26381, 26382, 26383, 26050-70, 26051-70, 26052-70, 26053-70, 26380-70, 26381-70, 26382-70, RHK700, RHK720	Kettle	Off	0.0	
25570-56, 2557WXYZ	Slow cooker	Off	0.0	
24180-56, 2418WXYZ	Slow cooker	Off	0.0	
19750, 1975WXYZ	Rice cooker	Off	0.0	
19790, 1979WXYZ	Slow cooker	Off	0.0	
26520, 26520-56, 2652WXYZ, RHMCAF40, RHMCAF40WXYZ	Multi Cooker	Off	0.3	
23220, 24290, 26150, 26970, RHT62, 2322W-XY, 2429W-XY, 2615W-XY, 2697W-XY, RHT62WXY	Toaster	Off	0.0	
22000-56, 2200WXYZ	Coffee maker	Standby	0.5	
		Auto-standby the appliance stop working and turned into "Standby"	0.5	
14451, 1445WXYZ	Handheld Mixer	Off	0.1	
23240, 24320, 25151, 25270, 26160, 26990, 23240-56, 24320-56, 25151-56, 25270-56, 26160-56, 26990-56, 2324WXYZ, 2432WXYZ, 2515WXYZ, 2527WXYZ, 2616WXYZ, 2699WXYZ	Coffee maker	Standby	0.4	
		Auto-standby the appliance stop working and turned into "Standby"	0.4	
22470-56, 22470, 22470WXYZ, 22470-56WXYZ	Travel Iron	Off	0.0	
24730, 24731, 24732, RHFP5, 24730WXYZ, 24731WXYZ, 24732WXYZ, RHFP5WXYZ	Food Processor	Off	0.1	
23910, 23912-70, 2391WXYZ, 2391W-70XYZ	Kettles	Off	0.0	
25070, 25070-70, 25070-IS	Kettles	Off	0.0	
27380, 27380-70, RHK2738BRU, 2738WXYZ, 2738WXYZ-70, RHK2738WXYZ	Kettles	Off	0.0	
23930, 23931, 23930-70, 23931-70, 23930WXYZ, 23931WXYZ, 23930-70WXYZ, 23931-70WXYZ	Kettles	Off	0.0	
24990, 24990-70, 24991-70, 24992-70, 24993-70, 24994-70, 24990WXYZ, 24990-70WXYZ, 24991-70WXYZ, 24992-70WXYZ, 24993-70WXYZ, 24994-70WXYZ	Kettles	Off	0.0	
28550, 28550-56, 2855WXYZ, RHC2855, RHC2855WXYZ	Handheld Steamer	Off	0.5	
28640, 28640-70, 2864WXYZ, 2864W-70XYZ	Water kettles	Off	0.0	
28650, 2865WXYZ	Toaster	Off	0.0	
27260, 27260-56	Bread Maker	Standby	0.7	
28490, 28490-56, 2849WXYZ	Chopper	Off	0.1	
28470, 28470-56, 2847WXYZ, RHSM2847, RHSM2847WXYZ	Hand blender	Off	0.2	
28690, 28690-56, 2869WXYZ	Sandwich maker	\	\	no power switch
25400, 25400-56, 2540WXYZ, RHC570, RHC570WXYZ	Steam Iron	Off auto-off The appliance operated approximately 30s (Horizontal) 8mi(Vertical) and turned into "OFF"	0.3 0.3	
25250, 2525WXYZ	Toaster	Off	0.0	
26300, 26300-70, 2630WXYZ, 2630WXYZ-70	Kettle	Off	0.0	
26420, 26421, 26422, 2642WXYZ, 26420-70, 26421-70, 26422-70, 2642WXYZ-70	Kettle	Off	0.0	
28130, 2813WXYZ, 28130-70, 2813WXYZ-70	Kettle	Off	0.0	
21850, 21850-56, 21851	Rice cooker	Off	0.5	
		standby	0.7	
25160, 25160WXYZ, 25161, 25161WXYZ, GFBL2SP, GFBL2WXYZ	Blender	Off	0.1	
23210	Kettle	Off	0.0	
23211	Kettle	Off	0.0	
23211-70	Kettle	Off	0.0	
23840-70	Kettle	Off	0.0	
24190-70	Kettle	Off	0.0	
24191-70	Kettle	Off	0.0	
21271	Kettle	Off	0.0	
23840	Kettle	Off	0.0	
24280	Kettle	Off	0.0	
23904	Kettle	Off	0.0	

23905	Kettle	Off	0.0	
20413	Kettle	Off	0.0	
22851	Kettle	Off	0.0	
25511	Kettle	Off	0.0	
25513	Kettle	Off	0.0	
21671	Kettle	Off	0.0	
25113	Kettle	Off	0.0	
21040	Kettle	standby	0.2	
26080	Kettle	Off	0.0	
21270	Kettle	Off	0.0	
21672	Kettle	Off	0.0	
20460	Kettle	Off	0.0	
25111	Kettle	Off	0.0	
21274	Kettle	Off	0.0	
22591	Kettle	Off	0.0	
26410-70	Kettle	Off	0.0	
26080-70	Kettle	Off	0.0	
25240-70	Kettle	Off	0.0	
23211-70IS	Kettle	Off	0.0	
26140	Kettle	Off	0.0	
26270	Kettle	Off	0.0	
26220-70	Kettle	Standby	0.3	
20441GCC	Kettle	Off	0.0	
22591-70AMZ	Kettle	Off	0.0	
27240	Kettle	Off	0.0	
26081	Kettle	Off	0.0	
26960-70IS	Kettle	Off	0.0	
25516	Kettle	Off	0.0	
25517	Kettle	Off	0.0	
20460AMZ	Kettle	Off	0.0	
23211-70S	Kettle	Off	0.0	
22851AMZ	Kettle	Off	0.0	
21272AMZ	Kettle	Off	0.0	
27730	Kettle	Standby	0.3	
24460, 24460-56, 2446WXYZ, 28620, 28620-56, 2862WXYZ	Steam Iron	Off	0.3	
28750, RHICM2875, 2875*****, RHICM2875*****	Ice-cream machine	Off	0.2	