

- 21 Rinse the filter under a running tap while brushing with a soft brush.
- 22 Turn the filter so that the side with the tabs is towards the kettle body.
- 23 Slide the filter down the inside of the spout till it stops.
- 24 From the outside, put a finger inside the spout, and push the top of the filter gently towards the body of the kettle, till the tabs on the top of the filter click into place.
- 25 Close the lid, and press down, to lock it.

### **Descale regularly, at least monthly.**

- 26 Descale the appliance at least monthly with a proprietary descaler.
  - 27 Follow the instructions on the package of descaler.
- ★ Products returned under guarantee with faults due to scale will incur a repair charge.



Russell Hobbs descaler, formulated specially for our products, is available from Customer Service (see opposite).



### **ENVIRONMENTAL PROTECTION**

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol mustn't be disposed of with unsorted municipal waste, but recovered, reused, or recycled.

### **➔ GUARANTEE**

Defects affecting product functionality appearing within two years of first retail purchase will be corrected by replacement or repair provided the product is used and maintained in accordance with the instructions.

552-640

Your statutory rights are not affected. Documentation, packaging, and product specifications may change without notice.

### **CUSTOMER SERVICE**

If you ring, have the Model No. to hand, as we won't be able to help without it. It's on the rating plate (usually underneath the product). The product isn't user-serviceable. If it isn't working, read the instructions, check the plug fuse and main fuse/circuit breaker. If it's still not working, consult your retailer.

If that doesn't solve the problem, ring Customer Service for advice.

If they tell you to return the product to us, pack it carefully, include a note with your name, address, day phone number, and what's wrong. If under guarantee, say where and when purchased, and include proof of purchase (till receipt). Send it to:

Customer Service, Spectrum Brands (UK) Ltd,  
Fir Street, Failsworth, Manchester M35 0HS  
email: support@russellhobbs.com  
telephone: 0845 658 9700 (local rate number)

### **ONLINE**

[www.russellhobbs.co.uk](http://www.russellhobbs.co.uk) for more products

### **REGISTER ONLINE FOR –**



£10,000 prize draw

EXTRA year guarantee

FREE rewards gallery

Visit [www.productregister.co.uk/rhobbs](http://www.productregister.co.uk/rhobbs)

You must register within 28 days of purchase.



# Russell Hobbs



instructions

**£10,000 prize draw**  
**EXTRA year guarantee**  
**FREE rewards gallery**  
[www.productregister.co.uk/rhobbs](http://www.productregister.co.uk/rhobbs)  
Register online now!  
See back for details



Read the instructions, keep them safe, pass them on if you pass the kettle on. Remove all packaging before use.

### **IMPORTANT SAFEGUARDS**

Follow basic safety precautions, including:

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance.

Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised.

Keep the appliance and cable out of reach of children under 8 years.

- Don't fill above max, or the kettle may spit boiling water.
- Use the kettle only with the stand supplied (and vice versa).
- If the cable is damaged, return the kettle, to avoid hazard.

**The surfaces of the appliance will get hot.**

Don't put the kettle, stand, cable, or plug in liquid.

- 1 Keep the kettle, stand, and cable away from the edges of worktops.
- 2 Unplug the stand when not in use.
- 3 Use the kettle only for heating water.
- 4 Don't use it if it's damaged or malfunctions.

### **household use only**

#### **BEFORE FIRST USE**

- Fill to **max**, boil, discard the water, and rinse.

#### **FILLING**

- 1 Squeeze the lid lock into the lid to open it.
- 2 Fill with at least 2 cups of water, but not above max.
- 3 If you overfill, it may spit boiling water.
- 4 Close the lid, and press down to lock it.

#### **SWITCHING ON**

- 5 Plug the stand into the wall socket.
- 6 Put the kettle on the stand.
- 7 Press the top of the switch (I) – the kettle will heat up.

#### **SWITCHING OFF**

- 8 When it boils, the kettle will switch off.
- 9 To switch off manually, press the bottom of the switch (O).

#### **GENERAL**

- 10 Pour slowly and don't over-tilt the kettle.
- 11 Don't tilt the kettle backwards, water might get on to the control area.
- 12 If this happens, sit the kettle somewhere warm for 12 hours to dry before using it.
- 13 Don't worry about moisture on the stand. The steam used to switch the kettle off is condensed and vented under the kettle.
- 14 Don't worry about discolouration on the floor of the kettle. It's due to the bonding of the element to the kettle floor.

#### **USING WITH INSUFFICIENT WATER**

- 15 This will shorten the life of the element. A boil-dry cut-out will switch the kettle off.
- 16 To avoid cycling on and off, take it off the stand, and leave it to go completely cold.

#### **CARE AND MAINTENANCE**

- 17 Unplug the stand, and let the kettle cool.
- 18 Wipe inside and outside with a damp cloth.
- 19 From inside the kettle, push the top of the filter out, towards the spout, to disengage the tabs on the top of the filter from the kettle body.
- 20 From outside the kettle, lift the filter out of the spout.