




Russell Hobbs



instructions

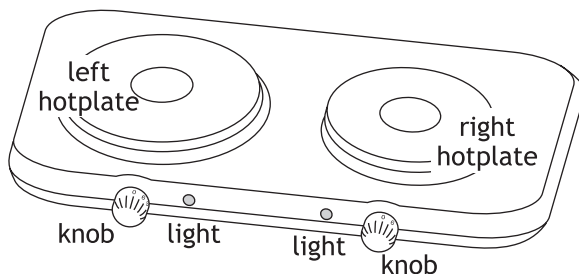


Read the instructions before use and keep them safe. If you pass the boiling ring on, pass on the instructions too.

Remove all packaging, but keep it till you're satisfied the boiling ring is working.

important safeguards

Follow basic safety precautions, including:

- 1 This appliance must only be used by or under the direct supervision of a responsible adult.
- 2 Don't put the cable, plug, or boiling ring in water or any other liquid. Don't use it in a bathroom, or near any source of water, and don't use it outdoors. 
- 3 Put the boiling ring on a stable, level, heat resistant work surface.
- 4 The work surface must be at least 75cm (30 inches) above floor level.
- 5 Leave a space of at least 5cm (2 inches) all round the boiling ring.
- 6 This appliance must not be operated by an external timer or remote control system.
- 7 Don't use the boiling ring near or under cupboards, curtains or combustible materials.
- 8 Keep it away from the edge of the work surface.
- 9 Route the cable so it doesn't overhang, and can't be tripped over or caught accidentally.
- 10 Don't leave the boiling ring unattended while it's plugged in.
- 11 Take care when cooking with oil or fat to guard against overheating.
- 12 The boiling ring will be very hot when in use. Don't touch any part of it.
- 13 Don't try to move the boiling ring till it's cold, and don't try to move it while there's anything on it.
- 14 Position pan handles so they can't be knocked or caught.
- 15 Choose pans with bases the same size as the hotplate on which they are to be used, otherwise overheating may occur.
- 16 Don't use oversized pans (e.g. catering pans) or any pan which covers both hotplates, as this will cause overheating and damage to the boiling ring.
- 17 After use switch the hotplates off and unplug the boiling ring. Let it cool down fully before cleaning or storing away.
- 18 Don't wrap the cable around the boiling ring.
- 19 Keep the cable away from hot surfaces.
- 20 Don't use the boiling ring if it's damaged or malfunctions. If the cable or plug is damaged, the boiling ring must be returned to avoid hazard.

household use only

before use for the first time

- 1 The hotplates must be cured, and their protective coatings burned off.
- 2 Ensure the room is well ventilated, as it can get a bit smelly.
- 3 Plug the boiling ring into the wall socket (switch the socket on if it's switchable).
- 4 Turn both knobs to 6 and leave them on for 5 minutes.
- 5 Turn both knobs to 0 (off), unplug, and leave the boiling ring till both hotplates are cold.
- 6 Wipe any residues off the surfaces of the boiling ring and hotplates (see "care and maintenance"). The boiling ring is now ready for use.

positioning

- 7 Put the boiling ring on a stable, level, heat resistant work surface, at least 75cm (30in) above floor level, and leave a space of at least 5cm (2in) all round.
- 8 Don't use the boiling ring near or under cupboards, curtains or combustible materials.
- 9 Keep it away from the edge of the work surface, and route the cable so it doesn't overhang and can't be tripped over or caught accidentally.

operation

- 10 Each hotplate is controlled by a knob and indicator light. The knobs are marked 0 (off) to 6 (maximum).
- 11 To switch a hotplate on, turn its knob clockwise from 0.
- 12 To switch a hotplate off, turn its knob anti-clockwise to 0.

lights

- 13 The lights are thermostatically controlled. Each light comes on when power is applied to the associated hotplate, goes off when the set temperature is reached, then cycles on and off as the thermostat operates to maintain the temperature.

pans

- 14 Use heavy-based, flat-bottomed pans, for good contact with the hotplates.
- 15 Sit the pans centrally on the hotplates.
- 16 Position the handles safely out of the way, where they can't be knocked.
- 17 Use pans with bases the same size as the hotplates, to avoid overheating.
- 18 Don't use oversized pans (e.g. catering pans) or pans which cover both hotplates, you'll overheat the boiling ring, and reduce its working life.

in use

- 19 Check that both controls are at 0.
- 20 Plug the boiling ring into the wall socket (switch the socket on, if appropriate).
- 21 Turn the knob(s) to the required setting(s).
- 22 Use the lower settings (1-2) for simmering, medium (3-4) for rolling boil and the higher settings (5-6) for boiling.
- 23 The hotplates will stay hot for quite a while after switching off. Use the residual heat to keep food warm, or to dry off potatoes or rice.
- 24 Switch the hotplate(s) off (0) and wait till they're cold before cleaning.

care and maintenance

Switch the hotplates off, unplug the boiling ring from the wall socket, and wait till the hotplates are cold before cleaning.


Mop up any spillage after each use, don't leave it to harden.

Wipe all surfaces with a damp cloth (and a little washing-up liquid if necessary).

Don't put the boiling ring in water or any other liquid.


Don't use harsh or abrasive cleaners or solvents.

connection

The product must be earthed. It has a 13A BS1362 fuse in a 13A BS1363 plug. To replace the plug, fit the green/yellow wire to  or E, the blue wire to N, and the brown wire to L. Fit the cord grip.

If in doubt, call an electrician.

Don't use a non-rewireable/moulded plug unless the fuse cover is in place. If you remove the plug, dispose of it.

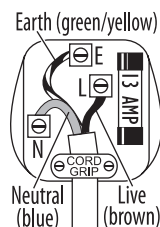

spare parts

Note the Model No (on the rating label) and the parts you need, ring 0845 658 9700 or email service@saltoneurope.com for prices, then purchase using VISA or MASTERCARD.

service

The product isn't user-serviceable. If it's not working, read the instructions, check the plug fuse and main fuse/circuit breaker. If it's still not working, consult your retailer. If that doesn't solve the problem:

Pack carefully, with a note of your name, address, day phone number, and what's wrong. If under guarantee, say where and when purchased, and include proof of purchase (till receipt). Send it to Customer Returns (address below right). They'll give you an estimate for inspection/repair.

Customer Service

(correspondence only)

Salton Europe Ltd

Failsworth

Manchester

M35 0HS

Customer Returns

Salton Europe Ltd

Heath Mill Road

Wombourne

Wolverhampton

WV5 8AQ

Customer Service (service@saltoneurope.com)

telephone 0845 658 9700 (local rate number)

guarantee

Defects affecting product functionality appearing within one year of purchase will be corrected by replacement or repair provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected.

Documentation, packaging, and product specifications may change without notice.