 
 




Russell Hobbs

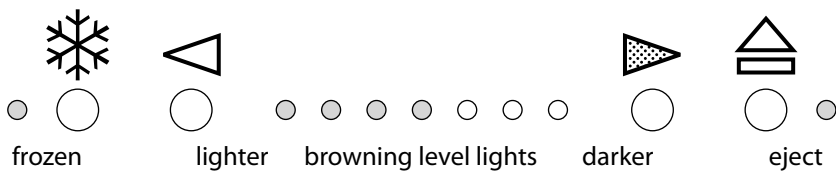

instructions

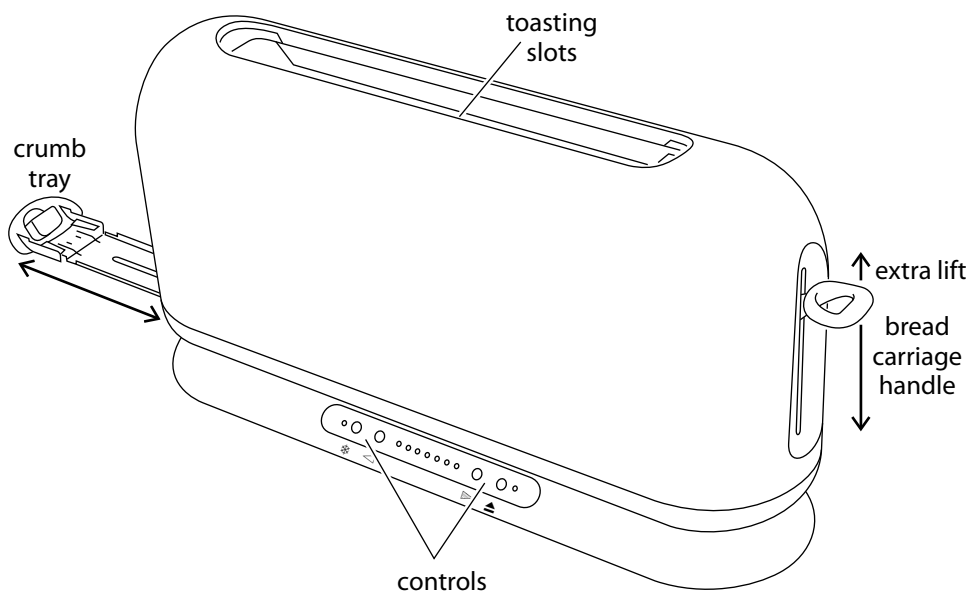

Read these instructions before use and keep them safe. If you pass the toaster on, pass on the instructions too.

Remove all packaging, but keep it till you are satisfied the toaster is working.


important safeguards

Follow basic safety precautions, including:



- 1 Don't put the toaster in any liquid, don't use it in a bathroom, near water or outdoors.
- 2 This toaster should be used only by or under the supervision of a responsible adult.
- 3 Sit the toaster on a stable, level, heat-resistant surface, close to a wall socket and out of reach of children.
- 4 Don't put it on or near anything that could be damaged even by moderate heat.
- 5 If overcooked, bread may burn. Don't use the toaster near or below curtains or other combustible materials and watch it while it's in use.
- 6 The area round the toasting slot will become hot during use. Don't touch these surfaces.
- 7 Route the cable so it doesn't overhang and can't be caught or tripped over accidentally.
- 8 The toaster must not be operated by an external timer or remote control system.
- 9 Don't let the toasting slot become covered during toasting, or while the toaster is still hot.
- 10 If bread gets jammed, unplug the toaster, let it cool down fully, then carefully remove the bread that's jamming it. Don't use anything sharp, such as a knife or fork, you may damage the elements.
- 11 Don't toast sandwiches or buttered items, the fillings may burn.
- 12 Don't use torn, curled up, or misshapen slices of bread, as these may jam the eject mechanism.
- 13 Unplug the toaster when not in use, before moving and before cleaning. Let it cool down fully before cleaning and storing away.
- 14 Clean the crumbs out of your toaster frequently. A build up of crumbs is unhygienic, and could cause a fire hazard.
- 15 Don't use the toaster unless the crumb tray is in place.
- 16 Keep the toaster and the cable away from sources of heat.
- 17 Don't use the toaster for any purpose other than those described in these instructions.
- 18 Don't use the toaster if it's damaged or malfunctions
- 19 If the cable is damaged, return the toaster, to avoid hazard.

household use only

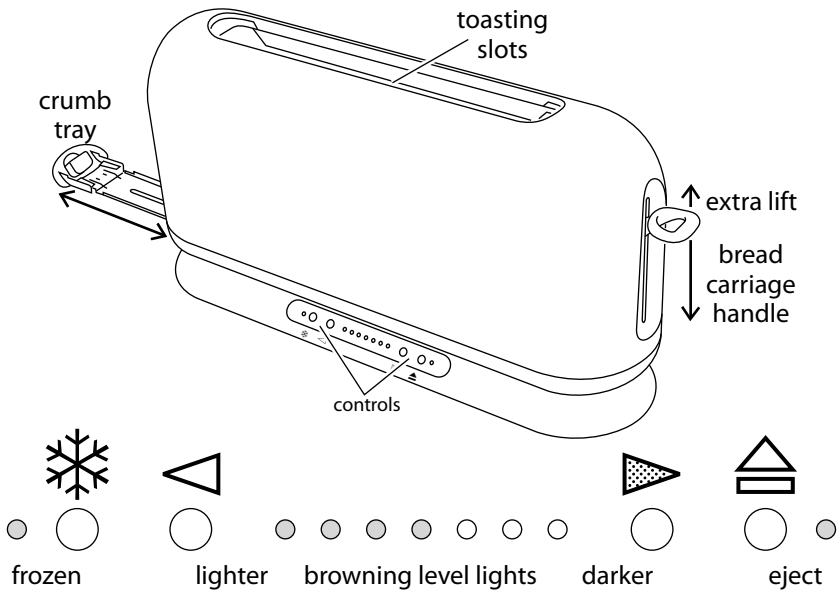

before using for the first time

Before using the toaster for the first time, you need to cure the elements. This'll remove their protective coating.

Set the browning level to maximum (all browning level lights on), and operate the toaster without bread, to cure the new elements.

This may smell a bit, but it's nothing to worry about. Just make sure the room is well ventilated.

When it's done, leave it to cool fully, then you can use it normally.

toasting bread

- 1 Sit the toaster upright on a stable, level, heat-resistant surface.
- 2 Don't put it on or near anything that could be damaged even by moderate heat.
- 3 Route the cable so it doesn't overhang, and can't be caught or tripped over accidentally.
- 4 If overcooked, bread may burn. Don't use the toaster near or below curtains or other combustible materials, and watch it while it's in use.
- 5 Put the plug into the wall socket. Switch the socket on, if it's switchable.
- 6 Use the buttons at either end of the browning level lights to lighten ◁ or darken ▷ the toast. The browning level lights will come on/go out to indicate the level chosen. The more lights showing, the darker the toast.
- 7 Put bread into the toasting slots (maximum thickness 25mm).
- 8 Press the bread carriage handle down fully – it'll only lock down if the toaster is connected to the electricity supply.
- 9 The elements will heat up.
- 10 When it's done, the toast will pop up, and the elements will turn off.
- 11 The area round the toasting slots gets hot – don't touch!

extra lift

After toasting small items (bagels, crumpets, etc.) the bread carriage handle may be raised further, to allow them to be removed more easily.

eject ▲

To stop the toaster before it's finished, press the ▲ button. The toast will pop up and the elements will turn off.

nb If you press the ▲ button, the browning level will return to the default setting of 4 browning level lights.

frozen button ❄

This feature takes the guesswork out of toasting frozen bread.

Set the browning level to your favoured setting, put the frozen bread into the toasting slot, lower the bread carriage handle, then press the ❄ button.

The light by the button will come on. The toasting time will be adjusted automatically to give the same browning level you get with unfrozen bread.

reheating toast

Use the lowest setting, and only reheat plain, unbuttered toast.

hints and tips

- 1 If you're toasting more than one slice of bread, make sure the slices are of similar size, thickness and freshness, otherwise they'll brown differently.
- 2 Old (yesterday's) bread contains less moisture than fresh bread, so makes crisper toast.
- 3 Old or thin bread cooks faster than fresh or thick bread, so you should use a lighter setting.
- 4 Sweet bread products (tea cakes, fruit loaf, etc.) brown much more quickly than ordinary bread, so should be toasted on a lighter setting.

crumbs

Clean the crumbs out of your toaster frequently. A build up of crumbs is unhygienic, and could cause a fire hazard.

Unplug the toaster and let it cool down. Remove and empty the crumb tray. Wipe it with a damp cloth, dry, then slide it back into place under the toaster.

Don't use the toaster unless the crumb tray is in place.

care and maintenance

Unplug the toaster when not in use, before moving and before cleaning. Let it cool down before cleaning and storing away.

Wipe the outside with a soft damp cloth. If necessary, use a little washing-up liquid.

Don't let anything enter the slots, you might damage the elements.


Don't put the toaster in water or any other liquid.

Don't use harsh or abrasive cleaning agents or solvents.

connection

The product must be earthed. It has a 13A BS1362 fuse in a 13A BS1363 plug. To replace the plug, fit the green/yellow wire to ⊕ or E, the blue wire to N, and the brown wire to L. Fit the cord grip. If in doubt, call an electrician.

Don't use a non-rewireable/moulded plug unless the fuse cover is in place. If you remove the plug, dispose of it.

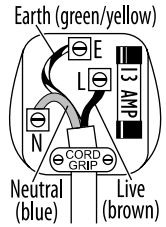

service

The product isn't user-serviceable. If it's not working, read the instructions, check the plug fuse and main fuse/circuit breaker. If it's still not working, consult your retailer. If that doesn't solve the problem:

Pack carefully, with a note of your name, address, day phone number, and what's wrong. If under guarantee, say where and when purchased, and include proof of purchase (till receipt). Send it to Customer Returns (address below right). They'll give you an estimate for inspection/repair.

Customer Service

(correspondence only)
Salton Europe Ltd
Failsworth
Manchester
M35 0HS UK

Customer Returns

Salton Europe Ltd
Heath Mill Road
Wombourne
Wolverhampton
WV5 8AQ

Customer Service (service@saltoneurope.com)
telephone 0845 658 9700 (local rate number)

guarantee

Defects affecting product functionality appearing within one year of purchase will be corrected by replacement or repair provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected. Documentation, packaging, and product specifications may change without notice.