





Russell Hobbs

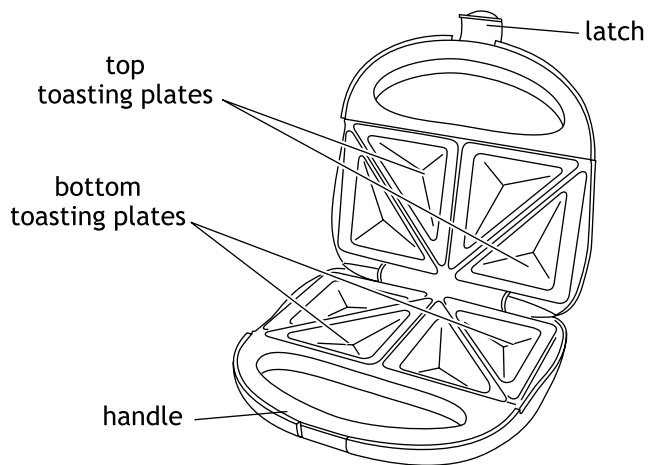

instructions

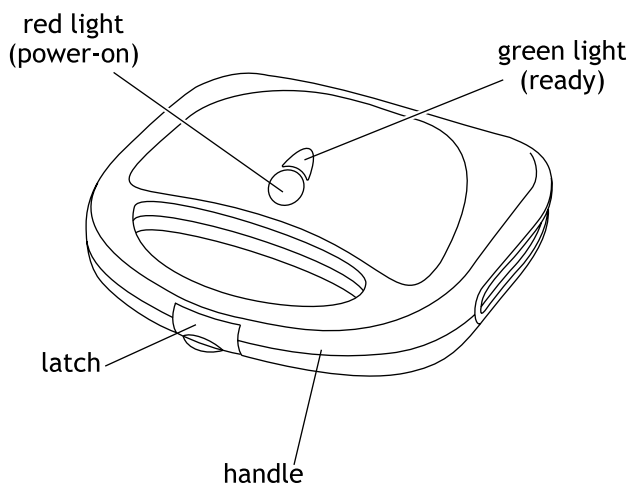

Read the instructions and keep them safe. Pass them on if you pass the sandwich toaster on. Remove all packaging, but keep it till you know the sandwich toaster works.

important safeguards

Follow basic safety precautions, including:

- 1 The sandwich toaster must only be used by or under the supervision of a responsible adult. Use and store it out of reach of children.
- 2 Don't use raw meat of any kind in the sandwich toaster. All fillings must be safe and fit to eat before they are used in the sandwich toaster.
- 3 Don't put the sandwich toaster in liquid, don't use it in a bathroom, near water, or outdoors.
- 4 Don't touch hot parts – use the handles.
- 5 Sit the sandwich toaster on a stable, level, heatproof (not just heat-resistant) surface.
- 6 Bread, oil, and other foods may burn. Don't use the sandwich toaster near or below curtains or other combustible materials, and watch it while in use.
- 7 Route the cable so it doesn't overhang, and can't be tripped over or caught.
- 8 Don't wrap food in plastic film, polythene bags, or metal foil. You'll damage the sandwich toaster, and you may cause a fire hazard.
- 9 Keep the sandwich toaster and the cable away from hotplates, hobs or burners.
- 10 Unplug the sandwich toaster when not in use, before moving and before cleaning.
- 11 Don't use the sandwich toaster for any purpose other than toasting sandwiches.
- 12 Don't fit attachments or accessories unless we supply them.
- 13 This appliance must not be operated by an external timer or remote control system.
- 14 Don't use the sandwich toaster if it's damaged or malfunctions.
- 15 If the cable is damaged, return the sandwich toaster, to avoid hazard.



household use only

before using for the first time

Wipe the non-stick surfaces of the toasting plates with a damp cloth.

preparation

- 1 Sit the sandwich toaster on a stable, level, heatproof (not just heat-resistant) surface.
- 2 Don't use the sandwich toaster near or below curtains or other combustible materials, and watch it while in use.
- 3 Route the cable so it doesn't overhang, and can't be tripped over or caught.
- 4 Put the plug into the power socket (switch the socket on, if it's switchable).
- 5 The power light (red) will come on, and will stay on as long as the sandwich toaster is connected to the electricity supply.
- 6 The ready light (green) will come on, then cycle on and off with the thermostat.
- 7 Wait till the ready light (green) goes out before cooking.

toasting sandwiches/making toasties

- 8 Use about a dessertspoon of filling per sandwich. Too much will ooze out.
 - 9 4 slices of bread makes 4 sandwiches – fresh medium-sliced bread is best.
 - 10 Cut the bread to overlap the plates by 0.5cm all round.
 - 11 Spread butter/margarine thinly on each slice.
 - 12 Don't use low fat spreads as they may burn and damage the non-stick surfaces.
- ★ Toasted sandwiches are made **buttered side out**.

13 Put a slice of bread, buttered side down, on each bottom cooking plate.

14 Press the bread gently into the cooking plates with a wooden spoon.

15 Fill the hollows formed in the bread with the filling.

caution Don't use raw meat of any kind in the sandwich toaster. All fillings must be safe and fit to eat before they are used in the sandwich toaster.

16 Put a slice of bread, buttered side up, on top of each of the filled slices.

17 Close the lid, squeeze the handles together, and press in the latch.

18 Cook for 2-4 minutes, or till the outside of the bread turns golden brown.

19 If the toasted sandwiches stick, use a plastic or wooden spatula to release them.

sandwich fillings

savoury fillings

ham and pineapple

cheese and onion/celery/apple

ham, cheese and tomato

mixed veg and grated cheese

cheese, apple and sultanas

leftover ratatouille/curry

cold roast beef and onion

sausage (cooked) and baked beans

pizza-type (cooked ham, cheese, tomato)

ham and mushroom

salami and tomato

cream cheese and broccoli

cheese, onion and mashed potato

smoked ham and gouda

mince (cooked) and onion

cold roast pork and apple sauce

chicken (cooked) and ham/mushroom

bacon (cooked), lettuce and tomato

sweet fillings

apple and sultanas/raspberries

banana and butterscotch sauce

mincemeat (sweet mince)

date, walnut and honey

banana and honey

cherry and almonds

apple and cinnamon

apple and blackcurrant

cherry pie filling

mandarin orange

fruits of the forest

peaches and custard (thick, not runny)

variations

Use pastry, pizza base, or Italian ciabatta instead of ordinary bread; try fruit loaf with a sweet filling; try garlic or herb butter.

your own fillings

Make a note of your own favourite fillings on the next three pages.

care and maintenance

19 Unplug the sandwich toaster and let it cool before cleaning and storing away.

20 Wipe the toasting plates, and the external surfaces with a damp cloth.

21 Use a paper towel with a dab of cooking oil to remove stubborn stains.

22 Don't put the sandwich toaster in water or any other liquid.

23 Don't use harsh or abrasive cleaning agents or solvents.

24 Don't use scourers, wire wool, or soap pads.

25 At the places where the top and bottom toasting plates make contact, the non-stick surfaces may show signs of wear. This is purely cosmetic, and will not affect the operation of the sandwich toaster.

notes

notes


notes

connection

The product must be earthed. It has a 13A BS1362 fuse in a 13A BS1363 plug. To replace the plug, fit the green/yellow wire to ⊕ or E, the blue wire to N, and the brown wire to L. Fit the cord grip. If in doubt, call an electrician. Don't use a non-rewireable plug unless the fuse cover is in place. If you remove the plug, dispose of it.

wheelie bin symbol

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol mustn't be disposed of with unsorted municipal waste, but recovered, reused, or recycled.

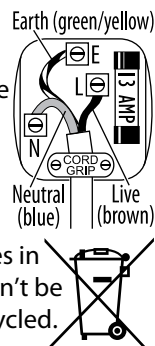

service

If you ring Customer Service, please have the **Model No.** to hand, as we won't be able to help you without it. It's on the rating plate (usually underneath the product).

The product isn't user-serviceable. If it's not working, read the instructions, check the plug fuse and main fuse/circuit breaker. If it's still not working, consult your retailer. If that doesn't solve the problem:

Pack carefully, with a note of your name, address, day phone number, and what's wrong. If under guarantee, say where and when purchased, and include proof of purchase (till receipt). Send it to Customer Returns (address below right).

Customer Service

(correspondence only)

Salton Europe Ltd
Failsworth
Manchester
M35 0HS

Customer Returns

Salton Europe Ltd
Heath Mill Road
Wombourne
Wolverhampton
WV5 8AQ

Customer Service (service@saltoneurope.com)
telephone 0845 658 9700 (local rate number)

guarantee

Defects affecting product functionality appearing within one year of purchase will be corrected by replacement or repair provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected.

Documentation, packaging, and product specifications may change without notice.

online

www.russellhobbs.co.uk for more products