


Read the instructions. Keep them safe. Pass them on if you pass the cookware on.

### **before using for the first time**

- Remove all packaging and labels.
- Wash, rinse, and dry the cookware.

### **removable handle**

- Set the pan down on a stable surface.
- Unscrew the lock to loosen the lug (4 turns).
- Move the handle down, away from the pan.
- To replace the handle, fit the lug into the recess under the pan, and screw the lock tight.

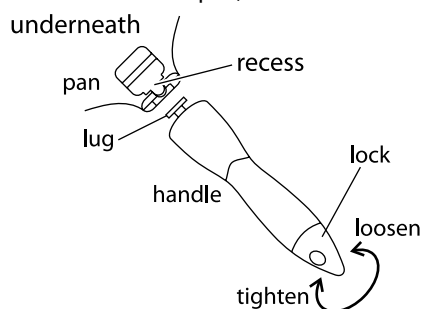

- Cook on the hob, remove the handle, put the pan in the oven (use oven gloves), and finish cooking in the oven, without having to move the food into another dish.

### **oven safe**

- The pan is oven safe to 230°C/450°F.
- Remove the handle before closing the oven.
- Baked-on spillages won't affect functionality.

### **mind your fingers**

- Touch the handle, not the pan.
- Use oven gloves.

### **do's and don'ts**

- The pan must only be used by or under the supervision of a responsible adult.
- Wipe with cooking oil before use.
- Use wooden or plastic utensils, to avoid damaging the non-stick surfaces.
- Don't let flames lick up the sides of the pan.
- Don't use the pans in a microwave oven, or on a camp fire.
- Don't let the handle stick out where it might be caught accidentally.
- Don't position the handle above a hotplate.
- Don't use the pan for deep frying. When frying, don't fill more than a quarter full with oil – that's before the ingredients are added.
- The pan is suitable for household use only.

### **efficient cooking**

- The pan base should be the same diameter as, or slightly larger than the hotplate.
- Set the pan centrally on the hotplate.
- Cook on the lowest heat possible.
- Don't preheat for over 2 minutes.

### **induction hob**

- Due to the high heat-up speed, don't preheat on an induction hob (active diameter 18cm).

### **care and maintenance**

- Hand wash the cookware in soapy water.
- The pan is dishwasher safe, the handle is not.
- Don't use pads, scourers or abrasive cleaners.
- Don't use fabric detergent or washing soda.
- Over time, spots, stains and scratches may appear, but they won't affect functionality.

### **guarantee**

- Defects affecting product functionality appearing within one year of purchase will be corrected by replacement or repair provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected.
- Documentation, packaging, and product specifications may change without notice.

### **service**

The product isn't user-serviceable. If it's not working, read the instructions. If it's still not working, consult your retailer. If that doesn't solve the problem:

Pack carefully, with a note of your name, address, day phone number, and what's wrong. If under guarantee, say where and when purchased, and include proof of purchase (till receipt). Send it to Customer Returns (address below right).

#### **Customer Service**

(correspondence only)  
Salton Europe Ltd  
Failsworth  
Manchester  
M35 0HS  
Customer Service (service@saltoneurope.com)  
telephone 0845 658 9700 (local rate number)

#### **Customer Returns**

Salton Europe Ltd  
Heath Mill Road  
Wombourne  
Wolverhampton  
WV5 8AQ

### **online**

[www.russellhobbs.co.uk](http://www.russellhobbs.co.uk) for more products.