




Russell Hobbs



instructions

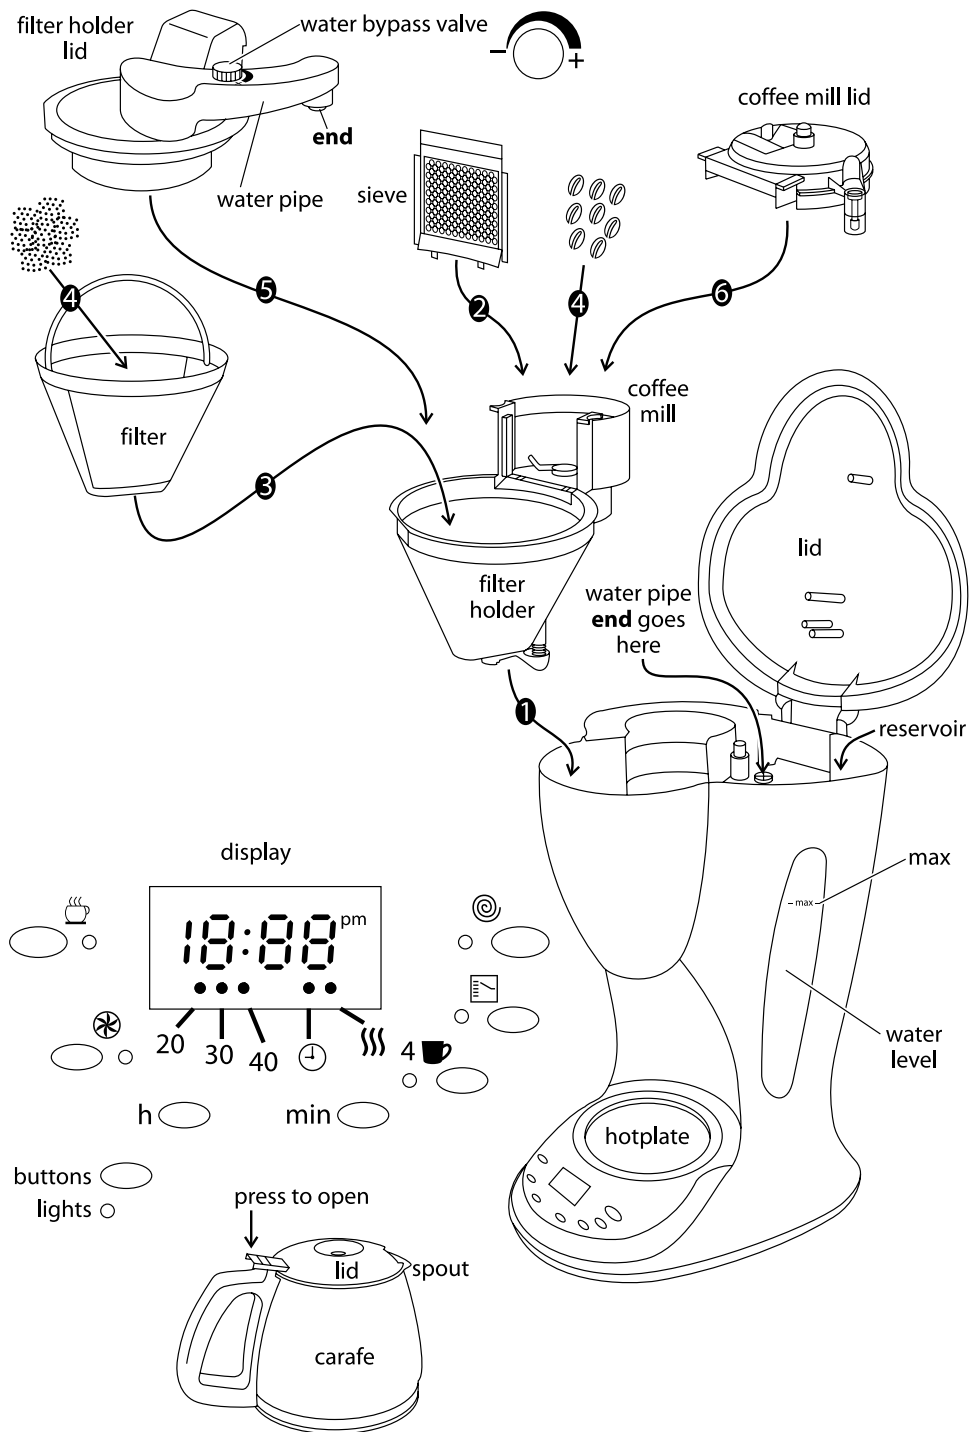

Read the instructions and keep them safe. Pass them on if you pass the coffee maker on. Remove all packaging, but keep it till you know the coffee maker works.

important safeguards

Follow basic safety precautions, including:

- 1 This coffee maker must only be used by or under the supervision of a responsible adult. Use and store it out of reach of children.
- 2 Don't put the coffee maker in liquid, don't use it in a bathroom, near water, or outdoors.
- 3 Don't touch hot surfaces (e.g. carafe, hotplate).
- 4 The scald hazard lasts long after boiling. Keep the coffee maker and cable away from the edges of worktops and out of reach of children.
- 5 Sit the coffee maker on a stable, level, heat-resistant surface.
- 6 Route the cable so it doesn't overhang, and can't be tripped over or caught.
- 7 Unplug the coffee maker when not in use, before moving and before cleaning.
- 8 Fill with at least 2 cups of water, but don't fill above max.
- 9 There's a hole in the rear wall of the reservoir, to prevent overfilling.
- 10 Put the carafe on the hotplate before switching the coffee maker on.
- 11 Let the coffee maker cool for about 10 minutes before adding water or re-using, to avoid spitting.
- 12 Don't put the carafe in a microwave oven.
- 13 Don't try to adjust the metal band round the carafe, you'll break the glass.
- 14 Keep the coffee maker and the cable away from hotplates, hobs or burners.
- 15 Don't use accessories or attachments other than those we supply.
- 16 Don't use the coffee maker for any purpose other than those described in these instructions.
- 17 Don't connect the coffee maker to an external timer or remote control system.
- 18 Don't use the coffee maker if it's damaged or malfunctions.
- 19 If the cable is damaged, return the coffee maker, to avoid hazard.



household use only

before using for the first time

- 1 Fill the reservoir to max, and run the coffee maker without coffee.
- 2 Let it cool, discard the water, then use it normally.

coffee beans

- 3 If you use whole roasted coffee beans, we suggest you use one level tablespoon of beans per cup.

ground coffee

- 4 If you use ready-ground coffee, medium-ground filter coffee will give you the best results. The amount will vary with the type of coffee and your individual taste. We suggest starting with two rounded teaspoons of medium-ground coffee per cup.

storing coffee

- 5 Coffee is best kept in an airtight container in a cool dry place, or in the fridge. Exposure to air oxidises coffee and allows the flavour to evaporate.

milk

- 6 There's a great deal of contention on the subject of milk in coffee. Our view is that personal taste should rule, not convention. If you like milk in your coffee, use warm or hot milk, to avoid overcooling the coffee. To extract maximum flavour from the coffee, it should be cool enough not to scald or burn the mouth, but hot enough to let the flavour fill the mouth, nose and sinuses, not just the taste buds.

bottled water

- 7 If you use bottled water, check that there are no added ingredients, flavourings, etc., and use “still” water, not “sparkling”. The carbon dioxide which gives the “sparkle” will adversely affect the flavour of your coffee.

taste

- 8 Don't be tempted to reheat coffee in the coffee maker. You'll damage the coffee maker and the coffee will be undrinkable.
- 9 Clean the filter holder, filter, and carafe after each use. Residue from a previous brew will spoil your coffee.

preparation

- 10 Sit the coffee maker on a stable, level, heat-resistant surface.
- 11 Route the cable so it doesn't overhang, and can't be tripped over or caught.
- 12 Don't plug it in yet.

filling – water

- 13 Remove the carafe from the hotplate – do this before you open the coffee maker lid.
- 14 Press and release the front of the coffee maker lid, to unlock it, then lift it up, to expose the reservoir.
- 15 Press the lever at the rear of the carafe lid, above the handle, to open it.
- 16 Use the carafe to fill the reservoir, to avoid overfilling.
- 17 Fill the reservoir with at least 2 cups of water, but not above max.
- 18 There's a hole in the rear wall of the reservoir, to prevent overfilling.

filling – ground coffee

- ★ If you're using whole beans, jump to point 23.
- 19 Lift the filter holder lid out of the coffee maker, and put filter-ground coffee into the filter.
 - 20 The amount will vary with the type of coffee and individual taste, but we suggest two rounded teaspoons per cup.
 - 21 Replace the filter holder lid, and check that the end of the water pipe fits into the pipe on top of the coffee maker
 - 22 Jump to point 27.

filling – coffee beans

- 23 Lift the lid off the coffee mill, and put fresh roasted coffee beans into the mill.
- 24 The amount will vary with the type of coffee and individual taste, but we suggest one level tablespoon per cup.
- 25 Replace the lid on the coffee mill.
- 26 The mill will grind the beans when brewing is activated.

water bypass valve

- 27 This adjusts the amount of water bypassing the filter, to control over-extraction of unwanted flavours from the coffee in the filter.
- 28 Turn it towards + to increase, or towards – to reduce the amount of water bypassing the filter.

close the lid

- 29 Close the lid of the coffee maker, and press down the front to lock it closed.
- 30 Close the carafe lid.
- 31 Sit the carafe on the hotplate, with the spout pointing into the coffee maker.
- 32 You'll feel resistance as the carafe lid raises the non-drip valve on the bottom of the filter holder,
- 33 Don't put the carafe on the hotplate unless the coffee maker lid is closed – you may push the non-drip valve (and the filter holder) up and out of place.

switch on

34 Put the plug into the power socket – the display will light up, and the ☉ light will glow.

set the grind time

35 If you're using beans, press the ☉ button to select the grind time (20, 30, or 40 seconds).

20 seconds press once – the ☉ light goes out, and a dot shows on the display above 20s

30 seconds press again – the dot on the display moves to above 30s

40 seconds press again – the dot on the display moves to above 40s

no grind press again – the dot on the display disappears, and the ☉ light glows

36 You may also use the ☉ button to stop the grinding process.

coffee now

37 Ignore the clock.

38 Press the ☞ button.

39 The ☉ light will glow

40 If you're using coffee beans, the mill will operate.

41 Coffee will start to drip into the carafe.

42 When it's done, the ☉ light will go out and the coffee maker will beep

coffee later

43 Set the clock to the correct time (the default is 12:00 pm):

a) press and release the **h** button till the correct hour is shown

b) press and release the **min** button till the correct minute is shown

c) pm will show in the display when the time displayed passes noon

d) The clock will retain its settings till the coffee maker is unplugged. It will reset to 12:00 pm next time you plug it in.

44 Set the timer to the time you want to start brewing.

a) press and release the ☞ button till a dot shows on the display above ⌚

b) press and release the **h** button till the correct hour is shown

c) press and release the **min** button till the correct minute is shown

d) press and release the ☞ button to activate the timer – the ☞ light will glow

e) If you don't press all the buttons within 10 seconds, the coffee maker will revert to "normal", and the time will show.

leave it alone

45 That's it – leave it alone till the preset time comes round, and it makes your coffee – don't fiddle with it, you might upset it.

46 When the preset time comes round:

a) the ☞ light will go out

b) the ☞ light will glow

c) if you're using coffee beans, the mill will operate

d) coffee will start to drip into the carafe

e) when it's done, the ☉ light will go out and the coffee maker will beep

cancel?

f) to cancel the timer, press and release the ☞ button till the dot shows above ⌚

g) press and release the ☞ button to deactivate the timer

h) the ☞ light will go out, to show that the timer function has been cancelled

47 The timer will retain its settings till the coffee maker is unplugged, although the timer function won't be activated.

48 To reactivate the timer with the same preset time, go to point 53, but miss out parts b) and c).

49 If you want to cancel the timer before brewing has started, press and release the ☞ button.

switching off

50 The hotplate will keep the carafe warm for up to 3 hours 59 minutes.

51 After this “keep warm” period, the coffee maker will switch itself off.

52 If left for much more than an hour, chemical changes in the coffee liquor start to affect the flavour. It’s best to pour it away and make a fresh pot.

53 To interrupt the brewing process, or terminate the “keep warm” period manually, press and release the ☞ button.

54 The ☞ light will go out.

55 Let the coffee maker and carafe cool down fully before cleaning, or for about 10 minutes before refilling.

caution Raising the lid before the coffee maker has cooled down may release steam, creating a scald hazard.

a quick cup

56 If you want a quick cup of coffee before the brewing cycle has finished:

57 You can remove the carafe at any time. The non-drip valve will prevent coffee dripping on to the hotplate.

58 To prevent the filter holder overflowing, replace the carafe on the hotplate within about 20 seconds. This may not sound much, but you’ll find it’s more than enough time to pour a couple of cups of coffee.

59 When you replace the carafe on the hotplate, the non-drip valve opens, to let any remaining coffee through.

1-4 function

60 If you’ve filled the reservoir, but you only want 4 cups, press and release the 1-4 button before starting to brew.

61 The coffee maker will brew only 4 cups, then stop, and the “keep warm” function won’t be activated.

“keep warm” time

62 The default “keep warm” time is 2 hours. You may change this to a maximum of 3 hours and 59 minutes. It’s quite complex, so we suggest you leave it at the default time.

63 Put 2 cups of water into the reservoir.

64 Put the carafe on the hotplate, as water will run through the coffee maker while you’re setting the keep warm time.

65 Set the time (point 43 on page 5), otherwise the display will flash while you’re working.

66 If the ☉ light is out, press and release the ☉ button till the ☉ light glows.

- press and release the ☞ button till a dot shows on the display above ☹☹☹
- press and release the ☞ button again – the display will revert to normal time
- press and release the ☞ button – the ☞ light will glow, and water will start to come through the coffee maker
- press and release the ☞ button 3 times, till a dot shows on the display above ☹☹☹
- press and release the **h** button till the correct number of hours is shown – the hours display changes in the sequence 2 - 1 - 0 - 3 - 2 (it counts down from 3)
- press and release the **min** button till the correct number of minutes is shown – the minutes display changes from 00 to 59, then counts down
- press and release the ☞ button, to return to the “normal” display
- press and release the ☞ button – the ☞ light will go out, and water will gradually stop coming through the coffee maker
- let the coffee maker cool down for 10 minutes, then use it normally
- the coffee maker will retain the “keep warm” time you set, as long as you don’t unplug it

descale now! ☼

- 67 If the heating tube becomes blocked, the ☼ light will glow.
- 68 Don't use the coffee maker again till it's been descaled.
- 69 Fill the reservoir with descaling solution.
- 70 Close the lid, and put the carafe on the hotplate.
- 71 Press and release the ☼ button.
- 72 The ☼ light will go out, the ☼ light will glow, and the coffee maker will clean itself.
- 73 After descaling, run the coffee maker through two complete cycles with clean, fresh water, to remove any residual detergent.
- 74 Don't wait till the ☼ light glows before descaling – descale regularly to keep your coffee maker in good working condition.


care and maintenance

- 1 Unplug the coffee maker and let it cool down before cleaning or storing away.
- 2 Tip the contents of the filter into the bin – don't flush coffee grounds down the sink. They'll build up and cause a blockage.
- 3 You may clean the removable parts (including the carafe) in warm soapy water, then rinse thoroughly.
- 4 Alternatively, you may wash them in the top tray of a dishwasher (but only in the top tray).
- 5 Clean the surfaces of the coffee maker with a damp cloth.
- 6 Don't put the coffee maker in water or any other liquid.
- 7 Don't use harsh or abrasive cleaning agents or solvents.

descaling

- 8 Scale build-up will cause the element to overheat, reducing its working life. It will also lengthen the brewing time.
 - 9 Descale regularly. If you notice the brewing time getting longer, shorten the time between descalings. In areas of very hard water it may be necessary to descale as often as once a month, or to use filtered water instead of ordinary tap water.
 - 10 Use a proprietary brand of descaler suitable for use in plastic-bodied products. Follow the instructions on the package of descaler. When descaling has finished, empty the carafe and operate the coffee maker twice more with fresh water, but without coffee. Discard the water to ensure that no chemical residues are left in the coffee maker.
- ★ Products returned under guarantee with faults due to scale will be subject to a repair charge.

connection

The product must be earthed. It has a 13A BS1362 fuse in a 13A BS1363 plug. To replace the plug, fit the green/yellow wire to  or E, the blue wire to N, and the brown wire to L. Fit the cord grip. If in doubt, call an electrician. Don't use a non-rewireable plug unless the fuse cover is in place. If you remove the plug, dispose of it.

wheelie bin symbol

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol mustn't be disposed of with unsorted municipal waste, but recovered, reused, or recycled.

service

If you ring Customer Service, please have the **Model No.** to hand, as we won't be able to help you without it. It's on the rating plate (usually underneath the product).

The product isn't user-serviceable. If it's not working, read the instructions, check the plug fuse and main fuse/circuit breaker. If it's still not working, consult your retailer.

If that doesn't solve the problem – ring Customer Service – they may be able to offer technical advice.

If they advise you to return the product to us, pack it carefully, include a note with your name, address, day phone number, and what's wrong. If under guarantee, say where and when purchased, and include proof of purchase (till receipt). Send it to Customer Returns (address below right).

Customer Service

(correspondence only)
Salton Europe Ltd
Failsworth
Manchester
M35 0HS

Customer Returns

Salton Europe Ltd
Heath Mill Road
Wombourne
Wolverhampton
WV5 8AQ

Customer Service (service@saltoneurope.com)
telephone 0845 658 9700 (local rate number)

guarantee

Defects affecting product functionality appearing within one year of purchase will be corrected by replacement or repair provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected. Documentation, packaging, and product specifications may change without notice.

online

www.russellhobbs.co.uk for more products

