



# Russell Hobbs

dual voltage  
travel iron




Read the instructions and keep them safe. Pass them on if you pass the iron on. Remove all packaging, but keep it till you're satisfied the iron is working.

## important safeguards

- This iron must only be used by a responsible adult.
- Use and store the iron out of reach of children.
- Don't put the iron in water, don't use in a bathroom, near water, or outdoors.
- Don't iron clothing while it's being worn, and don't touch hot parts.
- Don't leave the iron unattended while plugged in.
- Set the voltage selector to the local voltage (120V or 230V). Using the wrong setting will probably damage the iron beyond repair.
- Don't use the iron if it's dropped or damaged, or if it malfunctions or leaks.
- If the cable is damaged, return the iron, to avoid hazard.
- Use the iron only for the purposes described in these instructions.
- This iron is designed for occasional use, not regular everyday use.



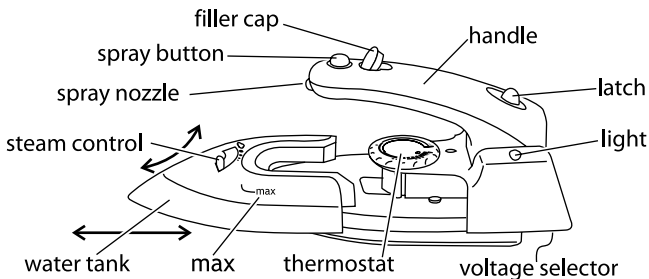

## preparation

- Route the cable so it can't be caught or tripped over.
- Lift the handle till it clicks into place.
- Sort fabrics by textile care symbols.



cool – nylon, acrylics, polyester



warm – wool, polyester mixtures



hot – cotton, linen



do not iron

- If the garment label directions differ from these, follow the label.
- Lift the filler cap, fill the handle from the jug, and replace the cap.
- Use the jug to fill the tank via the steam control. Don't fill past max, or water will escape.

## ironing

- Turn the thermostat to the required setting.
- Slide the steam control towards ☞ for more steam, away for less.
- Sit the iron upright on a stable, level heat-resistant surface, and plug it in – the light will glow.
- When the light goes out, start ironing – use an ironing board, or a folded sheet or towel on a flat, heat-resistant surface.
- Iron fabrics needing low heat first, then work up to those needing most heat.

**steam iron** set the thermostat to ●●●, or water may drip on the fabric.

**dry iron** if the fabric mustn't be wetted, empty the water tank before ironing.

## spray button

Use it when dry or steam ironing, provided there's water in the tank.

- Some fabrics may be subject to water spotting, e.g. satins, silks, taffetas or fabrics with a lustre finish. If in doubt, test on a hidden part of the fabric.
- You may have to press the button two or three times to prime it.


## after use


- Unplug the iron and let it cool upright, then clean and store away.
- Slide the tank off, turn it upside down, and empty via the steam control.
- Lift the filler cap, empty the handle, then replace the filler cap.
- Press the handle latch and lower the handle for storage.

## cleaning

Unplug the iron, let it cool, then wipe with a damp cloth. Don't put it in liquid, and don't use harsh or abrasive cleaners or solvents.

## connection

The product must be earthed. Use a 13A BS1362 fuse in a 13A BS1363 plug. Fit the green/yellow wire to  or E, the blue to N, the brown to L. Fit the cord grip. If in doubt, call an electrician. Don't use a non-rewireable plug unless the fuse cover is fitted. If you remove the plug, dispose of it.

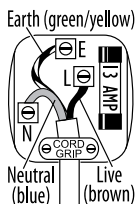

## wheelie bin symbol

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol mustn't be disposed of with unsorted municipal waste, but recovered, reused, or recycled.



## service

If you ring Customer Service, please have the **Model No.** to hand, as we won't be able to help you without it. It's on the rating plate (usually underneath the product).

The product isn't user-serviceable. If it's not working, read the instructions, check the plug fuse and main fuse/circuit breaker. If it's still not working, consult your retailer.

If that doesn't solve the problem – ring Customer Service – they may be able to offer technical advice.

If they advise you to return the product to us, pack it carefully, include a note with your name, address, day phone number, and what's wrong. If under guarantee, say where and when purchased, and include proof of purchase (till receipt). Send it to Customer Returns (address below right).

### **Customer Service**

(correspondence only)

Salton Europe Ltd

Failsworth

Manchester

M35 0HS

### **Customer Returns**

Salton Europe Ltd

Heath Mill Road

Wombourne

Wolverhampton

WV5 8AQ

Customer Service ([service@saltoneurope.com](mailto:service@saltoneurope.com))

telephone 0845 658 9700 (local rate number)

## guarantee

Defects affecting product functionality appearing within one year of purchase will be corrected by replacement or repair provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected. Documentation, packaging, and product specifications may change without notice.

## online

[www.russellhobbs.co.uk](http://www.russellhobbs.co.uk) for more products