 
 
 
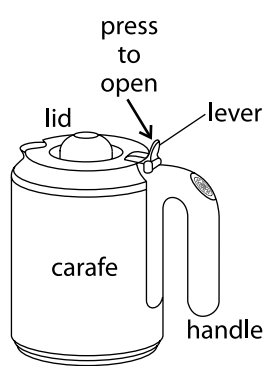 


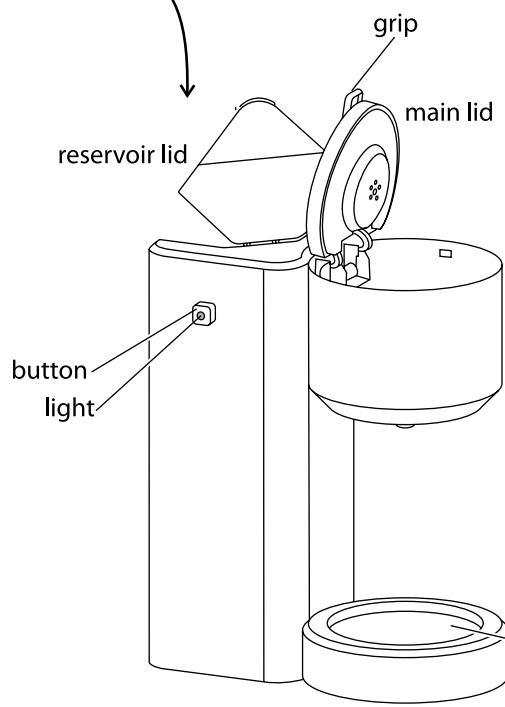

# Russell Hobbs

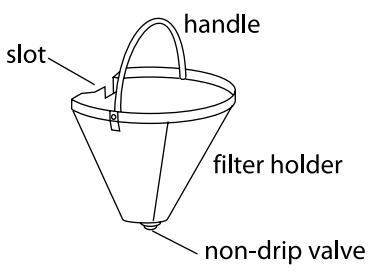

instructions

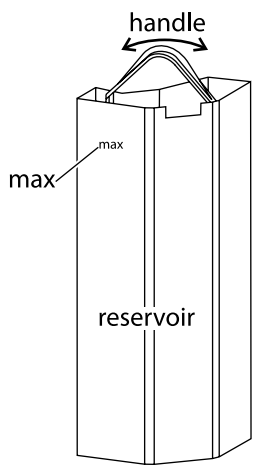

Read the instructions, keep them safe, pass them on if you pass the coffee maker on. Remove all packaging, but keep it till you know the coffee maker works.

## **important safeguards**

Follow basic safety precautions, including:

- 1 The coffee maker must only be used by or under the supervision of a responsible adult. Use and store it out of reach of children.
- 2 Don't put the coffee maker in liquid, don't use it in a bathroom, near a source of water, or outdoors.
- 3 Sit the coffee maker on a stable, level, heat-resistant surface.
- 4 The scald hazard lasts long after boiling. Keep the coffee maker and cable away from the edges of worktops, and out of reach of children.
- 5 Steam will collect under the lid. To avoid the risk of scalding, don't open the lid till the coffee maker has cooled.
- 6 Check that the lid is properly closed before using the coffee maker.
- 7 Take care when pouring – don't over-tilt the carafe.
- 8 Don't connect the coffee maker to an external timer or remote control system.
- 9 Don't touch hot surfaces e.g. carafe or hotplate. Use the handle and grip.
- 10 Route the cable so it doesn't overhang and can't be caught or tripped over.
- 11 Unplug the coffee maker when not in use, before moving or cleaning. Let it cool down before cleaning and storing away.
- 12 Fill with at least 2 cups of water, but don't fill the reservoir above the **max** mark.
- 13 Put the carafe on the hotplate before brewing.
- 14 To stop the coffee maker, press the button. The light will go out.
- 15 Don't use the coffee maker for any purpose other than those described in these instructions.
- 16 Don't put the carafe in a microwave oven.
- 17 Keep the coffee maker and cable away from hotplates, hobs, and burners.
- 18 Don't use accessories unless we provide them.
- 19 Don't use the coffee maker if it's damaged or malfunctions.
- 20 If the cable or plug is damaged, return the coffee maker, to avoid hazard.



## **household use only**

### **before using for the first time**

Fill the reservoir to the **max** mark with water, and run the coffee maker without coffee. When it's finished, discard the hot water and clean the coffee maker.

### **positioning**

- 1 Sit the coffee maker on a stable, level, heat-resistant surface.
- 2 Route the cable so it doesn't overhang, and can't be tripped over or caught.
- 3 Don't plug it in yet.

### **water fill**

- 4 Open the reservoir lid, to expose the reservoir.
- 5 Fill the reservoir with at least 2 cups of water, but not above the **max** mark.
- 6 Alternatively, you may lift the reservoir off the appliance, fill it in the kitchen, and carry it back to the appliance
- 7 Close the reservoir lid.

## **coffee fill**

- 8 Use the grip to open the main lid, to expose the filter holder and filter.
- 9 Put filter-ground coffee into the filter. The amount will vary with the type of coffee, and individual taste, but we suggest starting with two rounded teaspoons per cup of water.
- 10 Use the grip to close the main lid.

## **power up**

- 11 Put the carafe on the hotplate.
- 12 Plug the coffee maker into the power socket (switch the socket on, if it's switchable).
- 13 Press and release the button.
  - a) the light will glow.
  - b) after a few seconds, coffee will drip into the carafe

## **a quick cup**

- 14 You may remove the carafe to pour coffee at any time. The non-drip valve will stop coffee dripping on to the hotplate.
- 15 To avoid overflowing, replace the carafe within 20 seconds. This may not sound much, but its more than enough time to pour a couple of cups.

## **stopping**

- 16 If you need to stop the coffee maker, press and release the button.

## **pouring**

- 17 To pour, remove the carafe from the hotplate, and pour from the spout.
- 18 Replace the carafe on the hotplate to keep your coffee warm.
- 19 You may notice some resistance when you replace the carafe – this is caused by the top of the carafe pushing against the non-drip valve.
- 20 When it's done, the hotplate will keep the carafe warm.
- ★ If left for much more than an hour, chemical changes in the coffee liquor start to affect the flavour. It's best to pour it away and make a fresh pot.

## **finished?**

- 21 Press and release the button to switch the coffee maker off – the light will go out.
- 22 Unplug the coffee maker and let it cool down fully before cleaning, or for 10 minutes before refilling.

**caution** Raising the lid before the coffee maker has cooled down may release steam, creating a scald hazard.

## **milk**

- 23 There's a great deal of contention on the subject of milk in coffee. Our view is that personal taste should rule, not convention.
- 24 If you like milk in your coffee, use warm or hot milk, to avoid overcooling the coffee.
- 25 To extract maximum flavour from the coffee, it should be cool enough not to scald or burn the mouth, but hot enough to let the flavour fill the mouth, nose and sinuses, not just the taste buds.

## **ground coffee**

- 26 If you want to buy ready-ground coffee, medium-ground filter coffee will give you the best results.

## **storing coffee**

- 27 Coffee is best kept in an airtight container in a cool dry place, or in the fridge.  
Exposure to air oxidises coffee and allows the flavour to evaporate.

## **bottled water**

- 28 If you use bottled water, check that there are no added ingredients, flavourings, etc. and use still water, not sparkling. The carbon dioxide that gives the sparkle will adversely affect the flavour of your coffee.

## **taste**

- 29 Don't be tempted to reheat coffee in the coffee maker. You'll damage the coffee maker and the coffee will be undrinkable.  
30 Clean the filter holder, filter, and carafe after each use. Residue from a previous brew will spoil your coffee.  
31 If left for much more than about an hour, chemical changes in the coffee liquor start to affect the flavour. It's best to pour it away and make a fresh pot.

## **care and maintenance**

- 32 Unplug the coffee maker and let it cool down fully.  
33 Use the grip to open the main lid.  
34 Lift out the filter, and tip the used coffee grounds into the bin.  
★ Don't flush coffee grounds down the sink – they'll build up and cause a blockage.  
35 Wipe the surfaces of the coffee maker with a damp cloth.  
36 Wash the carafe, filter holder, and filter in warm soapy water, rinse thoroughly, and dry.  
37 Replace the filter holder in the coffee maker, with the slot to the rear.  
38 Replace the filter in the filter holder.  
39 Use the grip to close the main lid.  
40 Replace the carafe on the hotplate.  
41 Don't wash any part in a dishwasher.  
42 Don't put the coffee maker in any liquid.  
43 Don't use harsh or abrasive cleaners or solvents.

## **descale regularly – even in soft water areas**

 
- 44 Limescale may be white, coloured, even rusty-looking, but it's normally visible.  
45 Phosphate scale isn't generally visible, but it's there, even in soft water areas.  
46 All scale causes overheating, and reduces the life of the coffee maker.  
47 So, even with soft water, descale regularly, to help keep your coffee maker in working order.  
48 Use a proprietary brand of descaler suitable for use in plastic-bodied products.  
49 Follow the instructions on the package of descaler.  
50 When descaling has finished, empty the carafe and operate the coffee maker twice more with fresh water, but without coffee.  
51 Discard the water to ensure that no chemical residues are left in the coffee maker.  
★ Products returned under guarantee with faults due to scale will be subject to a repair charge.





## connection

The product must be earthed. It has a 13A BS1362 fuse in a 13A BS1363 plug. To replace the plug, fit the green/yellow wire to ⊕ or E, the blue wire to N, and the brown wire to L. Fit the cord grip. If in doubt, call an electrician. Don't use a non-rewireable plug unless the fuse cover is in place. If you remove the plug, dispose of it.

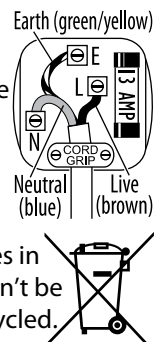

## wheelie bin symbol

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol mustn't be disposed of with unsorted municipal waste, but recovered, reused, or recycled.

## service

If you ring Customer Service, please have the **Model No.** to hand, as we won't be able to help you without it. It's on the rating plate (usually underneath the product).

The product isn't user-serviceable. If it's not working, read the instructions, check the plug fuse and main fuse/circuit breaker. If it's still not working, consult your retailer.

If that doesn't solve the problem – ring Customer Service – they may be able to offer technical advice.

If they advise you to return the product to us, pack it carefully, include a note with your name, address, day phone number, and what's wrong. If under guarantee, say where and when purchased, and include proof of purchase (till receipt). Send it to:

**Customer Service, Salton Europe Ltd, Failsworth, Manchester M35 0HS**

email: [service@saltoneurope.com](mailto:service@saltoneurope.com)

telephone: 0845 658 9700 (local rate number)

## guarantee

Defects affecting product functionality appearing within one year of purchase will be corrected by replacement or repair provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected.

Documentation, packaging, and product specifications may change without notice.

## online

[www.russellhobbs.co.uk](http://www.russellhobbs.co.uk) for more products