

 


# Russell Hobbs

*Smart in the kitchen...*



instructions

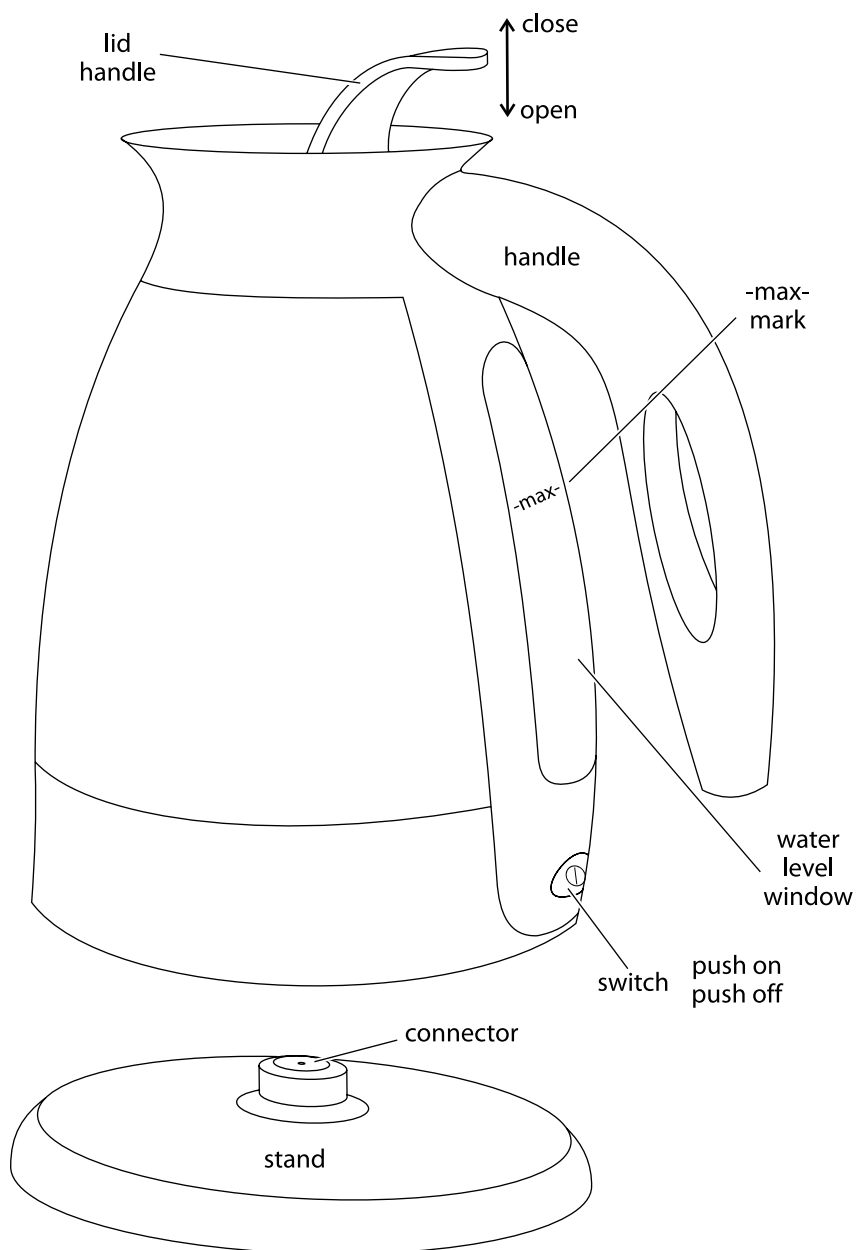

Read the instructions and keep them safe. If you pass the appliance on, pass on the instructions too. Remove all packaging, but keep it till you know the appliance works.

## **important safeguards**

Follow basic safety precautions, including:

- 1 This appliance must only be used by or under the supervision of a responsible adult.
- 2 Don't put the kettle, stand, cable, or plug in any liquid; don't use the kettle in a bathroom, near water, or outdoors.
- 3 Don't touch hot surfaces. Use the handle.
- 4 Don't open the lid while the water is heating.
- 5 Take care when pouring – pour slowly, and don't over-tilt the kettle.
- 6 The scald hazard lasts long after boiling. Keep the kettle, stand, and cable away from the edges of worktops and out of reach of children.
- 7 Route the cable so it doesn't overhang, and can't be tripped over or caught.
- 8 Wind excess cable beneath the stand.
- 9 Unplug the stand when not in use, before moving and before cleaning. Let the kettle cool down before cleaning and storing away.
- 10 Check the lid is fully closed before switching the kettle on, otherwise it may not switch off.
- 11 Check the kettle is properly located on the stand before switching on.
- 12 Don't switch on unless the kettle contains at least 2 cups of water.
- 13 Don't fill past max, or it may spit boiling water.
- 14 Remove the kettle from its stand before filling or pouring.
- 15 Keep the kettle, stand, cable, and plug away from sources of heat.
- 16 Don't use the kettle for any purpose other than heating water.
- 17 Use the kettle only with the stand supplied (and vice versa).
- 18 This appliance must not be operated by an external timer or remote control system.
- 19 Don't operate the appliance if it's damaged or malfunctions.
- 20 If the cable is damaged, it must be replaced by the manufacturer, its service agent, or someone similarly qualified, in order to avoid hazard.



## **household use only**

## before using for the first time

- 1 Fill to max, boil, discard the water, then rinse. Do this three times, to remove manufacturing dust, etc.

 
## positioning

- 2 Put the stand on a stable, level surface. Route the cable so it doesn't overhang, and can't be caught or tripped over.
- 3 Wind excess cable beneath the stand.

## filling

**warning** keep clear, steam may escape from the lid.

- 4 Remove the kettle from the stand.
- 5 Using the lid handle, turn the lid anti-clockwise about a quarter of a turn and then lift the lid off the kettle.
- 6 Fill with at least 2 cups of water, but not above max
- 7 If you overfill, the kettle may spit boiling water.
- 8 Push the lid down onto the kettle with the lid handle positioned about 90° anti-clockwise to the kettle handle.
- 9 Using the lid handle, turn the lid clockwise about a quarter of a turn till the pins on the lid lock under the latches and the lid handle is over the kettle handle.
- 10 Lift the lid handle to close the lid, or the kettle won't switch off when it boils.

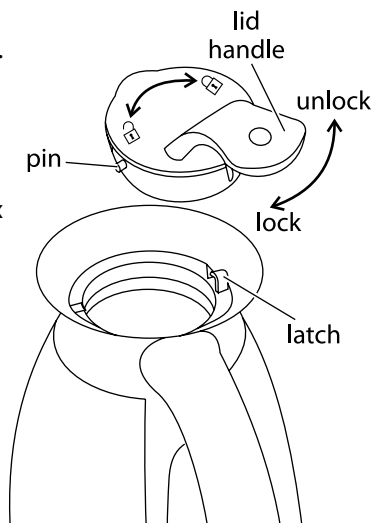

## switching on

- 11 Plug the stand into the wall socket.
- 12 Put the kettle on the stand – take care not to spill.
- 13 Press the switch (ⓘ).
- 14 The switch will light and the kettle will heat up.

## switching off

- 15 When the water boils the kettle will switch off.
- 16 To switch off manually, press the switch (ⓘ). The switch light will go off.

## general

- 17 Remove the kettle from the stand before pouring.
- 18 Press the lid handle down to allow the heated water to be poured.
- 19 To avoid the risk of splashing, pour slowly and don't over-tilt the kettle.
- 20 Don't tilt the kettle backwards, or you may pour the hot water over your hand.
- 21 After pouring, lift the lid handle up to close the kettle and to keep its contents hot.
- 22 You may see some discolouration on the floor of the kettle. Again, don't worry – it's due to the bonding of the element to the kettle floor.

## **using with insufficient water**

- 23 This will shorten the life of the element. A boil-dry cut-out will switch the kettle off.
- 24 To prevent the kettle cycling on and off, remove the kettle from the stand and let it cool before replacing it on the stand.
- 25 Sit the kettle on the work surface till it's cold.
- 26 Don't fill the kettle till it's cold, or it may spit.

## **care and maintenance**

- 1 Check that the kettle is switched off – see that the switch is not lit.
- 2 Unplug the stand, and let the kettle cool down fully before cleaning.
- 3 Wipe the kettle, inside and out, with a damp cloth. You may use a little household detergent, but if you do, rinse well to avoid tainting the water.
- 4 Keep all connectors and sockets dry.
- 5 Don't put the kettle or stand in any liquid.
- 6 Don't use harsh or abrasive cleaning agents or solvents.

## **descale regularly – even in soft water areas**


- 7 Limescale may be white, coloured, even rusty-looking, but it's normally visible.
  - 8 Phosphate scale isn't generally visible, but it's there, even in soft water areas.
  - 9 All scale causes overheating, reduces the kettle's life, and may trigger the boil-dry cut-out.
  - 10 So, even with soft water, descale regularly, to help keep your kettle in working order.
  - 11 Use a descaler suitable for plastic products (all kettles have plastic parts).
  - 12 Follow the instructions on the descaler, rinse several times, then fill, boil and discard the water, to ensure no residues are left.
- ★ Products returned under guarantee with faults due to scale will be subject to a repair charge.





**connection**

The product must be earthed. It has a 13A BS1362 fuse in a 13A BS1363 plug. To replace the plug, fit the green/yellow wire to ⊕ or E, the blue wire to N, and the brown wire to L. Fit the cord grip. If in doubt, call an electrician. Don't use a non-rewireable/moulded plug unless the fuse cover is in place. If you remove the plug, dispose of it.

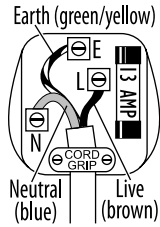

**spare parts**

Note the Model No (on the rating label) and the parts you need, ring 0845 658 9700 or email [service@saltoneurope.com](mailto:service@saltoneurope.com) for prices, then purchase using VISA or MASTERCARD.

**service**

The product isn't user-serviceable. If it's not working, read the instructions, check the plug fuse and main fuse/circuit breaker. If it's still not working, consult your retailer. If that doesn't solve the problem: Pack carefully, with a note of your name, address, day phone number, and what's wrong. If under guarantee, say where and when purchased, and include proof of purchase (till receipt). Send it to Customer Returns (address below right). They'll give you an estimate for inspection/repair.

**Customer Service**

(correspondence only)  
Salton Europe Ltd  
Failsworth  
Manchester  
M35 0HS

**Customer Returns**

Salton Europe Ltd  
Heath Mill Road  
Wombourne  
Wolverhampton  
WV5 8AQ

Customer Service ([service@saltoneurope.com](mailto:service@saltoneurope.com))  
telephone 0845 658 9700 (local rate number)

**guarantee**

Defects affecting product functionality appearing within one year of purchase will be corrected by replacement or repair provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected. Documentation, packaging, and product specifications may change without notice.