



Russell Hobbs

travel kettle

Read the instructions and keep them safe. Pass them on, if you pass the kettle on. Remove all packaging, but keep it till you're satisfied the kettle is working.

important safeguards

- This kettle must only be used by or under the supervision of a responsible adult. Use and store it out of reach of children.
- Don't put the kettle in water, don't use in a bathroom, near water, or outdoors.
- Don't open the lid while the kettle is switched on, and don't touch hot parts.
- Sit the kettle on a stable, level, heat-resistant surface.
- The scald hazard lasts long after boiling. Keep the kettle and cable away from the edges of worktops and out of reach of children.
- Route the cable so it doesn't overhang and can't be caught or tripped over.
- Don't connect this kettle to an external timer or remote control system.
- Don't leave the kettle unattended while plugged in.
- Unplug when not in use, and before filling, pouring, moving or cleaning.
- Check the lid is closed before switching the kettle on, or it may not switch off.
- Take care when pouring – pour slowly, and don't over-tilt the kettle.
- Use at least 225ml/8 fl oz/1 large cup of water, but don't fill past **max**, or it may spit boiling water.
- Keep the kettle, cable, and plug away from sources of heat.
- Don't use the kettle for any purpose other than heating water.
- The kettle isn't repairable. If it or the cable is damaged, scrap it.
- The kettle is designed for household uses only, not commercial use.




before using for the first time

- Fill to **max**, boil, then discard the water, to remove any manufacturing dust, etc.

in use

- Lift the lid, and remove the cups and spoons.
- Fill with at least 1 cup of water, but don't fill past **max**.
- Close the lid – if it's not closed properly, the kettle may not switch off when it boils.
- Sit the kettle on a stable, level, heat-resistant surface.
- Route the cable so it doesn't overhang and can't be caught or tripped over.
- Plug it into a power socket.
- Press the | button – the light will come on.
- When the kettle boils, the light will go out.
- To stop it manually, press the ○ button.
- Unplug before pouring, and pour slowly, to avoid splashing.
- Bring the cups to the kettle, to avoid catching the cable.
- Let the kettle cool, to reset the thermostat, before using it again.

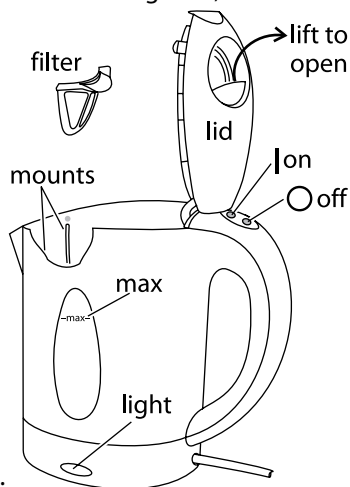

use abroad


- The kettle will work on any voltage from 120 to 240 volts a.c. 50/60Hz, so you can use it almost anywhere, though it'll take a bit longer to boil at lower voltages.
- Use an earthed travel adaptor suitable for the area you're going to.

cleaning

- Unplug the kettle, let it cool, then wipe inside and out with a damp cloth.
- Lift the filter out of its mounts, clean it by rubbing it gently under running water, then lower it into its mounts till it clicks into place.
- Don't put the kettle in liquid, and don't use harsh or abrasive cleaners or solvents.

connection

The product must be earthed. It has a 13A BS1362 fuse in a 13A BS1363 plug. To replace the plug, fit the green/yellow wire to ⊕ or E, the blue wire to N, and the brown wire to L. Fit the cord grip. If in doubt, call an electrician. Don't use a non-rewireable plug unless the fuse cover is in place. If you remove the plug, dispose of it.

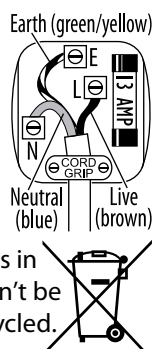

wheelie bin symbol

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol mustn't be disposed of with unsorted municipal waste, but recovered, reused, or recycled.

service

If you ring Customer Service, please have the **Model No.** to hand, as we won't be able to help you without it. It's on the rating plate (usually underneath the product).

The product isn't user-serviceable. If it's not working, read the instructions, check the plug fuse and main fuse/circuit breaker. If it's still not working, consult your retailer. If that doesn't solve the problem:

Pack carefully, with a note of your name, address, day phone number, and what's wrong. If under guarantee, say where and when purchased, and include proof of purchase (till receipt). Send it to Customer Returns (address below right).

Customer Service

(correspondence only)
Salton Europe Ltd
Failsworth
Manchester
M35 0HS

Customer Returns

Salton Europe Ltd
Heath Mill Road
Wombourne
Wolverhampton
WV5 8AQ

Customer Service (service@saltoneurope.com)
telephone 0845 658 9700 (local rate number)

guarantee

Defects affecting product functionality appearing within one year of purchase will be corrected by replacement or repair provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected. Documentation, packaging, and product specifications may change without notice.

online

www.russellhobbs.co.uk for more products