

water filter

Scale particles suspended in the water may give it a cloudy or greasy appearance. The filter will prevent these particles going into your drink. If you see deposits on the filter, clean it, otherwise the performance of your kettle will drop, your drinks may contain scale, and the water inside the kettle may look cloudy.

cleaning the filter

Check your hands are free from soap, or anything which might leave a taint.

Switch the kettle off (press the switch up), and let it cool down fully.

Open the lid.

Grip the top of the filter and pull it up and out of its grooves.

Brush it with a soft brush, under a running tap

Rinse the kettle, in case any scale particles have fallen inside.

To replace, simply slide the filter back down the grooves on either side of the spout, inside the kettle. Close the lid.

spare parts

Phone Customer Service Dept on 0845 658 9700 (a local rate number) or email service@saltoneurope.com.

Tell them the Model No. (on the rating label), and the part(s) you need. They'll give you the price(s), then: Either order spares using MASTERCARD or VISA.

Or fill in this form (or a copy), and send it, with a cheque or postal order payable to Salton Europe Ltd, to Customer Service Dept.

Name:

Address:

.....

.....

Post Code:

Model No.

Part(s) required	Quantity

I enclose £ in full payment.

after sales service


The product isn't user-serviceable. If it's not working, check:


You've followed the instructions; the plug fuse hasn't blown; the main fuse/circuit breaker hasn't blown/tripped.

If it still doesn't work, consult your retailer. If your retailer fails to solve your problem, and you need to return it to us, proceed as follows:

Pack it carefully, with a note of your name, address, daytime phone number, and what's wrong. If under guarantee, say where and when purchased, include proof of purchase (e.g. till receipt). Send it to Customer Service (address at the end of this leaflet). They'll give you an estimate for inspection/repair.

connection to the electricity supply

This product must be earthed. To replace the fuse, use a 13A BS1362 compliant fuse. To replace the plug, use a 13A BS1363 compliant plug. Fit the green/yellow Earth wire to the terminal marked E or , the blue Neutral wire to the terminal marked N, and the brown Live wire to the terminal marked L. Fit the cord grip. If in doubt, call an electrician.

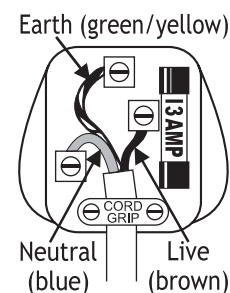

If the plug supplied is non-rewireable (moulded), don't use it without the fuse cover in place. If you remove it, dispose of it, don't re-use it or put it in a socket.

guarantee

Any defect affecting the functionality of the product which becomes apparent within one year of its purchase will be corrected by free repair or replacement provided it has been used and maintained in accordance with the instructions and has not been abused or misused.

Your statutory rights are not affected.

In line with our continuous product development policy, we reserve the right to change product, packaging and documentation specifications without notice.

Customer Service Dept (service@saltoneurope.com)

Salton Europe Ltd

Failsworth, Manchester M35 0HS England

www.eSaltoneurope.com

Telephone 0845 658 9700 (a local rate number)

436-521

Russell Hobbs



montana

cordless kettle

instructions and guarantee

Read the instructions and keep them safe. Pass them on if you pass the kettle on. Remove all packaging, but keep it till you're satisfied the kettle is working.

important safeguards

Follow basic safety precautions, including:

1. Don't put the kettle, power base, cable, or plug in any liquid; don't use the kettle in a bathroom, near water, or outdoors.
2. This kettle must only be used by or under the direct supervision of a responsible adult.
3. Don't touch hot surfaces. Use handles and buttons.
4. Don't open the lid while the water is heating.
5. Take care when pouring – pour slowly, and don't over-tilt the kettle.
6. The scald hazard lasts long after boiling. Keep the kettle, power base, and cable away from the edges of worktops and out of reach of children.
7. Route the cable so it doesn't overhang and can't be caught accidentally or tripped over. Wind excess cable beneath the power base.
8. Unplug the power base when not in use, before repositioning and before cleaning. Let the kettle cool down fully before cleaning and storing away.
9. Check the lid is properly closed before switching the kettle on, otherwise it may not switch off.
10. Check the kettle is properly located on the power base before switching on.
11. Don't switch on unless the kettle is filled at least to the **min** mark.
12. Don't fill past the **max** mark, or it may spit boiling water.
13. Remove the kettle from its power base before filling or pouring.
14. Keep the kettle, power base, cable, and plug away from sources of heat.
15. Don't use the kettle for any purpose other than heating water.
16. Use the kettle only with the power base supplied (and vice versa).
17. Don't use the kettle if it's damaged or malfunctions. If the power base or cable is damaged, replace the power base, in order to avoid hazard.

household use only

before using for the first time

Fill to **max**, boil, discard the water, then rinse, to remove manufacturing dust, etc.



positioning

Sit the power base on a stable, level surface. Route the cable so it doesn't overhang, and can't be caught or tripped over.

filling

warning Keep clear, steam will escape from the lid.

Check that the switch is off (press it up).

Remove the kettle from the power base.

Turn the lid knob 1-1.5cm (1/2") left or right, and pull the lid up and back a bit more than 45 degrees.

Fill at least to the **min** mark, but not above the **max** mark. If you overfill, it may spit boiling water.

Close the lid and press down to lock it. Check it's closed, or the kettle won't switch off when it boils.

switching on

Check that the switch is off (press it up).

Plug the power base into the wall socket. If necessary, switch the socket on.

Gently position the kettle on the power base – take care not to spill.

Press the switch down. The light will come on, and the kettle will heat up.

switching off

When the water boils the kettle will switch off, the switch will return to "off" and the light will go out.

To switch the kettle off manually, press the switch up.

general

Remove the kettle from the power base before pouring. To avoid the risk of splashing, pour slowly and don't over-tilt the kettle.

Don't tilt the kettle backwards, water might get on to the control area. If this happens, let the kettle dry before use – sit it somewhere warm for 12 hours.

When you lift the kettle, you may see moisture on the power base. Don't worry – it's the steam used to switch off automatically, which then condenses and escapes via vents under the kettle.

You may see some discolouration on the floor of the kettle. Again, don't worry – it's due to the bonding of the element to the kettle floor.

insufficient water

This will shorten the life of the element. A boil-dry cut-out will switch the kettle off. You must then remove the kettle from its power base to reset the cut-out.

Sit the kettle on the work surface till it's cold.

Don't fill it till it's cold, or it may spit.

care and maintenance

Switch the kettle off (press the switch up), unplug the power base from the wall socket, and let the kettle cool down fully before cleaning.

Wipe the kettle, inside and out, with a damp cloth. You may use a little household detergent, but if you do, rinse well to avoid tainting the water.

Keep all connectors and sockets dry.

Don't put the kettle or power base in any liquid.

Don't use harsh or abrasive cleaners or solvents.

scale

Scale deposits may be white, coloured, or even rusty.

They overheat the element, reduce its working life, and make the boil-dry cut-out operate prematurely.

As the element is mounted under the kettle, there are no nooks and crannies to give the scale a foothold. It can build up only where it can be seen and dealt with.

minimise scale build-up

Rinse the kettle with clean water and wipe its walls if you see scale in the kettle, or a film on the water.

Empty the kettle after use. Descale frequently – how often depends on the hardness of your water. Use a descaler suitable for use in plastic products (even metal kettles have plastic parts). Follow the instructions on the descaler, rinse several times, then fill, boil and discard the water, to ensure no residues are left.

nb Products returned under guarantee with faults due to scale will be subject to a repair charge.

