




Russell Hobbs



instructions

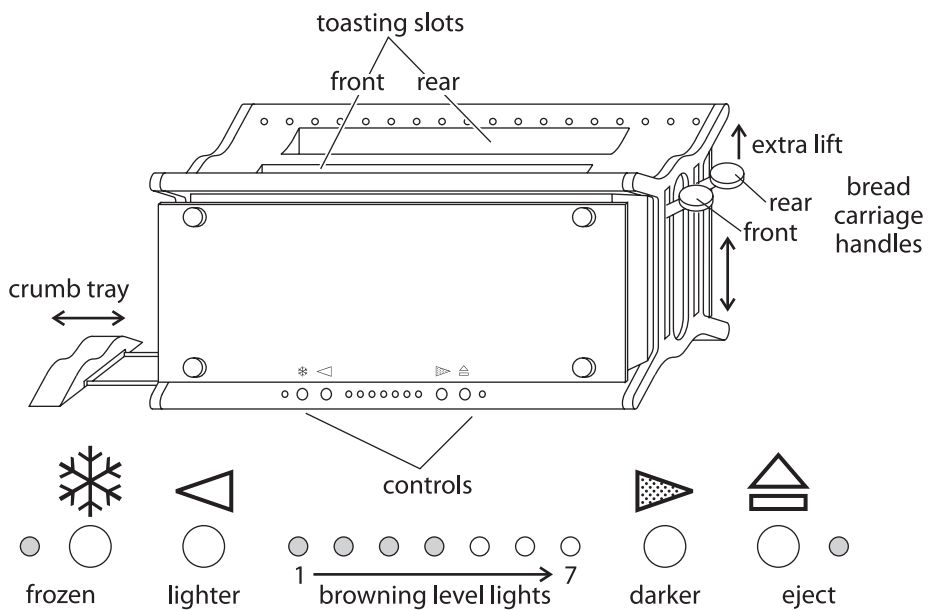

Read these instructions before use and keep them safe. If you pass the toaster on, pass on the instructions too.

Remove all packaging, but keep it till you're satisfied the toaster is working.

Important safeguards

Follow basic safety precautions, including:

- 1 This appliance should only be used by or under the supervision of a responsible adult.
- 2 Don't put the toaster in water, don't use it in a bathroom or near water contained in a bath-tub, basin or any other vessel, and don't use it outdoors.
- 3 Position the toaster upright, on a stable, level, heat-resistant surface, near a power socket, and out of reach of children.
- 4 Don't use it near or below curtains or other combustible materials and watch it while it's hot, as bread can catch fire if overcooked.
- 5 The area round the toasting slots will get hot during use – don't touch!
- 6 Route the cable so it doesn't overhang and can't be caught accidentally.
- 7 When using only one of the toasting slots, choose the one nearest to the front of the toaster. If you use the rear slot, both slots will become "live" when you lower the bread carriage handle.
- 8 Don't let the toasting slots become covered during toasting.
- 9 If the bread carriages become jammed during the toasting cycle don't try to release it. Switch off the power socket (if appropriate), unplug the toaster, and leave it to cool down before carefully removing the bread. Don't use a knife, fork, or other sharp implement – you'll damage the elements.
- 10 Don't toast "battered" items or try to make toasted sandwiches in the toaster, as this will create a fire hazard.
- 11 Don't use torn, curled up, or misshapen slices of bread, as these may jam the eject mechanism.
- 12 Unplug the toaster after use, and let it cool down fully before cleaning and storing away.
- 13 Clean the crumbs out of your toaster frequently, to avoid a build up of crumbs. This is unhygienic and could cause a fire hazard.
- 14 Don't use the toaster unless the crumb tray is closed.
- 15 Don't connect this appliance to an external timer or remote control system.
- 16 Keep the toaster and cable away from hotplates, hobs and burners.
- 17 Don't use the toaster if it's damaged or malfunctions. If the cable is damaged, the toaster must be returned, in order to avoid hazard.



household use only

before using for the first time

Before using the toaster for the first time, you need to cure the elements. This will remove their protective coating.

This may smell a bit, but it's nothing to worry about. Just make sure the room is well ventilated.

Check that there's nothing in the slots, set the browning level to maximum (all browning level lights on), and operate the toaster without bread by pressing down the rear bread carriage handle.

When it's done, leave it to cool down fully, then you can use it normally.

preparation

- 1 Sit the toaster upright on a stable, level, heat-resistant surface.
- 2 Don't put it on or near anything that could be damaged even by moderate heat.
- 4 Don't put it near or below curtains or other combustible materials.
- 3 Route the cable so it doesn't overhang, and can't be caught or tripped over.
- 5 Plug it into a wall socket (if necessary, switch the socket on). The left four browning level lights will light up.





one slot

- 6 If you're using only one slot, use the front slot and front bread carriage handle.



two slots

- 7 If you're using both slots, you need only lower the rear bread carriage handle. It'll pull the front handle down with it.

making toast



- 6 Use the buttons at either end of the browning level lights to lighten  or darken  the toast. The browning level lights will come on/go out to indicate the level chosen. The more lights showing, the darker the toast.
- 8 Put bread centrally into the toasting slot(s) (maximum thickness 28mm).
- 9 Press the front (one slot), or rear (two slots) bread carriage handle down fully.
- ★ The bread carriage handle(s) won't lock down unless the toaster is connected to the electricity supply.
- 10 The light by the  button will come on and the elements will heat up.
- 11 When it's done, the toast will pop up, the light by the  button will go out, and the elements will turn off.

eject

- 12 To stop the toaster before it's finished, press the  button. The toast will pop up, the elements will turn off, and the light by the  button will go out.

frozen button

This feature takes the guesswork out of toasting frozen bread.

- 13 Set the browning level at the setting you use with normal, unfrozen bread.
- 14 Put the frozen bread into the slots, lower the bread carriage handle(s), to start the toaster, then press the  button.
- 15 The toasting time will be altered automatically to give the same degree of browning you get with unfrozen bread.
- 16 The light by the  button will come on, and the element will heat up.

- 17 When it's done, the toast will pop up, the light by the ☼ button will go out, and the elements will turn off.

reheating toast

- 18 Use the lowest setting, and only reheat plain, unbuttered toast.

extra lift

- 19 After toasting small items (crumpets, etc.) the bread carriage handle may be raised further, to allow them to be removed more easily.

hints and tips

- 20 If you're toasting more than one slice of bread, make sure the slices are of similar size, thickness and freshness, otherwise they'll brown differently.
- 21 Old (yesterday's) bread contains less moisture than fresh bread, so makes crisper toast.
- 22 Old or thin bread cooks faster than fresh or thick bread, so you should use a lighter setting.
- 23 Sweet bread products (tea cakes, fruit loaf, etc.) brown much more quickly than ordinary bread, so should be toasted on a lighter setting.

care and maintenance


- 1 Unplug the toaster when not in use, before moving and before cleaning. Let it cool down before cleaning and storing away.
- 2 Wipe the outside with a soft damp cloth. If necessary, use a little washing-up liquid.
- 3 Don't let anything enter the slots, you might damage the elements.
- 4 Don't put the toaster in water or any other liquid.
- 5 Don't use harsh or abrasive cleaning agents or solvents.

crumbs

- 6 Crumbs will collect in the base of the toaster. Letting them build up is unhygienic, and could cause a fire hazard, so remove them frequently.
- 7 Unplug the toaster and let it cool down fully. Pull the crumb tray out and empty it. Wipe it with a damp cloth, dry thoroughly, then slide it back into the toaster.
- 8 Don't use the toaster unless the crumb tray is in place and closed.

connection

The product must be earthed. It has a 13A BS1362 fuse in a 13A BS1363 plug. To replace the plug, fit the green/yellow wire to ⊕ or E, the blue wire to N, and the brown wire to L. Fit the cord grip. If in doubt, call an electrician. Don't use a non-rewireable/moulded plug unless the fuse cover is in place. If you remove the plug, dispose of it.

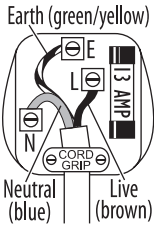

service

The product isn't user-serviceable. If it's not working, read the instructions, check the plug fuse and main fuse/circuit breaker. If it's still not working, consult your retailer. If that doesn't solve the problem:

Pack carefully, with a note of your name, address, day phone number, and what's wrong. If under guarantee, say where and when purchased, and include proof of purchase (till receipt). Send it to Customer Returns (address below right). They'll give you an estimate for inspection/repair.

Customer Service

(correspondence only)
Salton Europe Ltd
Failsworth
Manchester
M35 0HS

Customer Returns

Salton Europe Ltd
Heath Mill Road
Wombourne
Wolverhampton
WV5 8AQ

Customer Service (service@saltoneurope.com)
telephone 0845 658 9700 (local rate number)

guarantee

Defects affecting product functionality appearing within one year of purchase will be corrected by replacement or repair provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected. Documentation, packaging, and product specifications may change without notice.