 




Russell Hobbs



instructions

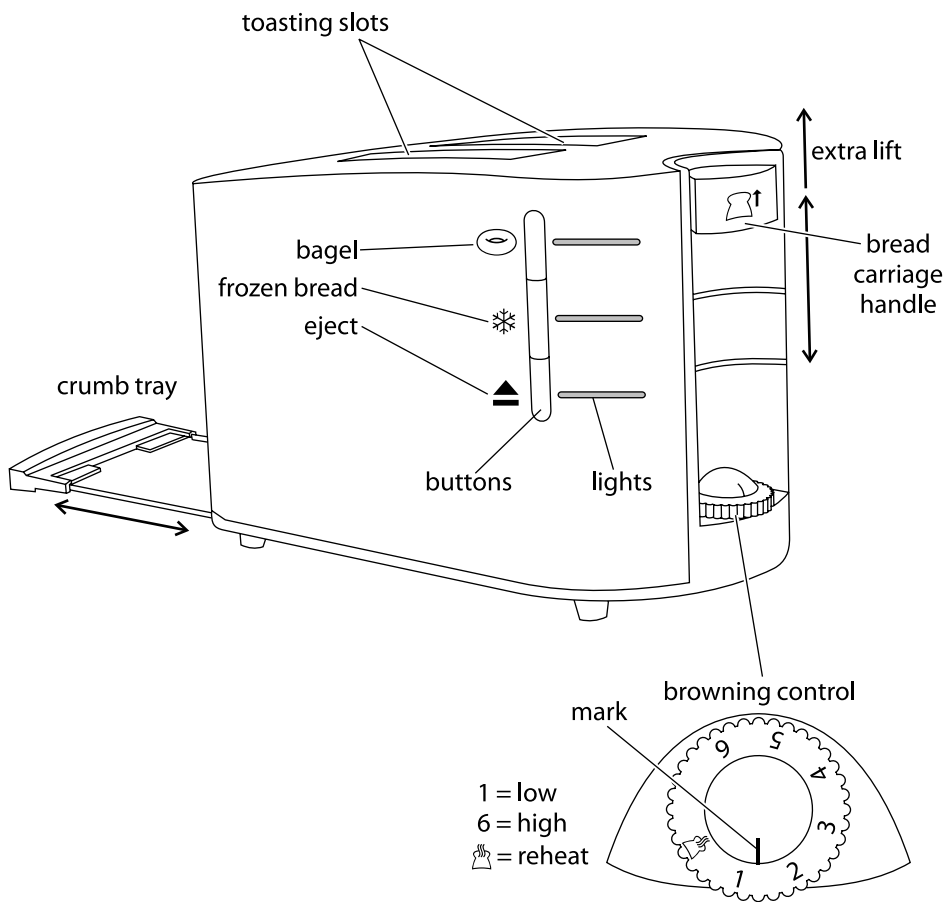

Read these instructions before use and keep them safe. If you pass the toaster on, pass on the instructions too.

Remove all packaging, but keep it till you're satisfied the toaster is working.

Important safeguards

Follow basic safety precautions, including:

- 1 The toaster must only be used by or under the supervision of a responsible adult. Use and store the appliance out of reach of children.
- 2 Don't put your toaster in water, don't use it in a bathroom, near water, or outdoors.
- 3 Sit the toaster upright, on a stable, level, heat-resistant surface.
- 4 Don't put it on or near anything that could be damaged even by moderate heat.
- 5 If overcooked, bread may burn. Don't use the toaster near or below curtains or other combustible materials and watch it while it's in use.
- 6 The area round the toasting slots will get hot during use – don't touch!
- 7 Route the cable so it doesn't overhang and can't be caught accidentally.
- 8 When using only one of the toasting slots, don't let anything get into the other slot, as both slots will become "live" when you lower the bread carriage handle.
- 9 Don't let the toasting slots become covered during toasting.
- 10 If bread gets jammed, unplug the toaster, let it cool down fully, then carefully remove the bread that's jamming it. Don't use anything sharp, such as a knife or fork, you may damage the elements.
- 11 Don't toast "buttered" items or try to make toasted sandwiches in the toaster, as this will create a fire hazard.
- 12 Don't use torn, curled up, or misshapen slices of bread, as these may jam the eject mechanism.
- 13 Unplug the toaster when not in use, before moving and before cleaning. Let it cool down fully before cleaning and storing away.
- 14 Clean the crumbs out of your toaster frequently. A build up of crumbs is unhygienic, and could cause a fire hazard.
- 15 Don't use the toaster unless the crumb tray is in place and closed.
- 16 Don't use the toaster for any purpose other than those described in these instructions.
- 17 This appliance must not be operated by an external timer or remote control system.
- 18 Keep the toaster and cable away from hotplates, hobs and burners.
- 19 Don't use the toaster if it's damaged or malfunctions.
- 20 If the cable is damaged, the toaster must be returned, in order to avoid hazard.



household use only

before using for the first time

- 1 Turn the browning control to the highest setting (6).
- 2 Operate the toaster empty, to cure the new elements. This may smell a bit, but it's nothing to worry about. Ensure the room is well ventilated.

toasting bread

- 3 Sit the toaster upright, on a stable, level, heat resistant surface, clear of curtains and other combustible materials. Don't put it on or near anything that could be damaged even by moderate sources of heat.
- 4 Plug the cable into the power socket (switch the socket on, if it's switchable).
- 5 Put bread into the toasting slots (maximum thickness of bread 27mm 1 $\frac{1}{16}$ inch).
- 6 Turn the browning control to the required setting (1 = light, 6 = dark).
- 7 Press the bread carriage handle down fully – it won't lock down unless the toaster is connected to the electricity supply.
- 8 The ▲ light will come on.
- 9 When it's done, the toast will pop up, the ▲ light will go out, and the elements will turn off automatically.

eject ▲

- 10 To stop the toaster before it's finished, press the ▲ button. The toast will pop up, and the elements will turn off.

frozen bread ❄

 
- 11 This feature takes the guesswork out of toasting frozen bread.
- 12 Leave the browning control at your favoured setting, put the frozen bread into the slots, lower the bread carriage handle, then press the ❄ button.
- 13 The ❄ light will come on, and the toasting time will be altered automatically to give the same degree of browning you get with unfrozen bread.

caution don't try to defrost bread – you'll probably wreck the toaster

- a) toasting frozen bread changes ice to steam, which escapes via the toasting slots
- b) defrosting bread on a low setting changes ice to water, which drips into the toaster, over the electronics and maybe the elements, causing mayhem

bagel ☉

- 14 Only the brown outside surfaces of bagels should be toasted, the soft inner surfaces shouldn't be browned.
- 15 Split your bagel, and put the two halves into the slots with the brown outsides facing the centre elements.
- 16 Leave the browning control at your favoured setting, lower the bread carriage handle, then press the ☉ button. This heats only the centre elements
- 17 The brown outsides of the bagel will be toasted, the cut sides will just be warmed.

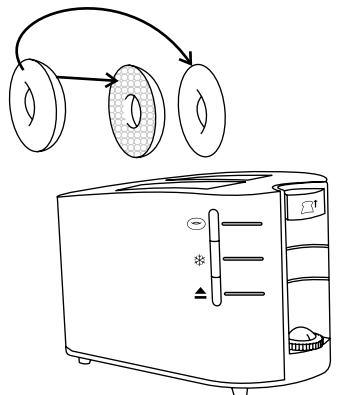

reheating toast 🍞

- 18 You must only reheat plain, unbuttered toast.
- 19 You should reheat toast at the lowest setting.
- 20 Turn the browning control down to 🍞.
- 21 Press the bread carriage handle down fully – it won't lock down unless the toaster is connected to the electricity supply.
- 22 The ▲ light will come on.
- 23 When it's done, the toast will pop up, the ▲ light will go out, and the elements will turn off automatically.

extra lift

24 After toasting small items (bagels, crumpets, etc.) the bread carriage handle may be raised further, to allow them to be removed more easily.

hints and tips

25 When toasting more than one slice of bread, use slices of similar size, thickness and freshness.

26 Old (yesterday's) bread contains less moisture, so makes crisper toast.

27 Old or thin bread cooks faster than fresh or thick bread, so use a lower setting.

28 Sweet bread products (tea cakes, fruit loaf, etc.) brown much more quickly than ordinary bread, so should be toasted on a lighter setting.

crumbs

29 Clean the crumbs out of your toaster frequently, to avoid a build up of crumbs. This is unhygienic and could cause a fire hazard.

30 Unplug the toaster and let it cool down. Remove and empty the crumb tray. Wipe it with a damp cloth, dry, then replace it in the toaster.

31 Don't use the toaster unless the crumb tray is fitted and closed.

jamming

32 If the bread jams in the toaster, the contacts will open and turn off the power to the elements. You should still unplug the toaster and leave it to cool down before trying to release the jam.

care and maintenance

1 Unplug the appliance when not in use, before moving and before cleaning. Let it cool down fully before cleaning and storing away.

2 Wipe outer surfaces with a damp cloth. If necessary, use a little washing-up liquid.

3 Don't let anything enter the slots, you might damage the elements.

4 Don't put the appliance in water or any other liquid.

 
5 Don't use harsh or abrasive cleaning agents or solvents.

connection

The product must be earthed. It has a 13A BS1362 fuse in a 13A BS1363 plug. To replace the plug, fit the green/yellow wire to ⊕ or E, the blue wire to N, and the brown wire to L. Fit the cord grip.

If in doubt, call an electrician.

Don't use a non-rewireable/moulded plug unless the fuse cover is in place. If you remove the plug, dispose of it.

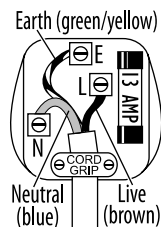

service

The product isn't user-serviceable. If it's not working, read the instructions, check the plug fuse and main fuse/circuit breaker. If it's still not working, consult your retailer. If that doesn't solve the problem:

Pack carefully, with a note of your name, address, day phone number, and what's wrong. If under guarantee, say where and when purchased, and include proof of purchase (till receipt). Send it to Customer Returns (address below right).

Customer Service

(correspondence only)
Salton Europe Ltd
Failsworth
Manchester
M35 0HS

Customer Returns

Salton Europe Ltd
Heath Mill Road
Wombourne
Wolverhampton
WV5 8AQ

Customer Service (service@saltoneurope.com)
telephone 0845 658 9700 (local rate number)

guarantee

Defects affecting product functionality appearing within one year of purchase will be corrected by replacement or repair provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected. Documentation, packaging, and product specifications may change without notice.

online

Hit www.russellhobbs.co.uk for more products.