




Russell Hobbs

Smart in the kitchen...



instructions

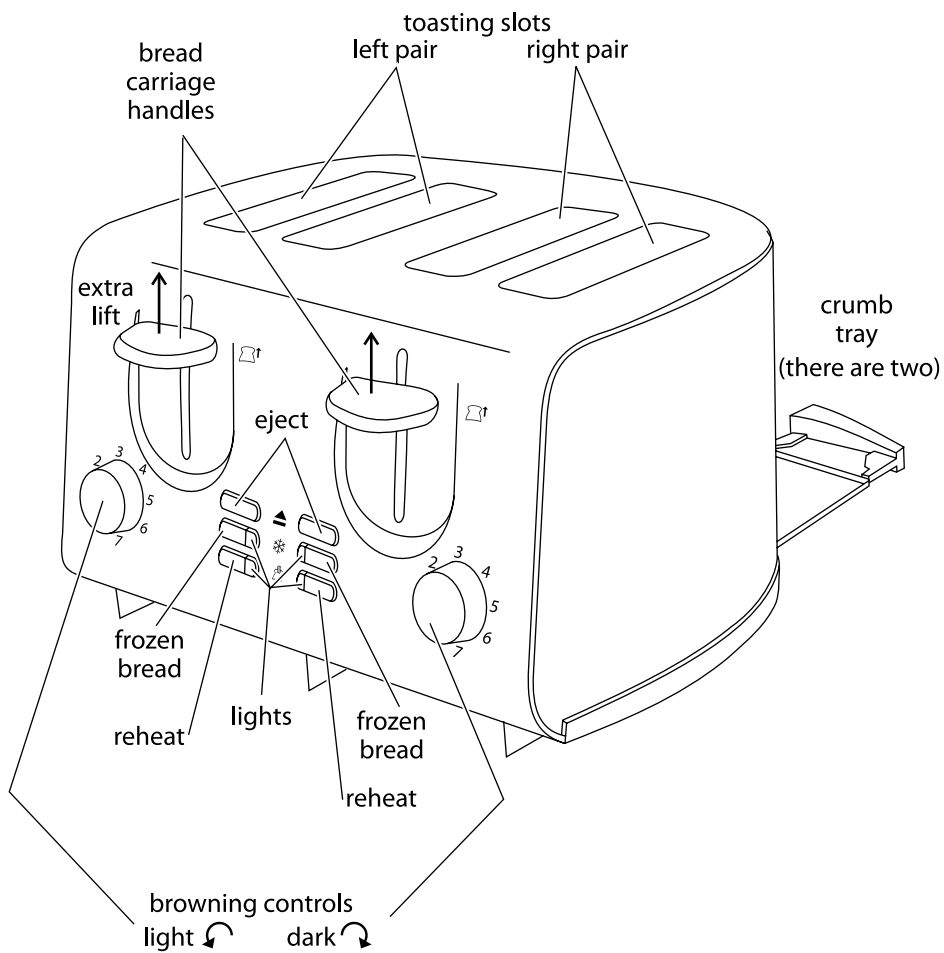


Read these instructions before use and keep them safe. If you pass the toaster on, pass on the instructions too.

Remove all packaging, but keep it till you're satisfied the toaster is working.

Important safeguards

Follow basic safety precautions, including:

- 1 This appliance should only be used by or under the supervision of a responsible adult.
- 2 Don't put your toaster in liquid, don't use it in a bathroom or near water contained in a bath-tub, basin or any other vessel, and don't use it outdoors. 
- 3 Position the toaster upright, on a stable, level, heat-resistant surface, near a power socket, and out of reach of children.
- 4 Don't use it near or below curtains or other combustible materials and watch it while it's hot, as bread can catch fire if overcooked.
- 5 The area round the toasting slots will get hot during use – don't touch!
- 6 Route the cable so it doesn't overhang and can't be caught accidentally.
- 7 When using only one of a pair of toasting slots, don't let anything get into the other slot, as both slots will become "live" when you lower the bread carriage handle.
- 8 Don't let the toasting slots become covered during toasting.
- 9 If a bread carriage gets jammed during the toasting cycle don't try to release it. Switch off the power socket (if appropriate), unplug the toaster, and leave it to cool down before carefully removing the bread. Don't use a knife, fork, or other sharp implement – you'll damage the elements.
- 10 Don't try to force oversized bread into a toasting slot, it may jam and create a fire hazard. If the bread is too big to fit easily in the slot, trim it to size before toasting.
- 11 Don't toast "buttered" items or try to make toasted sandwiches in the toaster, as this will create a fire hazard.
- 12 Don't use torn, curled up, or misshapen slices of bread, as these may jam the eject mechanism.
- 13 Unplug the toaster after use, and let it cool down fully before cleaning and storing away.
- 14 Clean the crumbs out of your toaster frequently, to avoid a build up of crumbs. This is unhygienic and could cause a fire hazard.
- 15 Don't use the toaster unless the crumb trays are closed.
- 16 Don't connect this appliance to an external timer or remote control system.
- 17 Keep the toaster and cable away from hotplates, hobs and burners.
- 18 Don't use the toaster if it's damaged or malfunctions. If the cable is damaged, the toaster must be returned, in order to avoid hazard.

household use only


before using for the first time

- 1 Set both browning controls to the highest setting (7).
- 2 Operate the toaster without bread, to cure the new elements. This may smell a bit, but it's nothing to worry about. Ensure the room is well ventilated.


toasting bread

- 3 Sit the toaster upright, on a stable, level, heat resistant surface, clear of curtains and other combustible materials. Don't put it on or near anything that could be damaged even by moderate sources of heat.
- 4 Plug the cable into the power socket and, if necessary, switch the socket on.
- 5 Put bread into the toasting slots (maximum thickness of bread 30mm).
- 6 You can treat the left and right pairs of toasting slots as if they were two separate 2-slice toasters.
- 7 Turn the browning control to the required setting (light ↺ to dark ↻).
- 8 Press the bread carriage handle down fully – it won't lock down unless the toaster is connected to the electricity supply.
- 9 When it's done, the toast will pop up, and the elements will turn off automatically.
- ★ Take care – if you're using both pairs of slots, they'll probably pop up at different times.


eject

- 10 To stop a pair of slots before the toasting cycle has finished, press the  button appropriate to that pair of slots. The toast will pop up, and the elements will turn off. This will not affect the other pair of slots.

frozen bread

- 11 This feature takes the guesswork out of toasting frozen bread.
- 12 Leave the browning control at your favoured setting, insert the frozen bread, lower the bread carriage handle, then press the  button.
- 13 The light attached to this button, will come on, and the toasting time will be altered automatically to give the same degree of browning you get with unfrozen bread.

reheating toast

- 14 There's no need to adjust the browning control. Insert the toast, lower the bread carriage handle, then press the  button. The light, attached to this button will come on, the toast will be given a short burst of heat, then pop up. You must only reheat plain, "unbuttered" toast.

extra lift

- 15 After toasting small items (bagels, crumpets, etc.) the bread carriage handle may be raised further, to allow them to be removed more easily.

hints and tips

- 16 When toasting more than one slice of bread, use slices of similar size, thickness and freshness.
- 17 Old (yesterday's) bread contains less moisture, so makes crisper toast.
- 18 Old or thin bread cooks faster than fresh or thick bread. Use a lower setting.
- 19 Sweet bread products (tea cakes, fruit loaf, etc.) brown much more quickly than ordinary bread, so should be toasted on a lighter setting.

crumbs


- 20 Clean the crumbs out of your toaster frequently, to avoid a build up of crumbs. This is unhygienic and could cause a fire hazard.
- 21 Unplug the toaster and let it cool down. Remove and empty the crumb trays. Wipe them with a damp cloth, dry, then replace them in the toaster.
- 22 Don't use the toaster unless the crumb trays are fitted and closed.

care and maintenance

- 1 Unplug the appliance when not in use, before moving and before cleaning. Let it cool down fully before cleaning and storing away.
- 2 Wipe outer surfaces with a damp cloth. If necessary, use a little washing-up liquid.
- 3 Don't let anything enter the slots, you might damage the elements.
- 4 Don't put the appliance in water or any other liquid.
- 5 Don't use harsh or abrasive cleaning agents or solvents.

connection

The product must be earthed.
It has a 13A BS1362 fuse in a 13A BS1363 plug. To replace the plug, fit the green/yellow wire to ⊕ or E, the blue wire to N, and the brown wire to L. Fit the cord grip. If in doubt, call an electrician.
Don't use a non-rewireable/moulded plug unless the fuse cover is in place. If you remove the plug, dispose of it.

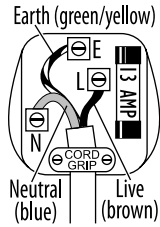

service

The product isn't user-serviceable. If it's not working, read the instructions, check the plug fuse and main fuse/circuit breaker. If it's still not working, consult your retailer. If that doesn't solve the problem:
Pack carefully, with a note of your name, address, day phone number, and what's wrong. If under guarantee, say where and when purchased, and include proof of purchase (till receipt). Send it to Customer Returns (address below right). They'll give you an estimate for inspection/repair.

Customer Service
(correspondence only)
Salton Europe Ltd
Failsworth
Manchester
M35 0HS

Customer Returns
Salton Europe Ltd
Heath Mill Road
Wombourne
Wolverhampton
WV5 8AQ

Customer Service (service@saltoneurope.com)
telephone 0845 658 9700 (local rate number)

guarantee

Defects affecting product functionality appearing within one year of purchase will be corrected by replacement or repair provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected. Documentation, packaging, and product specifications may change without notice.