

Caffe






TORINO

by Russell Hobbs



instructions

lights ●

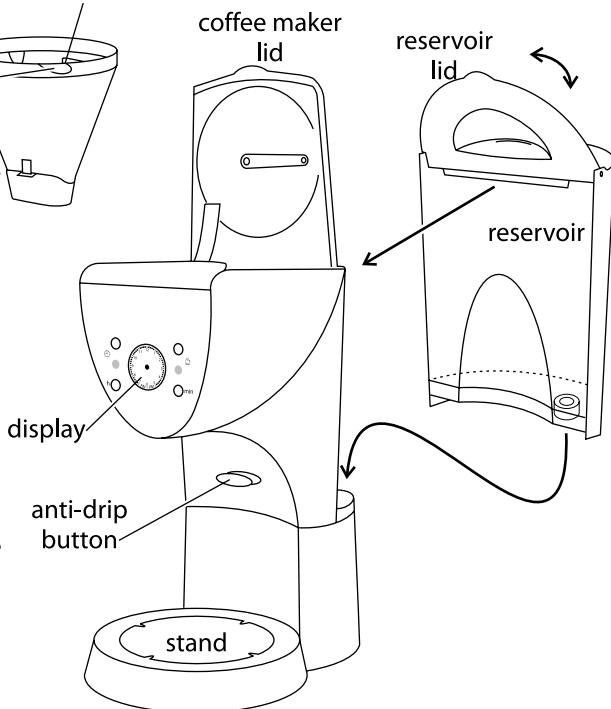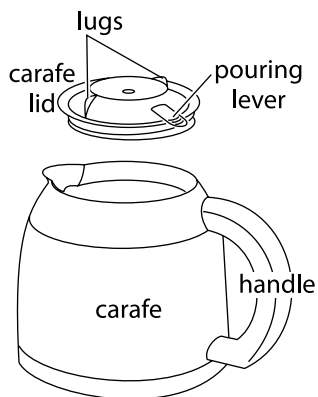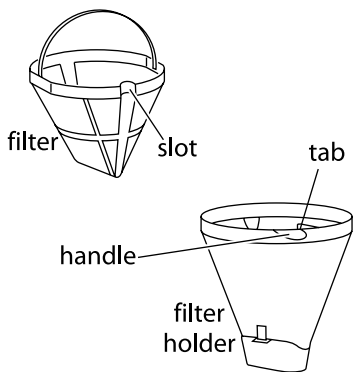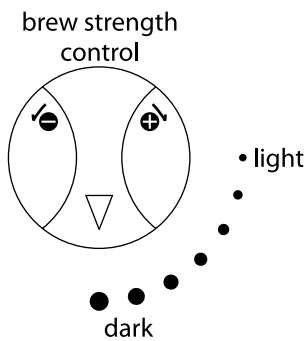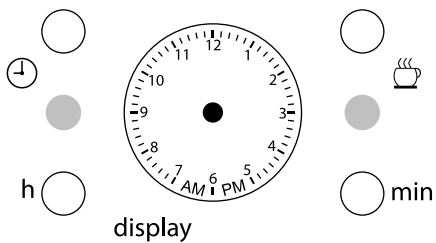


Read these instructions before use and keep them safe. If you pass the coffee maker on, pass on the instructions too.

Remove all packaging, but keep it till you're satisfied that the coffee maker is working.

important safeguards

Follow basic safety precautions, including:


- 1 The coffee maker must only be used by or under the supervision of a responsible adult.
- 2 Don't put the coffee maker in water or any other liquid, don't use it in a bathroom or near a bathtub, basin or any other source of water, and don't use it outdoors. 
- 3 Don't touch hot surfaces e.g. carafe. Use the handle.
- 4 Position the coffee maker on a firm, level, heat-resistant surface, close to a power socket and out of reach of children.
- 5 Take care when pouring – don't over-tilt the carafe.
- 6 Coffee will remain hot for some considerable time after the machine is switched off. This can present a scald hazard – keep the coffee maker, the carafe and the mains lead away from the edge of worktops and out of reach of children.
- 7 This appliance must not be operated by an external timer or remote control system.
- 8 Route the mains lead so it doesn't overhang, and can't be tripped over or caught accidentally.
- 9 Unplug the coffee maker when not in use, before moving and before cleaning. Let it cool down fully before cleaning and storing away.
- 10 Don't fill the reservoir past the **max** mark, you won't be able to carry the reservoir without slopping water out of the top.
- 11 Put the carafe on the stand before switching the coffee maker on.
- 12 If you need to stop the coffee maker, press the ☞ button once if it's actually making coffee (☞ light on), twice if it's waiting to make coffee (⌚ light on), three times if you're in the middle of setting the timer (☞ light flashing) – i.e. press and release the ☞ button till both lights are out.
- 13 Before adding water or reusing the coffee maker, let it cool down for 10 minutes.
- 14 Don't use the coffee maker for any purpose other than those described in these instructions.
- 15 Keep the coffee maker and mains lead away from hotplates, hobs, burners, or any other source of heat.
- 16 Don't twist or kink the mains lead, and don't wrap it round the coffee maker.
- 17 Don't put the carafe in a microwave oven.
- 18 Don't use accessories or attachments other than those we provide.
- 19 Don't use the coffee maker if it's damaged or malfunctions.
- 20 If the mains lead is damaged, return the coffee maker, in order to avoid hazard.

household use only

before using for the first time

Fill the water reservoir to the **max** mark with water and operate the coffee maker without using coffee. When the heating cycle has finished and all the water has passed into the carafe, switch the coffee maker off and unplug it. Discard the hot water and clean the coffee maker (see “care and maintenance”). This should remove any manufacturing dust, etc.

water fill

- 1 Check that both lights are out. If not, press and release the  button till they are.
- 2 If it's just been used, let the coffee maker cool down for at least 10 minutes.
- 3 Fill from the tap:
 - a) put your fingers into the hole in the rear of the reservoir, and pull the top of the reservoir a centimetre or so away from the coffee maker body
 - b) now you can lift the reservoir up and off the coffee maker body
 - c) open the reservoir lid, and fill the reservoir with the required amount of water.
 - d) it's best not to fill the reservoir up to the max mark, as you'll have to carry the reservoir back to the coffee maker without spilling
 - e) close the reservoir lid.
 - f) slide the reservoir down the rear of the coffee maker body, then press the top of the reservoir in towards the coffee maker body, till it clicks into place.
- 4 Fill with a jug:
 - g) lift the reservoir lid
 - h) pour fresh water from a jug into the reservoir
 - i) close the reservoir lid
- 5 Fill the reservoir with at least 2 cups, but don't fill it above the max mark on the curved face of the reservoir.
- 6 Even if you only want one cup of coffee, you'll need to put more than one cup of water into the coffee maker, to allow for evaporation, and the water absorbed by the coffee grounds.

coffee fill

- 7 Open the coffee maker lid, and put ground coffee into the filter. The amount will vary according to individual taste, but we suggest starting with one level tablespoonful of filter-ground coffee per cup of water.
- 8 Close the lid.

prewarm the carafe

- 9 Remove the carafe from the stand.
- 10 Use the lugs on the lid to turn the carafe lid one complete turn anticlockwise, and lift it off the carafe – don't use the pouring lever to turn it, you'll break it.
- 11 Rinse the carafe with hot water, to prewarm it, so it doesn't take heat from the coffee.
- 12 Align the pouring lever with the handle, put the lid on the carafe, and use the lugs to turn the lid one complete turn, to lock it in place.

fit the carafe

- 13 Sit the carafe centrally on the stand. If it's not sitting correctly, it won't push in the anti-drip button, and the filter holder will overflow.

brew strength

14 If you want a lighter brew, turn the brew strength control (on top of the lid) anti-clockwise to lighten the brew.

15 It works by diverting some of the water past the coffee grounds.



 
power up

16 Plug the coffee maker into the power socket (switch the socket on, if it's switchable).

17 The display will light up, AM and PM will flash.

coffee now

18 To make coffee right away:

- a) if you've just plugged the coffee maker in, press the **h** button, to stop the flashing – it doesn't matter what time it shows, as you're not going to use the timer
- b) press and release the  button – once if you've just plugged in, twice if you've used the timer function since the coffee maker was last plugged in
- c) the  light will glow and the coffee maker will start up
- d) hot coffee will drip through the filter into the carafe
- e) when it's done, the  light will go out




 


 
coffee later

19 If you want to use the timer to make coffee later:

set the time now:

- a) press and release the **h** and **min** buttons to set the display to the correct time – keep the buttons pressed to “fast forward” the display
- b) **AM** or **PM** will show at the bottom of the display – check you've got the right one

set the brewing time:

- c) press and release the  button – the  light will flash
- d) press and release the **h** and **min** buttons to set the display to the time you want the coffee to be ready – keep the buttons pressed to “fast forward” the display
- e) **AM** or **PM** will show at the bottom of the display – check you've got the right one
- f) Press and release the  button – the  light will glow, and the display will revert to the correct time
- g) At the time you set, the  light will go out, the  light will glow and the coffee maker will start up.
- h) when it's done, the  light will go out

leave it alone

- i) leave it alone till the preset time comes round, and it makes your coffee – don't fiddle with it, you might upset it

next time

- j) next time you use the coffee maker, remember that the timer has already been set – it'll remember the time set until you unplug it, or set it again

pouring

20 To pour, remove the carafe from the stand, press the pouring lever, and pour from the spout.

21 When you let the pouring lever go, it'll seal the carafe, to keep the heat in.

thermal carafe

- 22 When the coffee maker is done, and the lights are out, you don't need to return the carafe to the stand after pouring.
- 23 As it's a thermal carafe, you can take it with you, into the garden, the garage, next door, wherever you want to go.
- 24 In fair weather conditions, the carafe will keep your coffee hot for about half an hour.

forget the time?

- 25 If you forget what time you've set the timer to, pressing the ⊕ button will change the display to show you the time you've set it to – the ⊕ light will flash.
- 26 You must press the ☞ button after you've done this, to make the ⊕ light glow steadily, or the timer won't start working.

a quick cup

- 27 If you want a quick cup of coffee before the brewing cycle has finished:
- a) remove the carafe, pour, then replace the carafe on the stand, so that it pushes the anti-drip button in
 - b) as you remove the carafe, the anti-drip button will pop out, closing the non-drip valve, to stop coffee dripping on to the hotplate.
 - c) to prevent the filter holder overflowing, replace the carafe within 30 seconds – this may not sound much, but you'll find it's more than enough time to pour a couple of cups of coffee
 - d) when you replace the carafe, it'll push the anti-drip button in, and coffee will flow
- 28 Let the coffee maker and the carafe cool down fully before cleaning or for about 10 minutes before refilling.

general

- 29 Don't leave coffee in the carafe for more than about half an hour, and don't reheat it otherwise it'll become bitter.
- 30 Don't try to reheat coffee by passing it through the coffee maker. The reboiled coffee won't taste very nice, and you'll damage the coffee maker.
- 31 Grease or sediment on coffee making equipment can impair the taste. Make sure the filter, filter holder, and carafe are clean before use; clean them thoroughly after each use.
- 32 Fill with freshly drawn cold water. Let the tap run for a few moments first, particularly first thing in the morning.

coffee

For best results use medium-ground filter coffee. The amount will vary with the type of coffee and your individual taste. We suggest starting with two rounded teaspoons of medium-ground coffee per cup.

milk

Our view is that personal taste should rule, not convention. What we do say is that if you like milk in your coffee, use warm or hot milk, to avoid overcooling the coffee. To extract maximum flavour from the coffee, it should be cool enough not to scald or burn the mouth, but hot enough to let the flavour fill the mouth, sinuses and nose, not just the taste buds.

bottled water

If you use bottled water, make sure it has no added ingredients, flavourings, etc., and use “still” water, not “sparkling”. The carbon dioxide which gives the “sparkle” will adversely affect the flavour of your coffee.

care and maintenance

- 1 Unplug the coffee maker (switch the socket off first, if it's switchable).
- 2 Leave it to cool down fully.
- 3 Wipe the outside of the coffee maker, the underside of the lid, and the inside of the filter housing with a clean damp cloth.
- 4 You can wash the carafe, filter, and filter holder in warm soapy water. Rinse thoroughly afterwards, to remove all trace of soap, then dry.
- 5 To remove the filter holder, simply lift it out of the housing. To replace it, align the tab with the open end of the housing, and drop it into place.

Don't put any part of the coffee maker in a dishwasher.

Don't put the coffee maker in water or any other liquid.

Don't use harsh or abrasive cleaners or solvents.

descaling

Scale build-up will cause the element to overheat, reducing its working life. It may cause the safety cut-out to operate prematurely, switching the coffee maker off before the water boils. It will also lengthen the brewing time.

To minimise scale build-up, empty the reservoir after each use, don't leave water to stand in the coffee maker overnight, and descale the coffee maker regularly. Use a proprietary brand of descaler suitable for use in plastic-bodied products. Follow the instructions on the packet of descaler.


When descaling has finished, empty the carafe and operate the coffee maker twice more with fresh water only. Discard the water, to ensure no chemical residues are left.

In areas of very hard water descaling may be necessary as often as once a month, and it may be necessary to use filtered or descaled water instead of ordinary tap water.

✳ Faults directly related to scale build-up aren't covered under the guarantee. They'll be subject to a repair charge

connection

The product must be earthed. It has a 13A BS1362 fuse in a 13A BS1363 plug. To replace the plug, fit the green/yellow wire to ⊕ or E, the blue wire to N, and the brown wire to L. Fit the cord grip. If in doubt, call an electrician. Don't use a non-rewireable/moulded plug unless the fuse cover is in place. If you remove the plug, dispose of it.

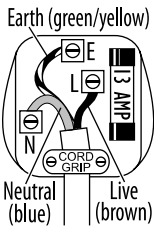

service

If you ring Customer Service, please have the **Model No.** to hand, as we won't be able to help you without it. It's on the rating plate (usually underneath the product). The product isn't user-serviceable. If it's not working, read the instructions, check the plug fuse and main fuse/circuit breaker. If it's still not working, consult your retailer. If that doesn't solve the problem: Pack carefully, with a note of your name, address, day phone number, and what's wrong. If under guarantee, say where and when purchased, and include proof of purchase (till receipt). Send it to Customer Returns (address below right). They'll give you an estimate for inspection/repair.

Customer Service
(correspondence only)
Salton Europe Ltd
Failsworth
Manchester
M35 0HS

Customer Returns
Salton Europe Ltd
Heath Mill Road
Wombourne
Wolverhampton
WV5 8AQ

Customer Service (service@saltoneurope.com)
telephone 0845 658 9700 (local rate number)

guarantee

Defects affecting product functionality appearing within one year of purchase will be corrected by replacement or repair provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected. Documentation, packaging, and product specifications may change without notice.