 


Caffe

TORINO
by
Russell Hobbs



instructions

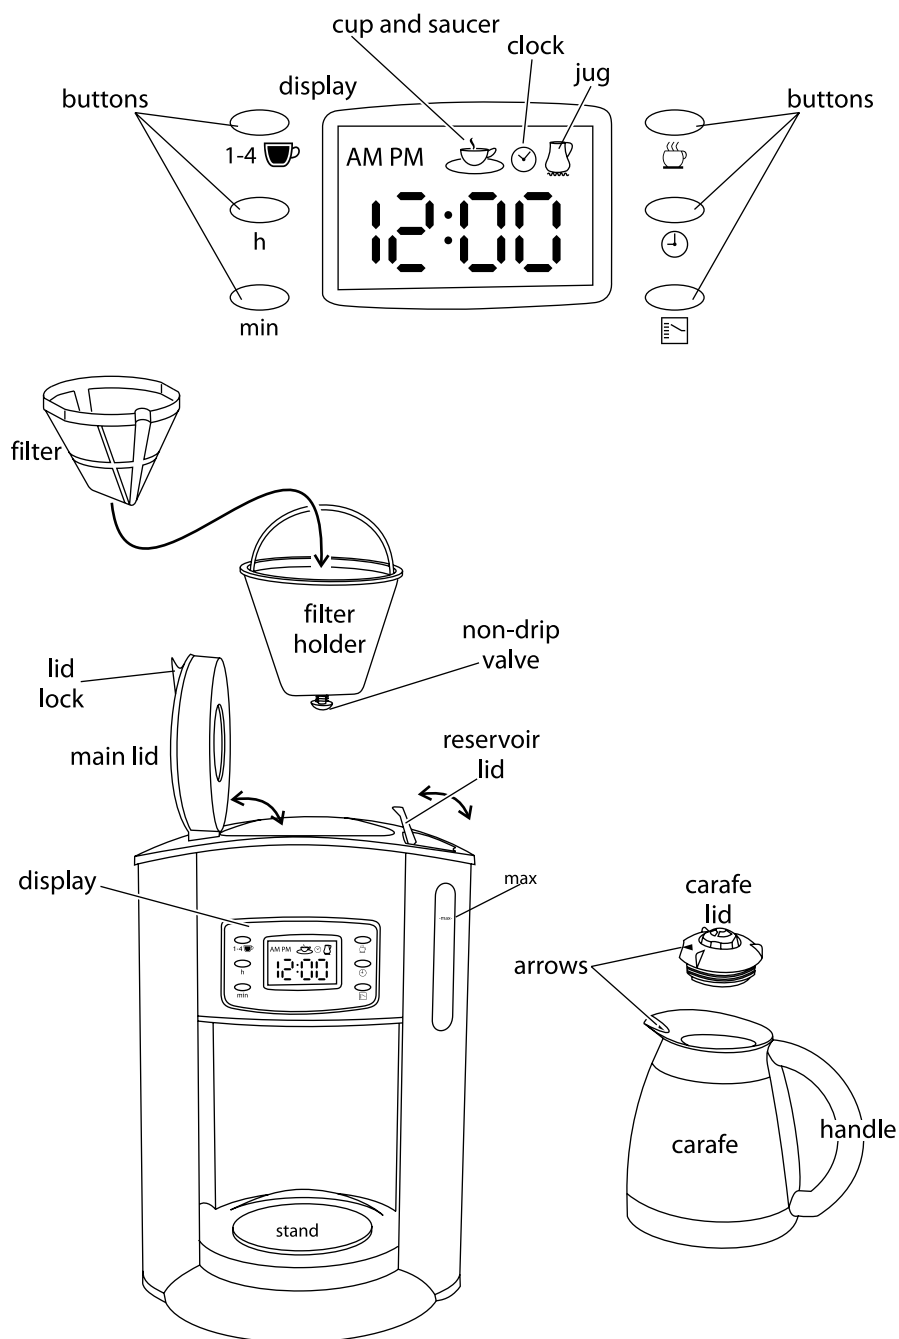




Read these instructions before use and keep them safe. If you pass the coffee maker on, pass on the instructions too.

Remove all packaging, but keep it till you're satisfied that the coffee maker is working.

important safeguards

Follow basic safety precautions, including:



- 1 The coffee maker must only be used by or under the supervision of a responsible adult.
- 2 Don't put the coffee maker in water or any other liquid, don't use it in a bathroom or near a bathtub, basin or any other source of water, and don't use it outdoors. 
- 3 Don't touch hot surfaces e.g. carafe. Use the handle.
- 4 Position the coffee maker on a firm, level, heat-resistant surface, close to a power socket and out of reach of children.
- 5 Take care when pouring – don't over-tilt the carafe.
- 6 Coffee will remain hot for some considerable time after the machine is switched off. This can present a scald hazard – keep the coffee maker, the carafe and the cable away from the edge of worktops and out of reach of children.
- 7 This appliance must not be operated by an external timer or remote control system.
- 8 Route the cable so it doesn't overhang, and can't be tripped over or caught accidentally.
- 9 Unplug the coffee maker when not in use, before moving and before cleaning. Let it cool down fully before cleaning and storing away.
- 10 Don't fill the reservoir past the **max** mark, you won't be able to carry the reservoir without slopping water out of the top.
- 11 Put the carafe on the stand before switching the coffee maker on.
- 12 If you need to stop the coffee maker, you must remove the clock and the jug from the display.
- 13 If either of these symbols are showing:
 - a) press and release the  button to get rid of the clock
 - b) press and release the  button to get rid of the jug
- 14 Before adding water or reusing the coffee maker, let it cool down for 10 minutes.
- 15 Don't use the coffee maker for any purpose other than those described in these instructions.
- 16 Keep the coffee maker and cable away from hotplates, hobs, burners, or any other source of heat.
- 17 Don't twist or kink the cable, and don't wrap it round the coffee maker.
- 18 Don't put the carafe in a microwave oven.
- 19 Don't use accessories or attachments we provide them.
- 20 Don't use the coffee maker if it's damaged or malfunctions.
- 21 If the cable is damaged, return the coffee maker, in order to avoid hazard.

household use only

before using for the first time

Fill the water reservoir to the **max** mark with water and operate the coffee maker without using coffee. When the heating cycle has finished and all the water has passed into the carafe, switch the coffee maker off and unplug it. Discard the hot water and clean the coffee maker (see “care and maintenance”). This should remove any manufacturing dust, etc.

filling

- 1 Check that neither the clock nor the jug are showing at the top right of the display.
- 2 If either of these symbols are showing:
 - a) press and release the  button to get rid of the clock
 - b) press and release the  button to get rid of the jug
- 3 If it's just been used, let the coffee maker cool down for at least 10 minutes.
- 4 Flip open the reservoir lid
- 5 Pour fresh water from a jug into the reservoir
- 6 Fill the reservoir with at least 2 cups, but don't fill it above the max mark on the front of the coffee maker.
- 7 Even if you only want one cup of coffee, you'll need to put more than one cup of water into the coffee maker, to allow for evaporation, and the water absorbed by the coffee grounds.
- 8 Close the reservoir lid.
- 9 Raise the lid lock, and open the main lid.
- 10 Put ground coffee into the filter. The amount will vary according to individual taste, but we suggest starting with one level tablespoonful of filter-ground coffee per cup of water.
- 11 Close the main lid.

prewarm the carafe

- 12 Remove the carafe from the stand.
- 13 Turn the carafe lid a bit more than one complete turn anticlockwise, and lift it off the carafe.
- 14 Rinse the carafe with hot water, to prewarm it, so it doesn't take heat from the coffee.
- 15 Align the arrows on the lid and spout, replace the lid on the carafe, and turn it a bit more than one and a half turns clockwise, to lock it in place – don't over-tighten it.


fit the carafe

- 16 Sit the carafe centrally on the stand. If it's not sitting correctly, it won't push up the anti-drip valve, and the filter holder will overflow.


power up

- 17 Plug the coffee maker into the power socket (switch the socket on, if it's switchable).
- 18 The display will light up.

brew strength

- 19 If you're making 4 cups or less, press and release the 1-4  button – a cup and saucer will appear at the top centre of the display.

coffee now

- 20 To make coffee right away, press and release the  button.
- 21 The jug will appear at the top right of the display.
- 22 Hot coffee will drip through the filter into the carafe.
- 23 When it's done, the jug will disappear.



 
coffee later

- 24 If you want to use the timer to make coffee later:

set the time now:

- a) press and release the **h** and **min** buttons to set the display to the correct time – keep the buttons pressed to “fast forward” the display
- b) **AM** or **PM** will show at the top left of the display – check you've got the right one

set the brewing time:

- c) press and release the  button
- d) press and release the **h** and **min** buttons to set the display to the time you want the coffee to be ready – keep the buttons pressed to “fast forward” the display
- e) **AM** or **PM** will show at the top left of the display – check you've got the right one
- f) press and release the  button – the clock will show at the top right of the display, to remind you that you've set the brewing time
- g) press and release the  button, to return the display to normal time – if you forget, it'll revert to displaying normal time after a few seconds anyway
- h) at the time you set, the clock will disappear, the jug will appear, and the coffee maker will start brewing
- i) when it's done, the jug will disappear

leave it alone

- j) leave it alone till the preset time comes round, and it makes your coffee – don't fiddle with it, you might upset it

next time

- k) next time you use the coffee maker, remember that the timer has already been set – it'll remember the time set until you unplug it, or set it again



pouring

- 25 To pour, remove the carafe from the stand, turn the lid to align the lid arrow with the arrow on the spout, and pour from the spout.
- 26 When you've finished, tighten the lid again, to keep the heat in.

thermal carafe

- 27 When the coffee maker is done, and the jug has disappeared from the display, you don't need to return the carafe to the stand after pouring.
- 28 As it's a thermal carafe, you can take it with you, into the garden, the garage, next door, wherever you want to go.
- 29 In fair weather conditions, the carafe will keep your coffee hot for about half an hour.

forget the time?

- 30 If you forget what time you've set the timer to, pressing the  button will change the display to show you the time you've set it to. You can press  again, or simply leave it – it'll revert to displaying normal time after a few seconds anyway.

a quick cup

- 31 If you want a quick cup of coffee before the brewing cycle has finished:
- a) remove the carafe, pour, then replace the carafe on the stand
 - b) as you remove the carafe, the non-drip valve will close, to stop coffee dripping on to the hotplate
 - c) to prevent the filter holder overflowing, replace the carafe within 30 seconds – this may not sound much, but you'll find it's more than enough time to pour a couple of cups of coffee
 - d) when you replace the carafe, it'll push the non-drip valve up, and coffee will flow
- 32 Let the coffee maker and the carafe cool down fully before cleaning or for about 10 minutes before refilling.

general

- 33 Don't leave coffee in the carafe for more than about half an hour, and don't reheat it otherwise it'll become bitter.
- 34 Don't try to reheat coffee by passing it through the coffee maker. The reboiled coffee won't taste very nice, and you'll damage the coffee maker.
- 35 Grease or sediment on coffee making equipment can impair the taste. Make sure the filter, filter holder, and carafe are clean before use; clean them after each use.
- 36 Fill with freshly drawn cold water. Let the tap run for a few moments first, particularly first thing in the morning.

coffee

For best results use medium-ground filter coffee. The amount will vary with the type of coffee and your individual taste. We suggest starting with two rounded teaspoons of medium-ground coffee per cup.

milk

Our view is that personal taste should rule, not convention. What we do say is that if you like milk in your coffee, use warm or hot milk, to avoid overcooling the coffee. To extract maximum flavour from the coffee, it should be cool enough not to scald or burn the mouth, but hot enough to let the flavour fill the mouth, sinuses and nose, not just the taste buds.

bottled water

If you use bottled water, make sure it has no added ingredients, flavourings, etc., and use "still" water, not "sparkling". The carbon dioxide which gives the "sparkle" will adversely affect the flavour of your coffee.

care and maintenance

- 1 Unplug the coffee maker (switch the socket off first, if it's switchable).
 - 2 Leave it to cool down fully.
 - 3 Wipe the outside of the coffee maker, the underside of the lid, and the inside of the filter housing with a clean damp cloth.
 - 4 You can wash the carafe, filter, and filter holder in warm soapy water. Rinse thoroughly afterwards, to remove all trace of soap, then dry.
- Don't put any part of the coffee maker in a dishwasher.
- Don't put the coffee maker in water or any other liquid.
- Don't use harsh or abrasive cleaners or solvents.

descaling

Scale build-up will cause the element to overheat, reducing its working life. It may cause the safety cut-out to operate prematurely, switching the coffee maker off before the water boils. It will also lengthen the brewing time.

To minimise scale build-up, empty the reservoir after each use, don't leave water to stand in the coffee maker overnight, and descale the coffee maker regularly. Use a proprietary brand of descaler suitable for use in plastic-bodied products. Follow the instructions on the packet of descaler.

When descaling has finished, empty the carafe and operate the coffee maker twice more with fresh water only. Discard the water, to ensure no chemical residues are left. In areas of very hard water descaling may be necessary as often as once a month, and it may be necessary to use filtered or descaled water instead of ordinary tap water.

 
★ Faults directly related to scale build-up aren't covered under the guarantee. They'll be subject to a repair charge.

connection

The product must be earthed. It has a 13A BS1362 fuse in a 13A BS1363 plug. To replace the plug, fit the green/yellow wire to ⊕ or E, the blue wire to N, and the brown wire to L. Fit the cord grip.

If in doubt, call an electrician.

Don't use a non-rewireable/moulded plug unless the fuse cover is in place. If you remove the plug, dispose of it.

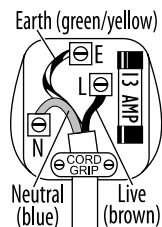

service

If you ring Customer Service, please have the **Model No.** to hand, as we won't be able to help you without it. It's on the rating plate (usually underneath the product).

The product isn't user-serviceable. If it's not working, read the instructions, check the plug fuse and main fuse/circuit breaker. If it's still not working, consult your retailer. If that doesn't solve the problem:

Pack carefully, with a note of your name, address, day phone number, and what's wrong. If under guarantee, say where and when purchased, and include proof of purchase (till receipt). Send it to Customer Returns (address below right).

Customer Service

(correspondence only)

Salton Europe Ltd

Failsworth

Manchester

M35 0HS

Customer Returns

Salton Europe Ltd

Heath Mill Road

Wombourne

Wolverhampton

WV5 8AQ

Customer Service (service@saltoneurope.com)

telephone 0845 658 9700 (local rate number)

guarantee

Defects affecting product functionality appearing within one year of purchase will be corrected by replacement or repair provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected.

Documentation, packaging, and product specifications may change without notice.

online

Hit www.russellhobbs.co.uk for more products.