



Russell Hobbs



SALT & PEPPER MILLS

2 YEAR WARRANTY


RHPK3000

RHPK3000_IB_FA_160115

INSTRUCTIONS & WARRANTY



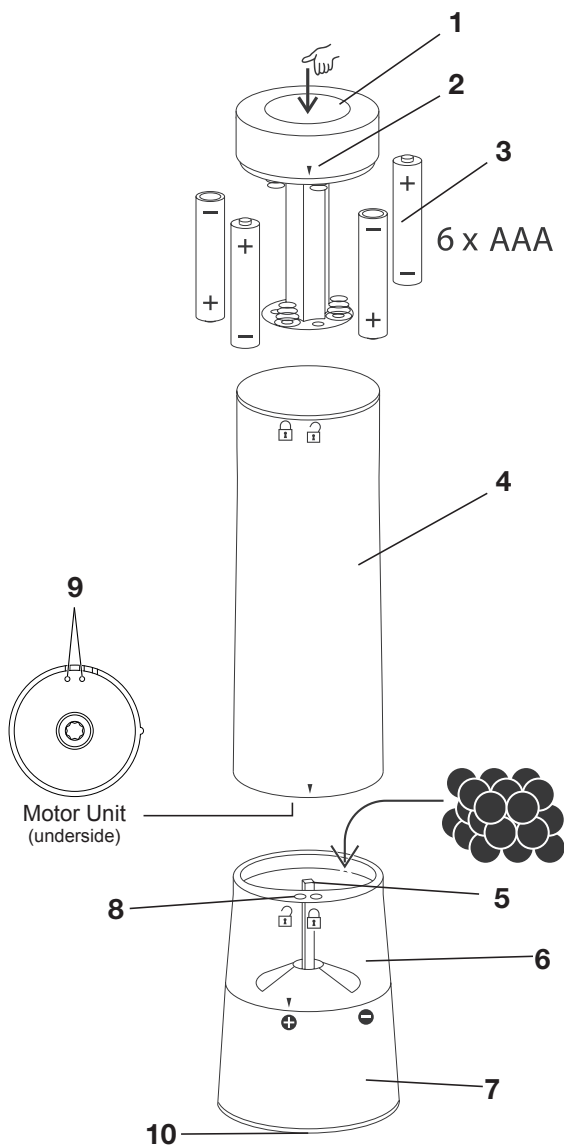

Congratulations on the purchase of your Russell Hobbs appliance. Each unit is manufactured to ensure safety and reliability. Before using the appliance for the first time, please read the instruction booklet carefully and keep it for future reference. Pass it on if you pass on the appliance.

When using electrical appliances, basic safety precautions should always be followed.



1. Switch
2. Battery compartment
3. Batteries (not included)
4. Motor unit
5. Spindle
6. Viewing window
7. Grinder
8. Bulb connection points
9. Brass connection pins
10. LED Light (not pictured)

DISMANTLING

- Grip around the body of the motor unit and clear viewing window.
- Turn the cover to move the pointer ▼ from lock  to unlock .
- Lift the motor unit off the grinder.
- Remove the battery compartment by grasping around the motor unit top and body and turning to move the pointer ▼ from lock  to unlock .





FIT BATTERIES

- For maximum performance, always use good quality batteries.
- Fit 6 AAA batteries (not included) into each motor unit.
- The polarities ("+" & "-") are marked on the battery compartment.


FILL THE GRINDERS

- Ensure you are using grinder quality seasoning.
- Fill the grinders with peppercorns, sea salt, dried herbs or spices.
- Do not overfill; this will cause problems during reassembly.


ASSEMBLING

- Refit the motor unit to the grinder by aligning the pointer ▼ with the unlock  on the clear viewing window.
- Rotate the motor unit moving it into the lock  position.
- Refit the battery compartment by aligning the pointer ▼ with the unlock  on the motor unit. Rotate the battery compartment moving it into the lock  position.

ADJUST THE GRIND

- Tip the whole mill upside down and turn the grinder clockwise towards the negative  for a finer grind.

NOTE: Grind will become progressively finer as you rotate the grinder.

- Tip the mill the right way up and press the switch.
- Check the grind size and if required, readjust to suit by turning the grinder anti-clockwise towards the positive .

NOTE: Do not turn the knob more than 6 complete rotations clockwise towards the "+". This may unscrew the knob from the spindle.

- Do the same for the other mill.

USING THE MILLS

- Hold the mill directly over food to be seasoned and press the switch. The motor will run while the switch is pressed and the light will illuminate.
- Release the switch to stop the motor.

CARE AND MAINTENANCE

- Wipe the outside of the mills with a slightly dampened cloth.
- Wipe any excess seasoning from the underside of the grinders with a dry cloth.
- Check that the light bulb connection points and brass connection pins are clean and clear of any seasoning. Clean with a coarse brush or steel wool, and dust off afterwards.
- Do not use the mills over cooking as moisture from the steam can clog the grinding mechanism.
- If the seasoning becomes damp and/or the mechanism becomes clogged, completely empty the grinder, rotate the grinder to the plus **+** position and wash in warm water. A mild dishwashing detergent may be used.
- Allow the grinder to dry completely before refilling and reassembling.

BATTERIES

- Check that the batteries are fitted correctly - there is a guide inside the battery compartment.
- When you need new batteries, change them all. Do not use new and used batteries together.
- Ensure that you use the same battery type together i.e. alkaline or heavy duty.
- Do not leave batteries fitted in the mills if they are not used regularly. The batteries may leak and damage the mills.
- Only recharge batteries that are specifically designed to be recharged.
- Close the lid.

IMPORTANT SAFEGUARDS

1. Do not immerse the appliance in liquid.
2. Store the appliance away from direct sunlight.
3. Do not use the appliance for any purpose other than those described in this instruction booklet.
4. Do not use the appliance if it is damaged or has malfunctioned.
5. Do not use the mills over cooking as moisture from the steam can clog the grinding mechanism.

SAVE THESE INSTRUCTIONS.

THIS APPLIANCE IS FOR HOUSEHOLD USE ONLY.

Spectrum Brands Australia Pty Ltd
Locked Bag 3004 Braeside
Victoria 3195 Australia
Customer Service in Australia
Toll Free: 1800 623 118
Email: info@spectrumbrands.com.au
Website: www.spectrumbrands.com.au

Spectrum Brands New Zealand Ltd
PO Box 9817 Newmarket
Auckland 1149 New Zealand
Customer Service in New Zealand
Toll Free: 0800 736 776
Email: service@spectrumbrands.co.nz
Website: www.spectrumbrands.co.nz



Spectrum Brands Australia Pty Ltd and Spectrum Brands New Zealand Ltd Warranty Against Defects

In this warranty:

Australian Consumer Law means the Australian consumer law set out in Schedule 2 to the Competition and Consumer Act 2010;

CGA means the New Zealand Consumer Guarantees Act 1993;

Goods means the product or equipment which was accompanied by this warranty and purchased in Australia or New Zealand, as the case may be;

Manufacturer, We or us means:

1. for Goods purchased in Australia, Spectrum Brands Australia Pty Ltd ABN, 78 007 070 573;
or
2. for Goods purchased in New Zealand, Spectrum Brands New Zealand Ltd, as the case may be, contact details as set out at the end of this warranty;

Supplier means the authorised distributor or retailer of the Goods that sold you the Goods in Australia or in New Zealand; and

You means you, the original end-user purchaser of the Goods.

1. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law, or the CGA. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.
2. The benefits provided by this Warranty are in addition to all other rights and remedies in respect of the Goods which the consumer has under either the Australian Consumer Law or the CGA. The original purchaser of the Goods is provided with the following Warranty subject to the Warranty Conditions:
3. We warrant the Goods for all parts defective in workmanship or materials from the date of purchase (Warranty Period), for the period of:-
 - (a) Two (2) years for Russell Hobbs products (see product packaging for details)
 - (b) Two (2) years with five (5) year motor warranty for Russell Hobbs products (see product packaging for details)
 - (c) Limited Lifetime, Ten (10) years for Russell Hobbs cookware.
 - (d) One (1) year for George Foreman.

If the Goods prove defective within the Warranty Period by reason of improper workmanship or material, we may, at our own discretion, repair or replace the Goods without charge.

Warranty Conditions

4. The Goods must be used in accordance with the manufacturer's instructions. This Warranty does not apply should the defect in or failure of the Goods be attributable to misuse, abuse, accident or non-observance of manufacturer's instructions on the part of the user. As far as the law permits, the manufacturer does not accept liability for any direct or consequential loss, damage or other expense caused by or arising out of any failure to use the Goods in accordance with the manufacturer's instructions.
5. Exhaustible components (such as batteries, filters and brushes) of the Goods are included under this Warranty only where there is a defect in workmanship or materials used.
6. The warranty granted under clause 3 is limited to repair or replacement only.
7. Any parts of the Goods replaced during repairs or any product replaced remain the property of the manufacturer. In the event of the Goods being replaced during the Warranty Period, the warranty on the replacement Goods will expire on the same date as for the Warranty Period on the original Goods which are replaced.
8. In order to claim under the warranty granted under clause 3 you must:
 - (a) Retain this warranty with your receipt/proof of purchase; and
 - (b) Return the Goods to us at the relevant address or to the Supplier by prepaid freight within the Warranty Period accompanied with (i) the legible and unmodified original proof of purchase, which clearly indicates the name and address of the Supplier, the date and place of purchase, the product name or other product serial number and (ii) this warranty.
9. This warranty is immediately void if:
 - (a) Any serial number or appliance plate is removed or defaced;
 - (b) The Goods have been serviced or otherwise repaired by a person not authorised to do so by us or where non approved replaced parts are used.
10. The Goods are designed for domestic use only. A limited 90-day Warranty applies to any industrial or commercial use of the Goods. The Goods must be connected to the electrical voltage requirements as specified in the ratings label located on the Goods.
11. This warranty does not cover the cost of claiming under the warranty or transport of the Goods to and from the Supplier or us.
12. This warranty is only valid and enforceable in Australia against Spectrum Brands Australia Pty Ltd and in New Zealand against Spectrum Brands New Zealand Ltd.

Contact us or the Supplier for further details.

Register your product online

If you live in Australia please visit: www.spectrumbrands.com.au/warranty

If you live in New Zealand Please visit: www.spectrumbrands.co.nz/warranty

Registration of your warranty is not compulsory, it gives us a record of your purchase AND entitles you to receive these benefits: Product information; Hints and tips; Recipes and news; Information on special price offers and promotions.

Any questions? Please contact Customer Service for advice.



www.russellhobbs.com.au

www.russellhobbs.co.nz

RUSSELL HOBBS and logo are Trade Marks of Spectrum Brands, Inc., or one of its subsidiaries.
Manufactured in China to Spectrum Brands specifications. ©2014 Spectrum Brands, Inc.