

 
 


 
 
 
Russell Hobbs®

 
 
A BRITISH ICON SINCE 1952

RHCM2876

 www.russellhobbs.com.au
www.russellhobbs.co.nz

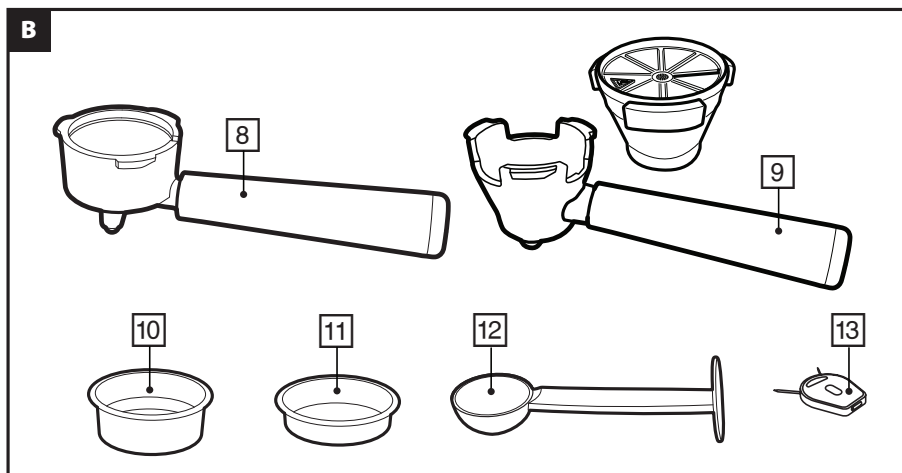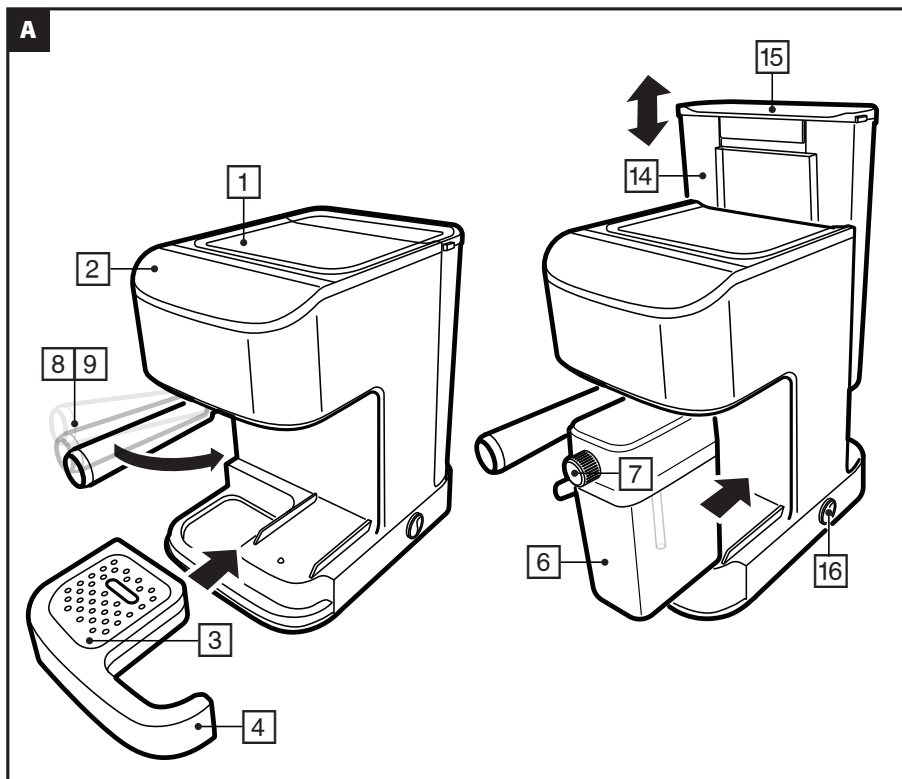

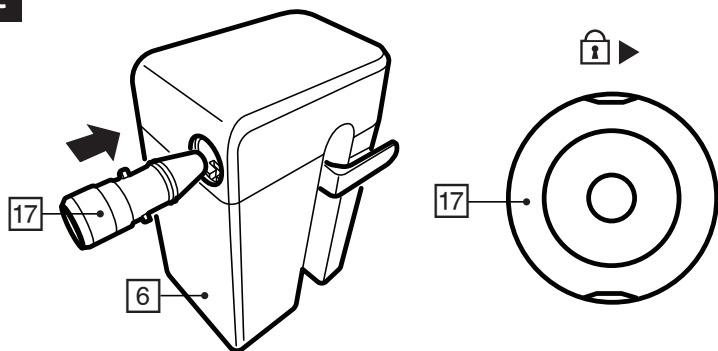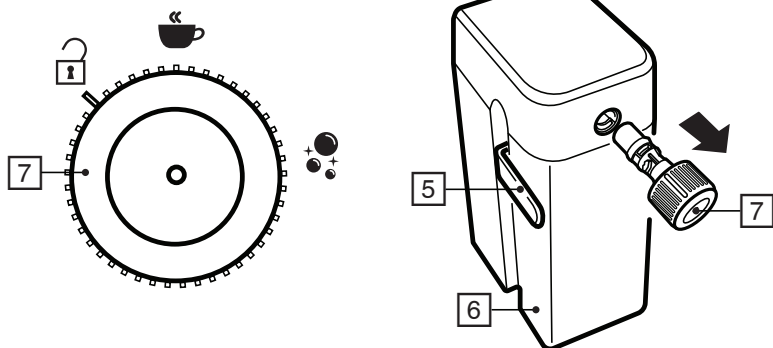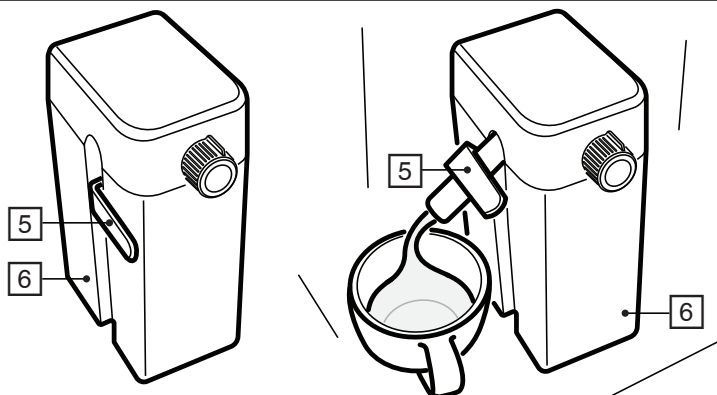C**D****E**

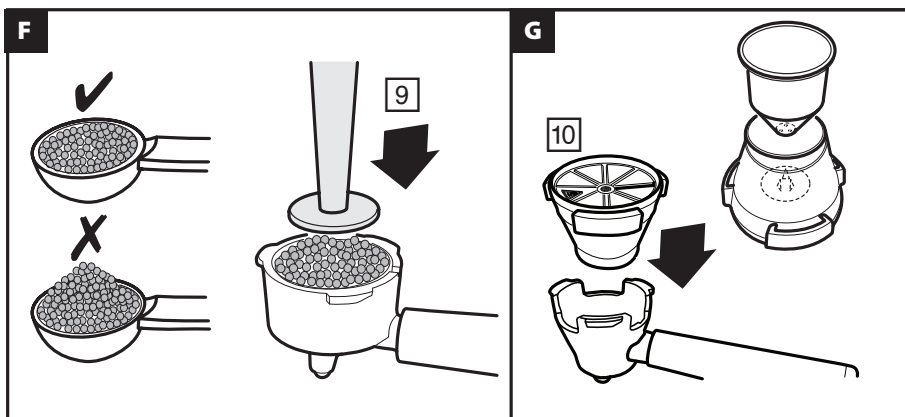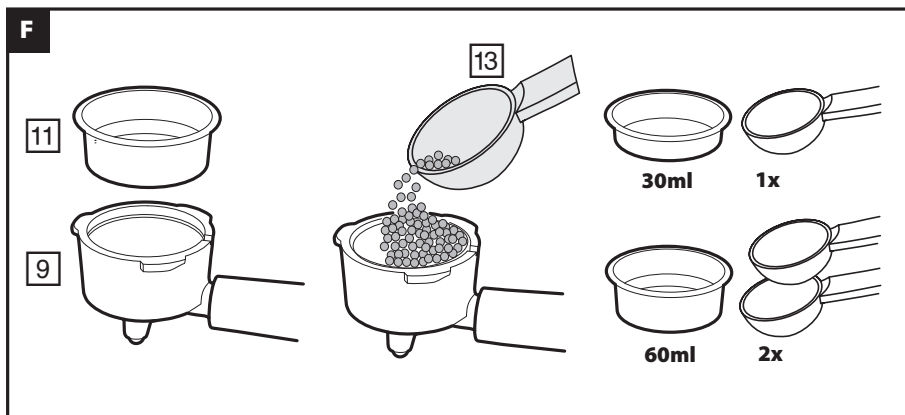

Before First Use

	Read the instructions and retain for future reference.
---	--

Intended Use

	Household use only
	Do not use outdoors

Specification

Power Rating (W)	1350
Operating voltage (V)	220-240, 50/60Hz

Important Safeguards

When using an electrical appliance, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury, including the following:

- Do not use the appliance for any purpose other than those described in these instructions.
- Do not operate the appliance if it's damaged or malfunctions.
- Do not use accessories or attachments other than those we supply.
- Do not leave the appliance unattended while plugged in.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children shall not play with the appliance.
- Cleaning and user maintenance should not be made by children without supervision.
- Keep the appliance and power cord out of reach of children or persons with reduced physical, sensory and mental capabilities.
- Misuse of the appliance may cause injury.
- The coffee-maker shall not be placed in a cabinet during use.
- If the cable is damaged, it must be replaced by the manufacturer, its service agent, or someone similarly qualified, to avoid hazard.
- The surface of the heating element is subject to residual heat after use.
- Use the appliance according to these instructions. Any misuse may cause potential injury, electric shock or other hazards.
- Clean the product and all other accessories after each use.
- Sit the appliance on a stable, level, heat-resistant surface.
- Do not use the appliance if it is damaged or malfunctions.
- CAUTION - To prevent damage to the appliance, do not use

aggressive cleaning agents when cleaning. Use a soft cloth and a mild detergent.

- CAUTION - Do not use the appliance if the enclosure is damaged or has visible cracks.
- This appliance is not intended to be operated by means of an external timer or separate remote control system.
- This appliance is intended to be used in household and similar applications such as:
- staff kitchen areas in shops, offices and other working environments;
- by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments;
- farm houses.
- For added safety, electrical appliances should be connected to a power outlet that is protected by a residual current device (RCD / 'Safety Switch') having a rated residual operating current not exceeding 30mA. Your switchboard may already incorporate an RCD. If unsure, call an electrician for verification and fitting if necessary.

Warning Symbol Glossary

	Do not use this unit near bathtubs, showers, basins or other vessels containing water.
	The surfaces of the unit will get hot. Residual heat will keep the surfaces hot after use.
	Use Caution. Sharp objects
	Do not immerse in any liquid

Parts List

1	Cup warming plate	
2	Function Buttons	
3	Drip tray cover	
4	Removable drip tray	
5	Milk Nozzle	
6	Milk Tank	
7	Milk Control Dial	
8	Portafilter	
9	Portafilter for capsules	
10	2 shot sieve	

11	1 shot sieve	
12	Measure/tamper	
13	Cleaning tool	
14	Water tank	
15	Water tank lid	
16	On/Off Switch	
17	Milk Tank valve	
Function Buttons		
	Single Espresso	
	Double Espresso	
	Latte	
	Cappucino	
	Cortado	
	Macchiato	
	Flat White	
	Clean	

Before First Use

Wash:

3	Drip tray cover
6	Milk Tank
7	Milk Control Dial
9	Portafilter
10	2 shot sieve
11	1 shot sieve
12	Measure Tamper
14	Water Tank

in warm soapy water. Rinse and dry.

- Clean the unit by filling and running the unit without coffee.

Milk Control Dial Glossary

Dial Position	Function
	Remove Milk Control Dial
	Milk Frothing
	Clean Mode

Audio feedback

This unit plays audio to indicate button presses.

Holding:

Latte
Cortado

together will toggle audio feedback on/off.

Filling Water Tank

Important Never operate the unit without water and below minimum level marker.

Remove:

14	Water tank
-----------	------------

- Lift the:

15	Water tank lid
-----------	----------------

- Fill the with cold, fresh water observing the max marking.
- Refit (Fig. A). Ensure it is correctly fitted and fully seated.

Priming

- Assemble an empty portafilter onto the unit.
- Install the Milk Tank. Make sure that the Milk Tank is assembled and Water Tank is filled.
- Run the Latte function 3x minimum, or until water runs from the portafilter.

Auto Shut-off Mode

After 25 minutes of inactivity, the unit will enter standby mode. Press any button or toggle the on/off switch to turn it back on.

Default/Pre-Heat Mode

The unit goes to Default Mode when switched on, or when you press any button in Standby Mode.

When the unit enters Default Mode and the unit is not at brewing temperature, all indicators will flash only if the Milk Tank is installed. Only the espresso functions will flash if Milk Tank is not installed.

When the unit reaches the correct brewing temperature, all indicators will remain illuminated.

Auto Espresso Mode

Button	Action
Single Espresso or Double Espresso	Press

Auto Brew Mode

The unit will automatically froth the milk and then adds the espresso for the following:

Latte
Cappuccino
Cortado
Macchiato
Flat White

Fill:

6	Milk Tank
----------	-----------

with milk up to the max line, replace the lid, and insert the tank into the unit.

Note An audible click confirms the Milk Tank is installed correctly.

To remove the milk tank:

- Lift the front of the tank up.
- Pull the tank away from the unit.

The drink functions will light up once the tank is fully in place. Milk functions will flash if pre-heating is required.

Place cup onto the drip tray, ensuring both:

8	Portafilter
5	Milk Nozzle

are directed to the cup to avoid spills.

Select and press beverage from:

2	Function Buttons
----------	------------------

When using Auto Brew Mode, we recommend to use **Short Clean Cycle** after each use. There is no requirement to remove milk from the milk tank.

Manual Brew

Press and hold:

Button	Action	Seconds
Single Espresso or Double Espresso	Press + Hold	3

When desired amount is reached, release the button.

To manually steam/froth milk:

Button	Action
Latte	Press + hold to activate
	Release to de-activate

Pre-set Volume Settings

Press and hold together:

Button	Seconds
Single Espresso + Double Espresso	5

A tone will sound. The one-shot icon and the two-shot icon will flash. To adjust the volume for the single espresso preset or the double espresso preset, do the steps that follow:

- Press and hold the applicable function button.
- Keep the button pressed until the machine gives the quantity that you want.
- The machine will make coffee while you press the button.

Release the button to save the updated preset volume. All indicators will flash 3 times to confirm the updated setting.

To return to the factory default settings.

Button	Action	Seconds
Clean	Press + Hold	5

Note Preset volumes will apply to all drinks.

Exit Pre-set Mode

Button	Action	Seconds
Single Espresso + Double Espresso	Press + Hold	5

or,

Button	Action
On/Off Switch	Press

Brew Temperature Error

If you try to start a brew function before the unit gets to the correct brew temperature:

- All lights flash three times.
- The unit goes back to the preheat mode.

Milk Tank Error

If you try to start a milk-based function and the milk tank is not installed correctly, these indicators will flash 3x.

Latte
Cappucino
Cortado
Macchiato

Flat White

Note An audible click confirms the Milk Tank is installed correctly.

To remove the milk tank:

- Lift the front of the tank up.
- Pull the tank away from the unit.

Empty Water Tank Error

If the unit detects no flow during brewing, the unit cancels the brew function.

- All lights flash three times.
- The unit goes back to the standby mode.

The unit must be primed again if there is an attempted operation without water in the tank.

Short Clean Cycle

Important This function should be used after each use of milk based drinks.

You do not need to remove the milk from the milk tank during the cleaning cycle.

Rotate:

Button	Position
Milk Control Dial	

Place a cup under the milk nozzle before you start the operation.

To start clean cycle, Press:

Button
Clean

The unit will dispense steam/hot water for 20 seconds through Milk Nozzle.

Clean Warning

After 200 uses, the unit shows a clean warning.

The clean icon will:

- Flash three times.
- Remain on.

A Full Clean Cycle must be initiated.

Cancel Clean Warning

To cancel the clean warning press:

Button	Seconds
Single Espresso + Flat White	3

Full Clean Cycle

Descaler must be placed in the water tank and a large vessel should be placed under the portafilter and milk nozzle. Allow the tank to fully run through water.

Dial	Action	Position
Milk Control Dial	Rotate	

Button	Action	Seconds
Clean	Press + Hold	5

To cancel:

Button
Clean

Fill tank with plain water and repeat clean cycle.

When the cycle is complete, the unit goes back to default mode.

- It preheats if necessary.
- It removes the clean warning.

Cleaning & Maintenance

- Unplug the unit and allow to cool.
- Disassemble the Milk Tank, referencing all parts to be disassembled on the lid of the tank.
- Remove the portafilter and sieve and empty out the coffee grounds.

Wash under running water and dry thoroughly.

- Use the cleaning tool to unblock the openings in the portafilter.
- The sieves, drip tray and drip tray cover can be cleaned in a dishwasher.

Recycling

Legislation in some localities mandates that e-waste (anything with a plug, battery or cord) is disposed of through controlled recycling facilities and must not be disposed of in general household waste. For more information about recycling of electrical and battery operated appliances, please contact your local council or your local household waste disposal service.

Customer Services

Spectrum Brands Australia Pty Ltd

Locked Bag 3004 Braeside
Victoria 3195 Australia

Customer Service in Australia

TollFree: 1800 623 118

Email: [consumer.enquiry@](mailto:consumer.enquiry@russellhobbs.com.au)

russellhobbs.com.au

Website: www.spectrumbrands.com.au

Spectrum Brands New Zealand Ltd

PO Box 9817 Newmarket
Auckland 1149 New Zealand

Customer Service in New Zealand

Toll Free: 0800 736 776

Email: info@russellhobbs.co.nz

Website: www.spectrumbrands.co.nz

Warranty

Spectrum Brands Australia Pty Ltd and Spectrum Brands New Zealand Ltd Warranty Against Defects

In this warranty:

Australian Consumer Law means the Australian consumer law set out in Schedule 2 to the Competition and Consumer Act 2010;

CGA means the New Zealand Consumer Guarantees Act 1993;

Goods means the product or equipment which was accompanied by this warranty and purchased in Australia or New Zealand, as the case may be;

Manufacturer, We or us means:

1. for Goods purchased in Australia, Spectrum Brands Australia Pty Ltd ABN, 78 007 070 573; or
2. for Goods purchased in New Zealand, Spectrum Brands New Zealand Ltd, as the case may be, contact details as set out at the end of this warranty;

Supplier means the authorised distributor or retailer of the Goods that sold you the Goods in Australia or in New Zealand; and

You means you, the original end-user purchaser of the Goods.

1. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law, or the CGA. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

2. The benefits provided by this Warranty are in addition to all other rights and remedies in respect of the Goods which the consumer has under either the Australian Consumer Law or the CGA. The original purchaser of the Goods is provided with the following Warranty subject to the Warranty Conditions:

3. We warrant the Goods for all parts defective in workmanship or materials for a (Warranty Period) period of 2 years from the date of purchase.

If the Goods prove defective within the Warranty Period by reason of improper workmanship or material, we may, at our own discretion, repair or replace the Goods without charge.

Warranty Conditions

4. The Goods must be used in accordance with the manufacturer's instructions. This Warranty does not apply should the defect in or failure of the Goods be attributable to misuse, abuse, accident or non-observance of manufacturer's instructions on the part of the user. As far as the law permits, the manufacturer does not accept liability for any direct or consequential loss, damage or other expense caused by or arising out of any failure to use the Goods in accordance with the manufacturer's instructions.

5. Exhaustible components (such as batteries, filters and brushes) of the Goods are included under this Warranty only where there is a defect in workmanship or materials used.

6. The warranty granted under clause 3 is limited to repair or replacement only.

7. Any parts of the Goods replaced during repairs or any product replaced remain the property of the manufacturer. In the event of the Goods being replaced during the Warranty Period, the warranty on the replacement Goods will expire on the same date as for the Warranty Period on the original Goods which are replaced.

8. In order to claim under the warranty granted under clause 3 you must:

- (a) Retain this warranty with your receipt/proof of purchase; and
- (b) Return the Goods to us at the relevant address or to the Supplier by prepaid freight within the Warranty Period accompanied with (i) the legible and unmodified original proof of purchase, which clearly indicates the name and address of the Supplier, the date and place of purchase, the product name or other product serial number and (ii) this warranty.

9. This warranty is immediately void if:

- (a) Any serial number or appliance plate is removed or defaced;
- (b) The Goods have been serviced or otherwise repaired by a person not authorised to do so by us or where non approved replaced parts are used.

10. The Goods are designed for domestic use only. The Goods must be connected to the electrical voltage requirements as specified in the ratings label located on the Goods.

11. This warranty does not cover the cost of claiming under the warranty or transport of the Goods to and from the Supplier or us.

12. This warranty is only valid and enforceable in Australia against Spectrum Brands Australia Pty Ltd and

in New Zealand against Spectrum Brands New Zealand Ltd.

Register your product

Registration of your product is for marketing purposes only, not warranty registration.

If you live in Australia, please visit:

<https://au.russellhobbs.com/product-registration>

If you live in New Zealand, please visit:

<https://www.russellhobbs.co.nz/product-registration>

Registration entitles you to receive these benefits: Product information; Hints and tips; Recipes and news; Information on special price offers and promotions.

Please retain your receipt as proof of purchase for any warranty claims.

Any questions? Please contact Customer Service for advice.

Troubleshooting

Issue	Cause	Fix
No espresso is made	Empty or low Tank	Fill observing max line
	Portafilter or sieve is blocked.	Remove and clean.
	Grind is too fine or coarse.	Grind the coffee to the correct consistency.
	Too much tamping pressure was used.	Empty sieve and re-add coffee using less tamping pressure.
	Unit needs to be primed	Prime unit
Porta-filter Leaking	Not correctly seated	Refit ensure it is locked in position
Portafilter fitment	Too much coffee in the sieve.	Use the supplied measuring spoon/ tamper as directed.
	Debris around the portafilter fitting.	Clean the area where the portafilter fits.
No milk dispensed or poor frothing quality	Possible loose connection. Milk Nozzle is clogged. Insufficient milk in reservoir.	Fully clean all parts. Ensure Milk Control Dial is set to  position.

