

 
 
 
 
 


Russell Hobbs

A BRITISH ICON SINCE 1952

RHTOV25

www.russellhobbs.com.au
www.russellhobbs.co.nz

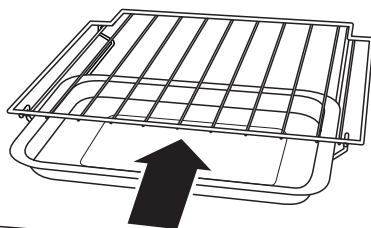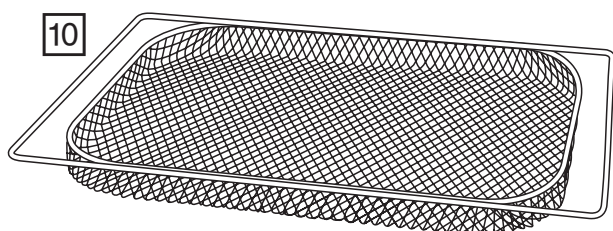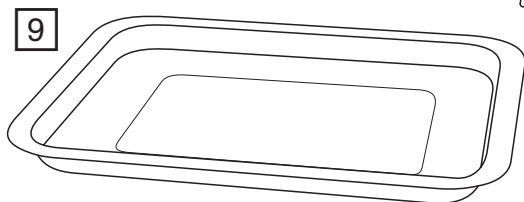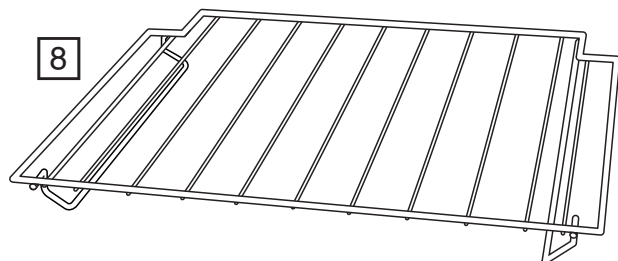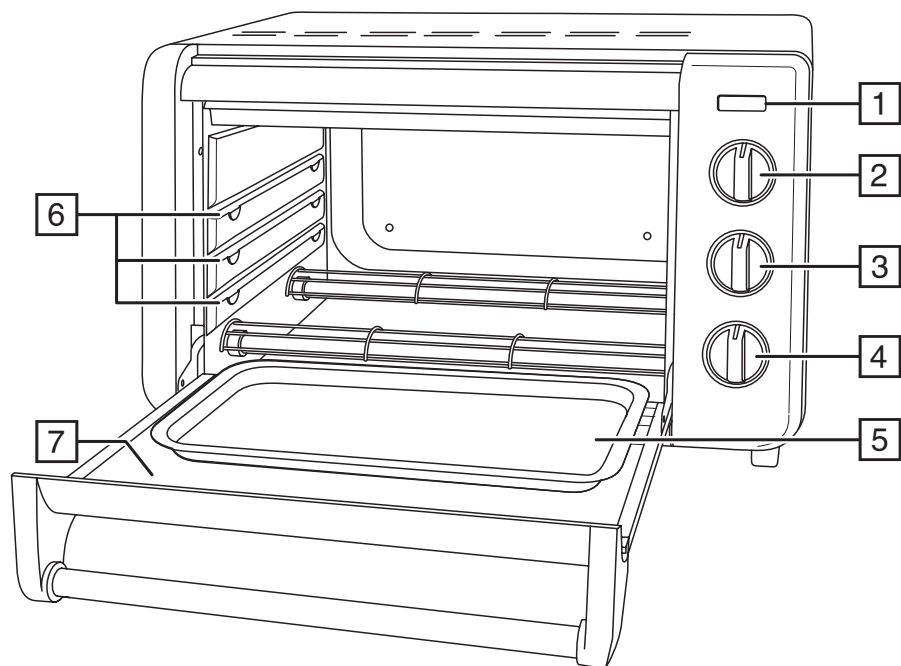

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including:

- ⚡ To protect against electrical hazards do not immerse the power cord, plug or toaster oven in water or any other liquid.
- 1. Do not use in the bathroom or near any source of water.
- 2. Do not use outdoors.
- 3. Always use the appliance's handles or use oven gloves/mitts as some parts will be hot.
- 4. The temperature of accessible surfaces/parts may become very hot when the appliance is operating and may remain hot for some time after the appliance has been switched off.
- 5. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- 6. Keep the toaster oven and the power cord away from the edge of table or countertops and out of reach of children and persons with reduced physical, sensory or mental capabilities.
- 7. This appliance is not a toy. Children should be supervised to ensure they do not play with the appliance.
- 8. Do not leave this appliance unattended when in use.
- 9. Always switch off and unplug from the power outlet when not in use.
- 10. Always switch off and unplug from the power outlet and allow the toaster oven to cool before cleaning.
- 11. To disconnect, set controls to OFF. Switch off the wall power outlet, then grasp the plug and remove from wall power socket. Never pull by the cord.
- 12. Do not operate this appliance with a damaged cord/plug or after the appliance has malfunctioned, or been dropped or damaged in any manner. Contact Customer Service for replacement, examination, repair or adjustment.
- 13. There are no user serviceable parts. If power cord or appliance is damaged, it must be replaced by the manufacturer or similarly qualified person in order to avoid a hazard.
- 14. Do not use on an inclined plane or unstable surface.
- 15. Do not move the toaster oven while it is switched on.
- 16. Do not cover the toaster oven when in use.
- 17. Oven gloves should be used when removing food items.
- 18. Always take care when removing hot food items from the toaster oven.
- 19. Food may burn. Always monitor when using this appliance.
- 20. Heat rises from the toaster oven when in use. To avoid possible damage, do not use directly below overhead cupboards.
- 21. Do not use the toaster oven near or below any curtains or other combustible materials.
- 22. Do not cook food items too large for the toaster oven.
- 23. Do not use the toaster oven without the crumb tray fitted.
- 24. Do not cook food wrapped in plastic film or polythene bags. It will cause a fire hazard.
- 25. Do not place on or near any heat sources.

26. Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electric shock.
27. Follow the instructions when cleaning this appliance.
28. Do not use appliance for anything other than its intended purpose.
29. Do not store any material, other than manufacturer's recommended accessories, in this toaster oven when not in use.
30. Do not place any of the following materials in the oven: paper, cardboard, plastic, and the like.
31. Clean the toaster oven and crumb tray regularly. Failure to do so may cause a fire hazard.
32. Do not cover crumb tray or heating elements with metal foil.
33. This appliance is not intended to be operated by means of an external timer or separate remote control system.
34. For added safety, electrical appliances should be connected to a power outlet that is protected by a residual current device (RCD), also often referred to as a 'Safety Switch'. Your switchboard may already incorporate an RCD. If unsure, call an electrician for verification and fitting if necessary.
35. The appliance must be disconnected from the wall power outlet and allowed to cool down before cleaning any surfaces including internal racks and crumb tray.
36. This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments;
 - farm houses.

CAUTION: Do not leave toaster oven unattended when in operation. Food ignition may occur. If this happens, unplug unit but DO NOT open door. To reduce the risk of fire, keep oven interior completely clean and free of food residues, oil, grease and any other combustible materials.

CAUTION: A fire may occur if the toaster oven is covered or touching flammable materials including curtains, draperies, walls and the like when in operation or after, when still hot. Do not place any of the following materials in the toaster oven, on top of the toaster oven, or in contact with the toaster oven sides or bottom surfaces: paper, cardboard, plastic or the like.

SAVE THESE INSTRUCTIONS



HOT SURFACE:

The areas with the hot surface symbol may be hot during and after appliance use.

Use caution when touching these areas, as there is a burn risk. Wear protective gloves for protection when possible.

PARTS

- | | |
|---|-----------------------|
| 1. Light | 6. Shelf supports |
| 2. Temperature/Cooking function control | 7. Glass door |
| 3. Timer 1 - Warm/Bake/Grill/Air fry | 8. Wire shelf |
| 4. Timer 2 - toast | 9. Bake pan/drip tray |
| 5. Crumb tray | 10. Air fry mesh rack |

BEFORE USING FOR THE FIRST TIME

Remove all packing material and any stickers. Wash all removable parts in warm soapy water. Leave enough space (150 mm) around the unit to allow heat to flow without damage to adjacent cabinets and walls.

Your oven may smoke a little the first time you use it. This is normal and will soon disappear.

GENERAL OPERATION

TO TURN ON

1. For cooking functions, use the Temperature/Cooking function control to select a temperature, or cooking mode (**toast**, **airfry**, **grill**). Next, select a cooking time using Timer 1, or select the '**stay on**' setting.
2. For toasting, set the Temperature/Cooking function control to the '**toast**' setting. Next, select the toast shade using Timer 2.





TO TURN OFF

- Rotate the timers to the '**O**' position and the Temperature/Cooking function control to the '**min**' position.

IMPORTANT INFORMATION

- This appliance gets hot. When in use, always use oven gloves or pot holders when touching any outer or inner surface of the appliance.
- You must set the timer or use the 'stay on' setting for the toaster oven to function.
- Be sure food or the baking dish does not come within 40 mm of the top heating elements.
- Fit the bake pan/drip tray as required below greasy or fatty foods. Food should not extend beyond the edges of the tray to avoid drippings from falling onto the heating elements where it may cause smoke and be difficult to clean.

TOASTING

1. Set the Temperature/Cooking function control to the **toast** position.
2. Open the door and insert the wire shelf in the bottom slot.
3. Place items to be toasted directly onto the wire shelf and close the door.
4. Turn Timer 2 clockwise to the middle () and then clockwise or counterclockwise to set the desired toast shade (, , ).
5. The light will come on and remain on until the toasting cycle is complete.
- NOTE: Watch the toast to ensure the desired level of browning is obtained. The Timer 2 control can be adjusted to extend or reduce the toasting time, or moved to the off (**O**) position at any time.
6. When the toast cycle is complete, there will be an audible signal. The light will turn off.
7. Using oven gloves, open the door and slide the shelf outward, just far enough to remove the food.
8. Unplug appliance when not in use.
- NOTE: The Timer 2 control must be set for the toaster oven to operate.

GRILLING

- When grilling, preheat for 5 minutes. For optimal results use top shelf position. Be sure food or baking dish does not come within 40 mm of the top heating element.
- 1. Set temperature selector knob to **grill**.
- 2. Set the Timer 1 control to 20 then turn it clockwise or counterclockwise to the desired cooking time. Select **stay on** to cook longer than 60 minutes or to control cooking time manually. The light will come on and remain on until the cooking is complete.
- NOTE: You must set the Timer 1 to a time or to the **stay on** setting for the oven to function.
- 3. Once the oven is preheated, open the door and insert the food. Close the door.
- 4. If you have set a time, there will be an audible signal once cooking is complete. The oven will turn off and the light will go out. If you are not using the timer (**stay on**) you must manually turn the appliance off once cooking is finished to your satisfaction.
- 5. Using oven gloves, open the door and slide the wire shelf outward, just far enough to remove the food.
- 6. Unplug appliance when not in use.

AIR FRY

Air Fry technology uses high intensity hot air which browns and crisps the food with little or no oil. Use the suggested cooking times shown in the table below or follow the recommended cooking guidelines on the product. Remember that air frying is different from conventional oven cooking so you may need to adjust the cooking time to achieve the best results.

NOTE: it is not necessary to preheat the oven for air frying.

NOTE: Arrange the food in a single layer on the mesh rack for the best results.

1. Place the food onto air fry mesh rack
2. Open the door and slide the air fry mesh rack into the middle or lower position.
3. Set the Temperature/Cooking function control to the **airfry** position
4. Set the Timer 1 control to 20 then turn it clockwise or counterclockwise to the desired cooking time. Select **stay on** to cook longer than 60 minutes or to control cooking time manually. The light will come on and remain on until the cooking is complete.
- NOTE: You must set the Timer 1 to a time or to the **stay on** setting for the oven to function.
5. If you have set a time, there will be an audible signal once cooking is complete. The oven will turn off and the light will go out. If you are not using the timer (**stay on**) you must manually turn the appliance off once cooking is finished to your satisfaction.
6. Using oven gloves, open the door and slide the rack outward, just far enough to remove the food.
- NOTE: Clean out the crumb tray frequently when using the air fry setting.
7. Unplug the appliance when not in use.

SUGGESTED AIRFRY COOKING TIMES

The following times should be used purely as a guide. Check food is cooked through before serving. If in doubt, cook it a bit more. Cook poultry, pork, burgers, etc., until the juices run clear.

Food	Quantity/Weight	Time (minutes)
FROZEN		
Chicken nuggets	24 max.	10-14 or until cooked through
Chicken strips	14 max.	15-20 or until cooked through
Fish fingers	16 max.	10-14 or until cooked through
Breaded onion rings	500 g max.	10-14 or until golden brown
Potato croquettes	20 max.	12-18 or until golden brown

Food	Quantity/Weight	Time (minutes)
Potato wedges	600 g max.	14-18 or until golden brown
Sweet potato fries	400 g max.	10-14 or until golden brown
French-fries	400 g max.	10-14 or until golden brown
Chunky chips	800 g max.	20-25 or until golden brown
Chips	600 g max.	18-24 or until golden brown
Pizza		10-16. Rotate 180° halfway through cooking for even cooking
FRESH		
Chips	550 g max.	22-27 or until browned and crisp
Potato wedges	600 g max.	20-25 or until browned and crisp
Sweet potato chips	500 g max.	17-22 or until browned and crisp

BAKING

For best results, when baking or cooking, always preheat the oven for at least 10 minutes at the desired temperature setting. For optimal results use the middle or lower shelf position.

1. Set the Temperature/Cooking function control to the temperature required.
2. Set the Timer 1 control to 20 then turn it clockwise or counterclockwise to the desired cooking time. Select **stay on** to cook longer than 60 minutes or to control cooking time manually. The light will come on and remain on until the cooking is complete.
- NOTE: You must set the Timer 1 to a time or to the **stay on** setting for the oven to function.
3. Once the oven has preheated, open the door and insert the food. Close the door.
4. If you have set a time, there will be an audible signal once cooking is complete. The oven will turn off and the light will go out. If you are not using the timer (**stay on**) you must manually turn the appliance off once cooking is finished to your satisfaction.
5. Using oven gloves, open the door and slide the rack outward, just far enough to remove the food.
6. Unplug appliance when not in use.

CARE AND MAINTENANCE

1. Clean the glass door with a damp cloth or sponge dipped in warm to hot soapy water. Do not use a spray glass cleaner. Wipe clean with a soap free damp cloth to remove residual suds and streaks from the glass.
2. Wash the wire rack in warm to hot soapy water. Rinse and dry thoroughly.
3. Wash the bake pan/drip tray/air fry mesh rack in warm to hot soapy water. Rinse and dry thoroughly.
4. If any food is baked onto the wire rack or bake pan/drip tray/air fry mesh rack, soak in warm to hot soapy water for 1 hour before cleaning. Use a sponge or soft cleaning brush to remove stains. Rinse and dry thoroughly.
5. Clean the exterior with a damp cloth.

CRUMB TRAY

1. When the device is cool enough to touch safely, slide out the crumb tray.
2. Dispose of crumbs and wipe tray with a damp cloth. Dry thoroughly before refitting.

DISPOSAL/RECYCLING

Legislation in some localities mandates that e-waste (anything with a plug, battery or cord) is disposed of through controlled recycling facilities and must not be disposed of in general household waste. For more information about recycling of electrical and battery operated appliances, please contact your local council or your local household waste disposal service.

Spectrum brands Australia Pty Ltd

Locked Bag 3004 Braeside
Victoria 3195 Australia

Spectrum Brands New Zealand Ltd

PO Box 9817 Newmarket
Auckland 1149 New Zealand

Customer Service in Australia

TollFree: 1800 623 118

Email: info@spectrumbrands.com.au

Website: www.spectrumbrands.com.au

Customer Service in New Zealand

TollFree: 0800 736 776

Email: service@spectrumbrands.co.nz

Website: www.spectrumbrands.co.nz

Spectrum Brands Australia Pty Ltd and Spectrum Brands New Zealand Ltd Warranty Against Defects

In this warranty:

Australian Consumer Law means the Australian consumer law set out in Schedule 2 to the Competition and Consumer Act 2010;

CGA means the New Zealand Consumer Guarantees Act 1993;

Goods means the product or equipment which was accompanied by this warranty and purchased in Australia or New Zealand, as the case may be;

Manufacturer, We or us means:

1. for Goods purchased in Australia, Spectrum Brands Australia Pty Ltd ABN, 78 007 070 573; or
2. for Goods purchased in New Zealand, Spectrum Brands New Zealand Ltd, as the case may be, contact details as set out at the end of this warranty;

Supplier means the authorised distributor or retailer of the Goods that sold you the Goods in Australia or in New Zealand; and

You means you, the original end-user purchaser of the Goods.

1. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law, or the CGA. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.
2. The benefits provided by this Warranty are in addition to all other rights and remedies in respect of the Goods which the consumer has under either the Australian Consumer Law or the CGA. The original purchaser of the Goods is provided with the following Warranty subject to the Warranty Conditions:
3. We warrant the Goods for all parts defective in workmanship or materials for a (Warranty Period) period of 2 years from the date of purchase.

If the Goods prove defective within the Warranty Period by reason of improper workmanship or material, we may, at our own discretion, repair or replace the Goods without charge.

Warranty Conditions

1. The Goods must be used in accordance with the manufacturer's instructions. This Warranty does not apply should the defect in or failure of the Goods be attributable to misuse, abuse, accident or non-observance of manufacturer's instructions on the part of the user. As far as the law permits, the manufacturer does not accept liability for any direct or consequential loss, damage or other expense caused by or arising out of any failure to use the Goods in accordance with the manufacturer's instructions.
2. Exhaustible components (such as batteries, filters and brushes) of the Goods are included under this Warranty only where there is a defect in workmanship or materials used.
3. The warranty granted under clause 3 is limited to repair or replacement only.
4. Any parts of the Goods replaced during repairs or any product replaced remain the property of the manufacturer. In the event of the Goods being replaced during the Warranty Period, the warranty on the replacement Goods will expire on the same date as for the Warranty Period on the original Goods which are replaced.
5. In order to claim under the warranty granted under clause 3 you must:
 - (a) Retain this warranty with your receipt/proof of purchase; and
 - (b) Return the Goods to us at the relevant address or to the Supplier by prepaid freight within the Warranty Period accompanied with (i) the legible and unmodified original proof of purchase, which clearly indicates the name and address of the Supplier, the date and place of purchase, the product name or other product serial number and (ii) this warranty.
6. This warranty is immediately void if:
 - (a) Any serial number or appliance plate is removed or defaced;
 - (b) The Goods have been serviced or otherwise repaired by a person not authorised to do so by us or where non approved replaced parts are used.
7. The Goods are designed for domestic use only. The Goods must be connected to the electrical voltage requirements as specified in the ratings label located on the Goods.
8. This warranty does not cover the cost of claiming under the warranty or transport of the Goods to and from the Supplier or us.
9. This warranty is only valid and enforceable in Australia against Spectrum Brands Australia Pty Ltd and in New Zealand against Spectrum Brands New Zealand Ltd.

Contact us or the Supplier for further details.

Register your product online

If you live in Australia please visit: www.spectrumbrands.com.au/warranty

If you live in New Zealand Please visit: www.spectrumbrands.co.nz/warranty

Registration of your warranty is not compulsory, it gives us a record of your purchase AND entitles you to receive these benefits: Product information; Hints and tips; Recipes and news; Information on special price offers and promotions.

Any questions? Please contact Customer Service for advice.

