



Russell Hobbs



30L MICROWAVE OVEN

1 YEAR WARRANTY

RHMO302

INSTRUCTIONS & WARRANTY

IMPORTANT SAFEGUARDS

General Safeguards

1. To protect against electrical hazards do not immerse the power cord, plug, or microwave oven in water or any other liquid.
2. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
3. This appliance is not a toy. Children shall be supervised to ensure they do not play with the appliance.
4. Do not operate this appliance with a damaged cord/plug or after the appliance has malfunctioned or has been dropped or damaged in any manner.
5. There are no user serviceable parts. If the power cord or appliance is damaged, it must be replaced/repaired by a qualified person in order to avoid a hazard.
6. Utensils should be checked to ensure that they are suitable for use in microwave ovens. To check whether or not a utensil is suitable, please refer to the "Microwave Safe Containers/Utensils" section.
7. Do not use corrosive chemicals or vapours in this appliance.
8. Do not use this microwave for commercial purposes. This microwave oven is made for household use only.
9. This microwave oven is specifically designed to heat or cook food. It is not designed for industrial or laboratory use.
10. The microwave oven has several built-in safety switches to ensure that the power remains off when the door is open. Do not tamper with these switches.
11. Do not use the microwave oven cavity for storage purposes. Do not store combustible items such as bread, cookies, paper products etc. inside the oven.
12. Do not use the microwave oven for the purpose of dehumidification. Do not dry clothes, newspapers or other materials in the microwave oven. They may catch on fire.
13. Do not heat warming pads, slippers, sponges, damp cloth or similar materials as it may lead to risk of injury, ignition or fire.
14. Do not store flammable materials next to, on top of, or in the microwave oven. It could be a fire hazard.
15. Always turn off and unplug from the power outlet before cleaning the appliance.
16. Failure to maintain the microwave oven in a clean condition could lead to deterioration that could adversely affect the life of the appliance and possibly result in a hazardous situation.
17. When cleaning door and microwave oven surfaces, use only mild, non-abrasive soaps or detergents applied with a sponge or soft cloth. The heating of corrosive chemicals in this microwave oven may create microwave radiation leaks.
18. To disconnect, set the switch on the wall power outlet to OFF, then grasp the plug and withdraw it from the wall socket. Never pull by the cord.
19. Do not use appliance for other than its intended purpose as described in the Instruction Manual.

20. This appliance is not intended to be operated by means of an external timer or separate remote control system.
21. Do not leave the microwave oven unattended when in use.

Location of Microwave Oven

1. Install or locate this microwave oven only in accordance with the installation instructions provided.
2. Do not use in the bathroom or near any source of water.
3. Plug into a wall socket that is properly installed and grounded.
4. Do not use on an inclined plane or unstable surface.
5. Do not use the microwave oven near or below any curtains or other combustible materials.
6. The microwave oven shall not be placed in a cabinet.
7. Minimum height of free space necessary above the top surface of the microwave oven is 30cm.
8. A minimum of 20cm is required between the microwave oven and any adjacent walls. One side must be open.
9. The microwave oven must be placed on a countertop with a minimum height of 85cm.
10. Do not move the microwave oven while it is switched on.
11. Do not cover or block any vents on the microwave oven.
12. Do not store or use this appliance outdoors.
13. Keep cord away from heated surfaces.
14. Do not cover the microwave oven when in use.
15. Keep the microwave oven and the power cord away from the edge of table or countertops and out of reach of children and persons with reduced physical, sensory or mental capabilities.
16. Do not place on or near any hot or damp surface.
17. Do not install microwave oven over a range cook-top or other heat-producing appliance. If installed near or over a heat source, the microwave oven could be damaged.

Food

1. Do not overcook food.
2. The turntable and turntable ring assembly must be in the oven during cooking in all cooking modes. Place the cookware gently on the turntable and handle it carefully to avoid possible breakage.
3. Do not operate the microwave oven unless there is food or liquid content inside. Operating the oven with no food or food that is extremely low in moisture can cause fire, charring or sparking.
4. Incorrect use of browning dish may cause the turntable to break.
5. Do not cook food directly on the turntable. Excessive local heating of the turntable may cause the turntable to break.
6. Do not use newspaper or paper bags for cooking.

7. Do not cook food wrapped in paper towels, unless your cook book contains instructions, for the food you are cooking.
8. Remove wire twist ties and metal handles from paper or plastic containers / bags before placing them in the microwave oven.
9. Only use the rack when operating in Grill or Convection cooking mode. Never use in conjunction with the Microwave function as this may cause arcing.
10. Do not attempt to deep fry in your microwave oven.
11. Do not attempt home canning in this microwave oven, as it is impossible to be sure all contents of the jar have reached boiling temperature.
12. Carefully attend the appliance when paper, plastic or other combustible materials are placed inside the microwave oven to facilitate cooking. When heating food in plastic or paper containers, check the microwave oven frequently due to the possibility of ignition.
13. Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating has ended.
14. Potatoes, apples, egg yolks, chicken wings, whole squash and sausages are examples of foods with non-porous skins. This type of food must be pierced before cooking to prevent bursting.
15. SCALDING HAZARD! Liquids, such as water, coffee or tea are able to be overheated beyond the boiling point without appearing to be boiling. Visible bubbling or boiling when the container is removed from the microwave oven is not always present. This could result in very hot liquids suddenly erupting when the container is disturbed or a spoon or other utensil is inserted into the liquid. Care must be taken when handling the container.
16. Stir liquids both before and halfway through heating for best results.
17. After heating, allow the container to stand in the microwave oven for a short time.
18. Use extreme care when inserting a spoon or other utensil into the container.
19. Liquids or other food must not be heated in narrow necked or sealed containers since they are liable to explode.
20. If smoke is observed, switch off and unplug the appliance and keep the door closed in order to stifle any flames.
21. The contents of feeding bottles and baby food jars are to be stirred or shaken and the temperature is to be checked before consumption, in order to avoid burns.
22. Always monitor when food is heated or cooked in disposable containers of plastic, paper or other combustible materials due to the possibility of ignition or of the food container deteriorating.
23. Always take care when removing food items as it is hot.
24. Do not attempt to cook items that are too large for the microwave oven.

SAVE THESE INSTRUCTIONS

THIS APPLIANCE IS INTENDED TO BE USED IN HOUSEHOLD AND SIMILAR APPLICATIONS SUCH AS:

- Staff kitchen areas in shops, offices and other working environments;
 - farm houses;
- by clients in hotels, motels and other residential environments;
 - bed and breakfast type environments.

Only use accessories supplied with the microwave oven

IMPORTANT SAFETY INSTRUCTIONS

READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

(a) Do not attempt to operate this microwave oven with the door open as this can result in harmful exposure to microwave energy. The door is fitted with safety interlock switches that prevent the microwave oven from operating with the door open.

DO NOT tamper with or attempt to override the safety interlocks.

(b) Do not place any object between the microwave oven front face and the door, or allow food or cleaner residues to accumulate on sealing surfaces.

WARNING

a) Do not operate the microwave oven if it is damaged in any way.

It is particularly important that the microwave oven door closes properly and that there is no damage to the:

- 1. DOOR (bent)***
- 2. HINGES AND LATCHES (broken or loosened)***
- 3. DOOR SEALS AND SEALING SURFACE***

b. The microwave oven should not be adjusted or repaired by anyone except properly qualified service personnel.

c. Liquids and other foods must not be heated in sealed containers as they are liable to explode.

IF MATERIALS INSIDE THE MICROWAVE OVEN IGNITE:

1. Keep the microwave oven door closed to contain and stifle any flames.
2. Turn the microwave oven off and remove the plug from the wall power outlet.

Please ensure cooking times are correctly set as overcooking may result in the FOOD catching fire and subsequent damage to your microwave oven.

Read these instructions before using your microwave oven. Keep this booklet in a safe place for future reference. When using electrical appliances, basic safety precautions should always be followed. For additional safety information, please refer to the "Important Safeguards" section.

GENERAL USE

MICROWAVE SAFE CONTAINERS / UTENSILS

The glass plate, turntable ring assembly and turntable shaft must remain installed for use for all cooking modes.

Tightly-closed containers can explode. Closed containers must be opened and plastic pouches must be pierced before cooking.

To test a container / utensil for safe microwave oven use:

Add 1 cup of cool water to a heat resistant glass jug and place it in the microwave oven alongside the empty container/utensil to be tested; heat for one (1) minute at maximum power.

If the container/utensil you are testing is microwave oven safe (transparent to microwave energy) it should remain comfortably cool, the water in the glass jug should be hot. If the container/utensil being tested is hot, it has absorbed some microwave energy and should NOT be used.

This test is not applicable for plastic items. Check the markings on plastic items to ensure they are microwave safe.

CAUTION: Personal Injury Hazard. Use an oven mitt or tea towel when handling containers and utensils that have been heated in the microwave.

Cookware	Microwave
Glass plate, Turntable ring assembly and Turntable shaft (provided)	Yes
Heat-Resistant Glass	Yes
Non Heat-Resistant Glass	No
Heat-Resistant Ceramics	Yes
Microwave-Safe Plastic Dish	Yes
Kitchen Paper/Paper towel	Yes
Metal Tray/Tin	No
Metal Rack	No
Aluminium Foil & Foil Container	No

***** CAUTION: Microwaving with the metal rack, tray, foil, etc. may cause arcing / sparks.***

MATERIALS YOU CAN USE IN THIS MICROWAVE OVEN

NOTE: Always try to use items labelled as microwave safe to minimise any uncertainty.

Aluminium foil

Shielding only. Use only small amounts of foil to wrap or cover thinner sections of meat or poultry, for example, the small end of a shank or the wings of a chicken, to prevent overcooking. Ensure the foil is securely attached to the item being shielded and fold all edges and corners down neatly to prevent possible arcing. Sparks can occur if foil is too close to microwave oven walls. The foil must be at least 2.5cm (1 inch) away from microwave oven walls.

Browning dish

Follow browning dish manufacturer's instructions.

NOTE: An overly hot browning dish sitting directly on the glass turntable could cause the turntable to break!

Dinnerware

Microwave-safe only. Follow manufacturer's instructions. Do not use cracked or chipped dishes.

Glassware

Heat-resistant oven glassware only. Make sure there is no metallic trim. Do not use cracked or chipped dishes. Confirm glassware is heat-resistant before using in the microwave oven.

Oven cooking bags

Follow manufacturer's instructions. Do not close with metal tie. Make slits to allow steam to escape.

Paper plates and cups

Use for short-term cooking/warming only. Do not leave microwave oven unattended while cooking. Do not place waxed or recycled paper items in the microwave.

Paper towels

Use to cover food for reheating and absorbing fat. For short-term cooking only. Do not leave unattended while cooking.

Parchment paper

Use as a cover to prevent splattering or a wrap for steaming.

Plastic

Microwave-safe only. Follow the manufacturer's instructions. Should be labelled "Microwave Safe". Some plastic containers soften as the food inside gets hot. "Boiling bags" and tightly closed plastic bags should be slit, pierced or vented as directed by package.

Plastic wrap

Microwave-safe only. Use to cover food during cooking to retain moisture.

Thermometers

Microwave-safe only (meat and candy thermometers).

MATERIALS TO BE AVOIDED IN MICROWAVE OVEN

Aluminium tray

May cause arcing. Transfer food into microwave-safe dish.

Food carton with metal handle

May cause arcing. Transfer food into microwave-safe dish.

Metal or metal trimmed utensils

Metal shields the food from microwave energy. Metal trim may cause arcing.

Metal twist ties

May cause arcing and could cause a fire in the microwave oven.

Paper bags

May cause a fire in the microwave oven.

Recycled paper products

Unless the paper product is labelled as microwave safe. Recycled paper products may contain impurities which may result in sparks and/or fires when used.

Plastic foam

Plastic foam may melt or contaminate the liquid inside when exposed to high temperatures.

Wood

Wood will dry out when used in the microwave oven and may split or crack.

Ceramic


Do not use ceramic containers which have metallic inlays.

SETTING UP YOUR MICROWAVE OVEN

NAMES OF MICROWAVE OVEN PARTS AND ACCESSORIES

Remove the microwave oven and all materials from the carton and oven cavity. Your microwave oven comes with the following accessories:


- Glass turntable x 1
- Turntable ring assembly x 1
- Turntable shaft x 1
- Instruction manual x 1

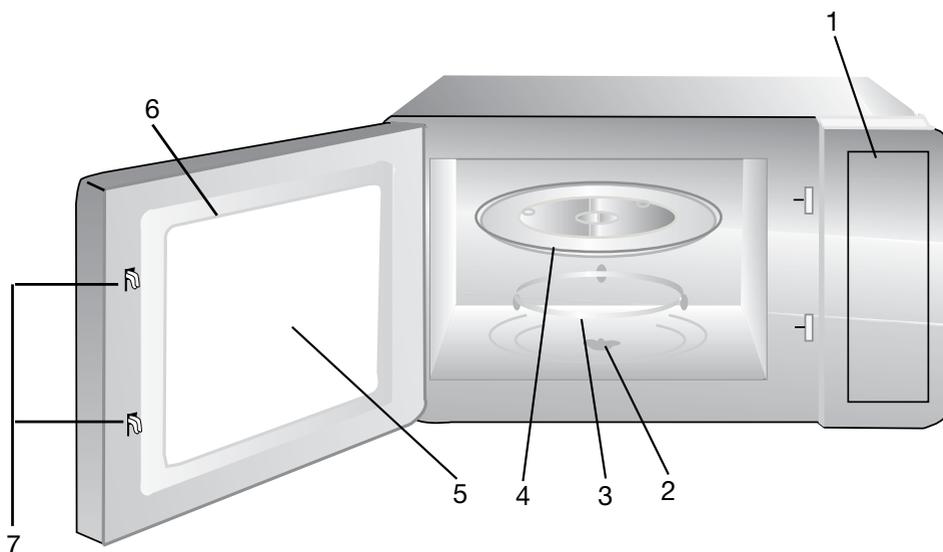

- | | |
|----------------------------|----------------------------|
| 1. Control panel | 5. Observation window |
| 2. Turntable shaft | 6. Door assembly |
| 3. Turntable ring assembly | 7. Safety interlock system |
| 4. Glass turntable | |

TURNTABLE INSTALLATION

- a. Never place the glass turntable upside down. The glass turntable movement should never be restricted.
- b. Both glass turntable and turntable ring assembly must always be used during cooking.
- c. All food and containers of food are always placed on the glass turntable for cooking.
- d. Do not use the microwave if the glass turntable or turntable ring assembly cracks or breaks. Contact Customer Service.

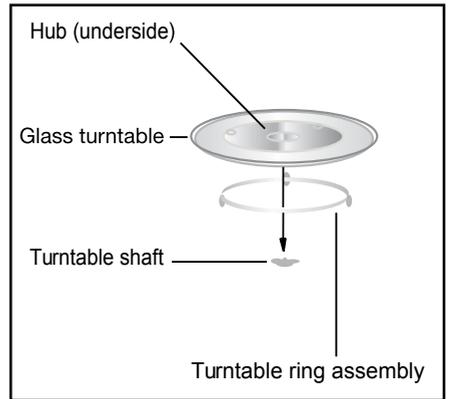

COUNTERTOP INSTALLATION


Remove all packing material and accessories.

Examine the microwave oven for any damage such as dents or a broken door. Do not install if microwave oven is damaged in any way.

Cabinet: Remove any protective film found on the microwave oven cabinet and control panel surfaces. Do not remove the light brown Mica cover that is attached to the inside of the microwave oven cavity. This is required to protect the magnetron.

INSTALLATION


1. Select a level surface that provides enough open space for the intake and/or outlet vents.
2. The minimum installation height is 85cm.
3. The rear surface of the appliance shall be placed against a wall.
4. A minimum clearance of 30cm is required above the microwave oven.
5. A minimum clearance of 20cm is required between the microwave oven and any adjacent walls.
6. Do not remove the legs from the bottom of the microwave oven.
7. Blocking the intake and/or outlet vents can damage the microwave oven.
8. Place the microwave oven as far away from radios and television sets as possible. Operation of microwave oven may cause interference to your radio or TV reception.
9. Plug your microwave oven into a standard household outlet. Be sure the voltage and the frequency is the same as the voltage and the frequency on the rating label.

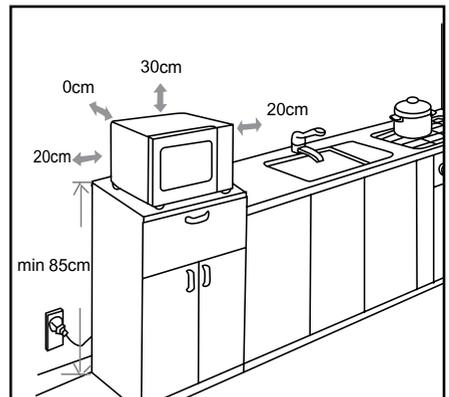

WARNING: Do not install microwave oven over a range cook top or other heat-producing appliance. If installed near or over a heat source, the microwave oven could be damaged and the warranty would be void. The microwave oven is designed for bench-top use only and must not be placed in a cabinet.

OPERATION

1. Microwave Oven Functions: Time Cook, Timer Defrost, Weight Defrost, Power, Clock, Timer
2. Automatic Cooking Functions: Popcorn, Potato, Pizza, Frozen Veggies, Beverage & Dinner Plate
3. Power levels, including Express Cook 1-6
4. Stop/Cancel
5. 0/Memory
6. Start/+30sec.
7. LED Display

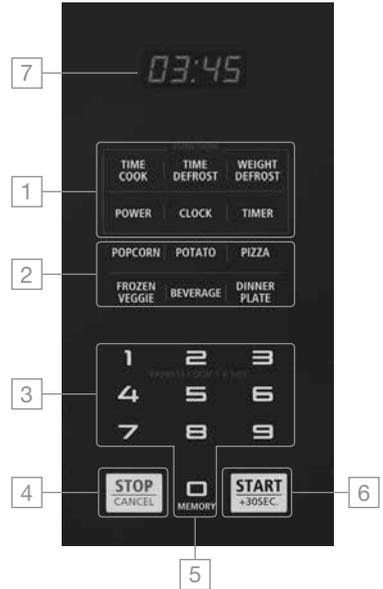

CONTROL PANEL AND FEATURES

CLOCK SETTING

NOTE: The clock operates in 24 hour time only. The input time should be between 00:00--12:59.

1. Press 'CLOCK' once. The LED screen will display 00:00.
2. Use the number keys to set the correct time. Enter the numbers in sequence. For example, to enter the time 10:12, press "1,0,1,2" in order.
3. Press 'CLOCK' to complete setting the time.

NOTE: In the process of setting the clock, if the 'STOP/CANCEL' button is pressed OR after a period of inactivity for 1 minute, the microwave oven will revert to the former setting automatically.

TIMER

NOTE: This is a countdown timer only and does not control or start any cooking modes. During the Kitchen Timer function, other programs cannot be selected.

1. Press 'TIMER' twice. The LED screen will display 00:00 with the leftmost "0" flashing.
2. Press the number keys and enter the required time in minutes and seconds. For example, to set the timer for 3mins 30secs, enter 0,3,3,0. For 10mins, enter 1,0,0,0. For 1hr 30mins, enter 90 minutes as 9,0,0,0 (the maximum time is 99 minutes and 99 seconds).
3. Press 'START/+30SEC' to confirm the setting and start the timer.
4. When the set time has elapsed, the unit will sound 5 times and the LED screen will return to idle mode.

MICROWAVE COOKING

Ten power levels are available for Microwave cooking:

Level	10	9	8	7	6	5	4	3	2	1	0
Power	100%	90%	80%	70%	60%	50%	40%	30%	20%	10%	0%
Display	PL10	PL9	PL8	PL7	PL6	PL5	PL4	PL3	PL2	PL1	PL0

When 'START/+30SEC' is pressed the microwave will immediately begin cooking at 100% power (this is the default power). To set a lower power level:

1. Press 'TIME COOK' once. The LED screen will display "00:00".
2. Set the time by pressing the number keys to enter the required cooking time in minutes and seconds. For example, to cook for 1min 30secs, enter 1,3,0. To cook for 15 minutes, enter 1,5,0,0. To cook for 1hr 15 minutes, enter 75 minutes as 7,5,0,0 (the maximum time is 99 minutes and 99 seconds).
3. Press 'POWER' once. The LED screen will display "PL10". The default cooking power is 100% power. Press the number keys to adjust the desired power level.
4. Press 'START/+30SEC' to begin cooking.

NOTE: Press 'STOP/CANCEL' once to pause the unit and twice to cancel the operation. Cooking time may also be increased in 30 second increments by pressing 'START/+30SEC' repeatedly.

EXAMPLE: cooking food with 50% microwave power for 15 minutes.

1. Press 'TIME COOK'. The LED screen will display '00:00'.
2. Press 1, 5, 0, 0 in order.
3. Press 'POWER', then press '5' to select 50% microwave power.
4. Press 'START/+30SEC.' to start cooking.

NOTE: In the process of setting, if the 'STOP/CANCEL' button is pressed or if there is no operation within 1 minute, the microwave oven will go back to the former setting automatically.

EXPRESS COOK: NUMBER KEYS 1-6

NOTE: The maximum cooking time is 99 minutes and 99 seconds.

- 30 seconds express cooking (100% power level): Press 'START/+30SEC.' to start cooking for 30 seconds. Each time the 'START/+30SEC.' button is pressed, the cooking time will be increased by 30 seconds. For example, press 'START/+30SEC.' twice to cook for 1 minute.

NOTE: when using Microwave Cooking and Time Defrost, cooking time can be increased by pressing 'START/+30SEC.' button.

- 1-6 minutes express cooking (100% power level): select the cooking time by pressing the desired number key from 1 to 6 on the control panel (1 = 1minutes; 6 = 6 minutes). Then, press 'START/+30SEC.' to increase the cooking time by 30 seconds, if food is not cooked enough.

DEFROST BY TIME

1. Press the 'TIME DEFROST' key once then the LED screen will display 'dEF2'.
2. Set the defrost time by pressing the number keys to enter the required defrosting time in minutes and seconds. For example, to cook for 1 min 30 secs, enter 1,3,0. To defrost for 15 minutes, enter 1,5,0,0. To defrost for 1hr 15 minutes, enter 75 minutes as 7,5,0,0 (the maximum time is 99 minutes and 99 seconds).

NOTE: The default power level is level 3. To change the power level, press 'POWER', the LED screen will display 'PL 3'. Set the desired power level by pressing the corresponding number key.

3. Press 'START/+30SEC' to begin defrosting. The defrost time is displayed and will count down on the LED screen.

DEFROST BY WEIGHT

1. Press 'WEIGHT DEFROST' twice and 'dEF1' will appear on the LED screen.
2. Press the number keys to enter weight of food item to be defrosted. Enter a weight range between 100~2000g.

NOTE: Any input smaller than 100g or greater than 2000g will be invalid.

3. Press 'START/+30SEC' to begin defrosting. The defrost time is displayed and will count down on the LED screen.

NOTE: You can open the door to check your food. Open the door and then press 'START/+30SEC' to resume defrosting.

AUTOMATIC COOKING FUNCTIONS

When cooking food using this function, there is no need to set the power level or cooking time as it is already pre-set into the microwave unit.

POPCORN

1. Press 'POPCORN' repeatedly until the required weight appears on the LED screen.
2. Press 'START/+30SEC' to start cooking.
3. When cooking is complete, 5 beeps will sound and the LED screen will return to idle mode.

Important:

When selecting 100g bag of popcorn, it is recommended to fold down a triangle on each corner of the bag before cooking (A).

If the popcorn bag expands and no longer rotates properly, press 'STOP/CANCEL', open the unit door and reposition the bag to ensure even cooking (B).



POTATO

Potato mode will automatically cook potatoes based on the quantity you select. You can cook up to 3 potatoes at a time.

1. Press 'POTATO' repeatedly until the number required appears on the LED screen.

NOTE: The potato quantity has a corresponding weight:

Times (press 'Potato')	Weight	Display	Time
Once	230g in total - 1 or more potatoes	1	5 mins
Twice	460g in total - 2 or more potatoes	2	8 mins
Three times	690g in total - 3 or more potatoes	3	10 mins 30 secs

2. Press 'START/+30SEC' to start cooking.
3. When the cooking is complete, 5 beeps will sound, and the LED screen will return to idle mode.

PIZZA

Pizza mode will automatically cook pizza based on the weight you select:

Times (press 'Pizza')	Weight
Once	100g
Twice	200g
Three times	400g

1. Press 'PIZZA' repeatedly until the required weight appears on the LED screen.
2. Press 'START/+30SEC' to start cooking.
3. When cooking is complete, 5 beeps will sound, and the LED screen will return to idle mode.

FROZEN VEGGIE

Frozen Veggie mode will automatically cook fresh vegetables according to the weight of the food you set. You can select a weight (see below) and the microwave will automatically set the power and time for cooking.

Times (press 'Frozen Veggie')	Weight	Time
Once	150g	2 mins 30 secs
Twice	350g	4 mins 30 secs
Three times	500g	6 mins 10 secs

1. Press 'FROZEN VEGGIE' repeatedly until the required weight appears on the LED screen.
2. Press 'START/+30SEC' to start cooking.
3. When cooking is complete, 5 beeps will sound and the LED screen will return to idle mode.

BEVERAGE

Beverage mode will automatically reheat liquids based on the number of cups you select.

Times (press 'Beverage')	Amount	Display
Once	1 cup = 120ml	1
Twice	2 cups = 240ml	2
Three times	3 cups = 240ml	3

1. Press 'BEVERAGE' repeatedly until the number of cups appears on the display.
2. Press 'START/+30SEC' to start cooking.
3. When reheating is complete, 5 beeps will sound and the LED screen will return to idle mode.

NOTE: If cooking thicker liquids (e.g. vegetable soup), cooking may take longer.

DINNER PLATE

Times (press 'Dinner Plate')	Weight
Once	250g
Twice	350g
Three times	500g

1. Press 'DINNER PLATE' repeatedly until the required weight appears on the LED screen.
2. Press 'START/+30SEC' to start cooking.
3. When cooking is complete, 5 beeps will sound, and the LED screen will return to idle mode.

MEMORY

This function allows you to program your own settings into the memory of the microwave oven.

You can store up to 3 memory programs.

Programming memories:

1. Press '0/MEMORY' repeatedly to cycle through memory locations 1 to 3. Stop on the location you wish to program. Press '0/MEMORY' once and the LED screen will display '1'; Press '0/MEMORY' twice and the LED screen will display '2'; Press '0/MEMORY' 3 times and the LED screen will display '3'.

2. Set the cooking time by pressing 'TIME COOK', and then enter the required cooking time in minutes and seconds. For example, to cook for 1min 30secs, enter 1, 3, 0. To cook for 15 minutes, enter 1,5,0,0. To cook for 1hr 15 minutes, enter 75 minutes as 7,5,0,0 (the maximum time is 99 minutes and 99 seconds).
3. Set the cooking power by pressing 'POWER'. The LED screen will display 'PL10'. Then press the required power level. For example, to cook on power level 1, press 1 and the LED screen will display 'PL1'. To cook on power level 8, press 8 and the LED screen will display 'PL8'
4. Press 'START/ +30 SEC.' to save the setting and return back to idle mode. Or;
5. Press 'START/+30SEC.' twice to start cooking, using the time and cook settings programmed into that memory location.

Using programmed memories:

1. Press '0/MEMORY' repeatedly to cycle through the memory locations 1 to 3 and stop at the location you wish to use.
2. From idle mode, press 'START/+30SEC' - the unit will start, using the time and cook settings programmed into that memory location.
3. When the programmed time has elapsed, 5 beeps will sound and the LED screen will return to idle mode.

MULTI-STAGE COOKING

Multi-stage cooking allows two stages of cooking using different settings. This is ideal for defrosting immediately followed by cooking, or cooking items that may require 2 separate power levels during the cooking process.

Set up both stages of cooking using the same processes used for Microwave cooking or either of the Time/Weight Defrost functions. **You must proceed immediately to set up the 2nd stage before pressing 'START/+30SEC'.**

NOTE : Auto-cooking functions cannot operate with Multi-stage cooking.

EXAMPLE: Cooking with 80% microwave power for 5 minutes + 60% microwave power for 10 minutes.

1. Press 'TIME COOK', then press 5, 0, 0, 0 to set the cooking time;
2. Press 'POWER', then press 8 to select 80% microwave power.
3. Press 'TIME COOK', then press 1, 0, 0, 0 to set the cooking time;
4. Press 'POWER' once, then press 6 to select 60% microwave power.
5. Press 'START/+30 SEC.' to start cooking.

ENQUIRING FUNCTION

You can use the ENQUIRING FUNCTION to check the time or power settings whilst the microwave is cooking.

1. **To check the power level:** During cooking, press 'POWER' and the power level will flash on the LED screen for 3 seconds.
2. **To check the time:** During cooking, press 'CLOCK' and the LED screen will display the time for 3 seconds.

CHILDREN SAFETY LOCK FUNCTION

Use this function to prevent children from pushing buttons and turning on the microwave oven.

Lock: In (standby) clock mode press 'STOP/CANCEL' for 3 seconds. There will be a long "beep" denoting the child-lock state is now active; meanwhile the LED screen will display rotating dashes.

Unlock: In locked mode, press 'STOP/CANCEL' for 3 seconds, there will be a long "beep" denoting that the lock is released.

COOKING END REMINDING FUNCTION

When the cooking is over, 5 beeps will sound to alert the user that cooking is complete.

CARE & CLEANING

- Switch off at the wall power outlet and remove the plug from the socket before cleaning and when not in use.
- If food spills or splatters in the microwave, wipe over all the interior surfaces with a sponge or soft damp cloth. Try to clean spills and splatters straight away. If ingredients have built up and stuck to the walls a mild detergent can be used.
- Wipe the exterior with a damp cloth and dry thoroughly. Do not let water enter the ventilation openings.
- Do not use harsh or abrasive cleaners.
- Carefully wash the glass turntable and turntable ring in warm soapy water. Rinse with clean water and dry thoroughly before placing back into the microwave. Ensure these parts are correctly in place before use.
- Wipe the bottom of the microwave oven interior with a soft damp cloth to ensure smooth operation of the turntable ring.
- To remove odours from the microwave; in a deep microwave safe bowl combine 1 cup of water with the juice of 1 lemon (or 1 tbsp of white vinegar) and microwave for 5 minutes at 100% power. Carefully remove the bowl and wipe the interior of the microwave with a dry soft cloth.
- Do not immerse the microwave oven in water or any other liquid.

MAINTENANCE

Troubleshooting

COMMON QUERIES	
Issue	Answer
Microwave oven interfering with TV reception	Microwave oven may cause interference with radio and TV reception. This is similar to interference received from other small electrical appliances (such as vacuum cleaners, electric fans). Place the microwave oven as far away from radios and television sets as possible.
Microwave light is dim	If operating the unit in a low power setting this may occur and is normal.
Steam accumulating on the door, hot air blowing from vents	During cooking, steam will come out of food. Most will escape from vents, but some may accumulate on a cool place like the microwave oven door.

Trouble	Possible Cause	Remedy
Microwave oven cannot be started	1. Power cord not properly connected to power outlet	Unplug and plug again after 10 seconds
	2. House fuse has blown	Replace house fuse or reset circuit breaker (seek help from qualified personnel)
	3. Trouble with power outlet	Test outlet with other electrical appliances
Microwave oven does not heat	4. Door not closed properly	Close door ensuring it locks into place with the unit (microwave light will go out)
Glass turntable makes noise when microwave oven operates	5. Dirty roller rest and oven bottom	Refer to "CARE & CLEANING"

Spectrum Brands Australia Pty Ltd

Locked Bag 3004 Braeside
Victoria 3195 Australia

Customer Service in Australia

TollFree: 1800 623 118
Email: info@spectrumbrands.com.au
Website: www.spectrumbrands.com.au

Spectrum Brands New Zealand Ltd

PO Box 9817 Newmarket
Auckland 1149 New Zealand

Customer Service in New Zealand

TollFree: 0800 736 776
Email: service@spectrumbrands.co.nz
Website: www.spectrumbrands.co.nz

Spectrum Brands Australia Pty Ltd and Spectrum Brands New Zealand Ltd Warranty Against Defects

In this warranty:

Australian Consumer Law means the Australian consumer law set out in Schedule 2 to the Competition and Consumer Act 2010;

CGA means the New Zealand Consumer Guarantees Act 1993;

Goods means the product or equipment which was accompanied by this warranty and purchased in Australia or New Zealand, as the case may be;

Manufacturer, We or us means:

1. for Goods purchased in Australia, Spectrum Brands Australia Pty Ltd ABN, 78 007 070 573;
or
2. for Goods purchased in New Zealand, Spectrum Brands New Zealand Ltd, as the case may be, contact details as set out at the end of this warranty;

Supplier means the authorised distributor or retailer of the Goods that sold you the Goods in Australia or in New Zealand; and

You means you, the original end-user purchaser of the Goods.

1. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law, or the CGA. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.
2. The benefits provided by this Warranty are in addition to all other rights and remedies in respect of the Goods which the consumer has under either the Australian Consumer Law or the CGA. The original purchaser of the Goods is provided with the following Warranty subject to the Warranty Conditions:
3. We warrant the Goods for all parts defective in workmanship or materials for a period of 1 year from the date of purchase (**Warranty Period**).

If the Goods prove defective within the Warranty Period by reason of improper workmanship or material, we may, at our own discretion, repair or replace the Goods without charge.

Warranty Conditions

4. The Goods must be used in accordance with the manufacturer's instructions. This Warranty does not apply should the defect in or failure of the Goods be attributable to misuse, abuse, accident or non-observance of manufacturer's instructions on the part of the user. As far as the law permits, the manufacturer does not accept liability for any direct or consequential loss, damage or other expense caused by or arising out of any failure to use the Goods in accordance with the manufacturer's instructions.
5. Exhaustible components (such as batteries, filters and brushes) of the Goods are included under this Warranty only where there is a defect in workmanship or materials used.
6. The warranty granted under clause 3 is limited to repair or replacement only.
7. Any parts of the Goods replaced during repairs or any product replaced remain the property of the manufacturer. In the event of the Goods being replaced during the Warranty Period, the warranty on the replacement Goods will expire on the same date as for the Warranty Period on the original Goods which are replaced.
8. In order to claim under the warranty granted under clause 3 you must:
 - (a) Retain this warranty with your receipt/proof of purchase; and
 - (b) Return the Goods to us at the relevant address or to the Supplier by prepaid freight within the Warranty Period accompanied with (i) the legible and unmodified original proof of purchase, which clearly indicates the name and address of the Supplier, the date and place of purchase, the product name or other product serial number and (ii) this warranty.
9. This warranty is immediately void if:
 - (a) Any serial number or appliance plate is removed or defaced;
 - (b) The Goods have been serviced or otherwise repaired by a person not authorised to do so by us or where non approved replaced parts are used.
10. The Goods are designed for domestic use only. The Goods must be connected to the electrical voltage requirements as specified in the ratings label located on the Goods.
11. This warranty does not cover the cost of claiming under the warranty or transport of the Goods to and from the Supplier or us.
12. This warranty is only valid and enforceable in Australia against Spectrum Brands Australia Pty Ltd and in New Zealand against Spectrum Brands New Zealand Ltd.

Contact us or the Supplier for further details.

Register your product online

If you live in Australia please visit: www.spectrumbrands.com.au/warranty

If you live in New Zealand Please visit: www.spectrumbrands.co.nz/warranty

Registration of your warranty is not compulsory, it gives us a record of your purchase AND entitles you to receive these benefits: Product information; Hints and tips; Recipes and news; Information on special price offers and promotions.

Any questions? Please contact Customer Service for advice.



www.russellhobbs.com.au

www.russellhobbs.co.nz