




Russell Hobbs®

A BRITISH ICON SINCE 1952

28750

 www.russellhobbs.com

Before First Use



Read the instructions and retain for future reference.

Intended Use



Household use only



Do not use outdoors

Specification

Power Rating (W)	800
Operating voltage (V)	220-240, 50/60Hz

Important Safeguards








- When using an electrical appliance, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury, including the following:
- Do not use the appliance for any purpose other than those described in these instructions.
- Do not operate the appliance if it's damaged or malfunctions.
- Do not use accessories or attachments other than those we supply.
- Do not leave the appliance unattended while plugged in.
- This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand

the hazards involved.







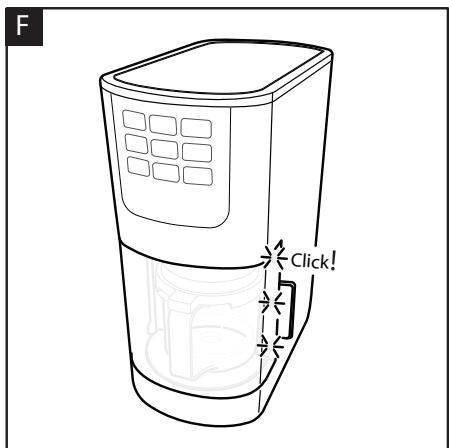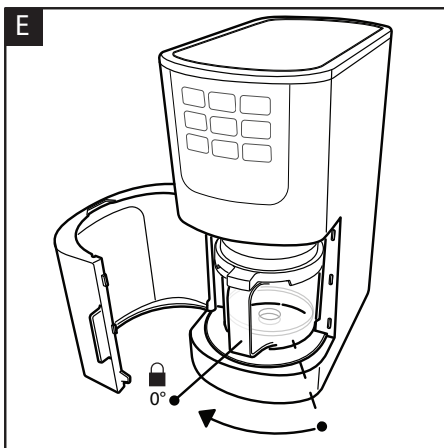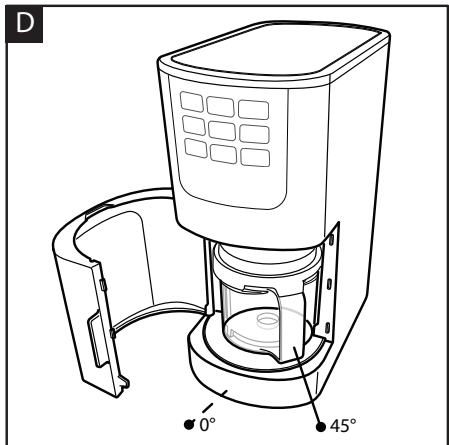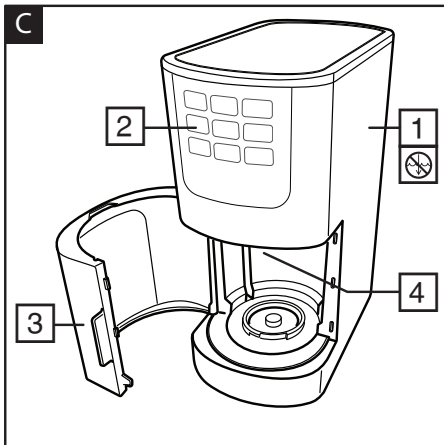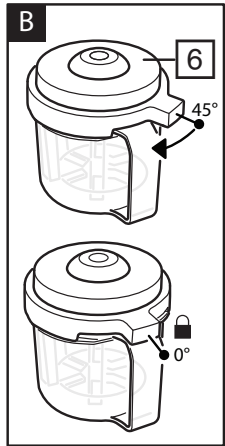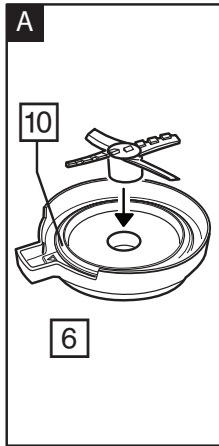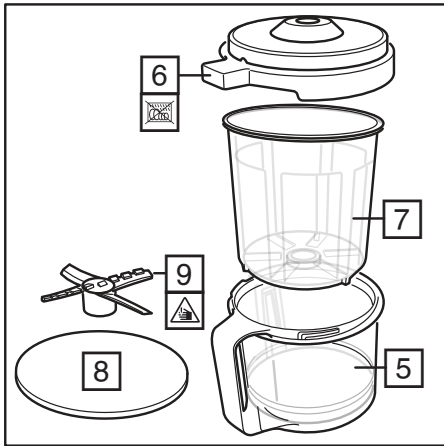



- Cleaning and user maintenance shall not be made by children unless they are aged from 8 years and above and supervised.
- Keep the appliance and its cord out of reach of children aged less than 8 years.
- Misuse of the appliance may cause injury.
- Avoid contact with moving parts. Keep hands, hair, and clothing, as well as spatulas and other utensils, away during operation to reduce the risk of injury and/or damage to the appliance.
- Turn the appliance off, then unplug from the outlet when not in use, before assembling or disassembling parts, and before cleaning. To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.
- If the cable is damaged, it must be replaced by the manufacturer, its service agent, or someone similarly qualified to avoid a hazard.
- Ensure the appliance is off when fitting or removing the Bowl from the Base Unit.

Warning Symbol Glossary

	Do not Immerse in water
	Use Caution. Sharp object
	Dishwasher Safe



Parts List

1	Base Unit	
2	Control Panel	
3	Door	
5	Outer Bowl	
6	Outer Bowl Lid	
7	Dessert Tub	
8	Dessert Tub Lid	
9	Mixing Paddle	
10	Outer Lid Gasket	
Not Shown		
4	Drive Shaft	

Sorbet	Fruit based, with water and sugar ingredients.
Yoghurt Ice Cream	Frozen yoghurt from store-bought yoghurt
Milkshake	Milkshakes. Combine Ice Cream and Milk.
Respin	To provide a smooth texture after running an Auto Function. Use the Respin function if the mixture is colder than -7°F .
Mix in	To mix small pieces cookies, nuts, cereal, or frozen fruit into the base. Use this Auto Function after the appliance has processed the base ingredients.

Function Button Operation

When you press a Function button:

- The appliance starts the selected function.
- The LED for the selected function and the On/Off button both remain illuminated

Auto Function Button	Use
Ice Cream	Ice Cream from milk, or milk alternatives.
Light Ice Cream	Ice Cream with low sugar, fat or use sugar substitutes.
Gelato	Gelato with custard based ingredients.

During Active Function

If you press a different Function button, The appliance stops the current function and starts the new one.

If the active Function button is pressed or the On/Off button, the appliance goes to the Function Pause Mode.

Function Pause Mode

When a function is paused:

- The selected Function and the On/Off LED flash repeatedly.
- If an Auto Function button is pressed, the appliance resumes operation with that Auto Function.
- If the On/Off button is pressed, the Auto Function is canceled and the unit will return to its starting position.

Use

Note - If the recipe requires the ingredients to be frozen, add ingredients to Dessert Tub (7), cover with Dessert Tub Lid (8) and freeze for 24 hours.

1. Add ingredients to the Dessert Tub (7). Do not add ingredients past the MAX Fill Line on the Dessert Tub (7).

Important - Obey the MAX Fill Line for liquids and solids. For all Auto Functions except the Milkshake function, fill the container to the Spoonable Max level.

For the Milkshake function, use the Frozen Max level for frozen ingredients. Use the Liquid Max level for liquid ingredients in the Milkshake function.

2. When the base is prepared or frozen, remove the Dessert Tub Lid (8) and place the Dessert Tub (7) into the Outer Bowl (5).
3. Assemble the Mixing Paddle (9) to the Outer Bowl Lid (6). Refer to Fig (A).

Note - The Mixing Paddle (9) and the Outer Bowl Lid (6) each contain a magnet.

4. Attach the Outer Bowl Lid (6) to the assembled Outer Bowl (5). Refer to Fig (B).
5. Open the Door (3).
6. Place Bowl into the Base Unit (1). Refer to Fig (D).
7. Lock the Bowl to the centre position at 0°. Refer to Fig (E).
8. Close the Door (3).
9. Switch on at the mains outlet and

press the Power Button.

10. Select the desired function. The Auto Function will automatically stop when complete.
11. Once the Auto Function is complete, open the Door (3) and remove the Outer Bowl (5) from the Base Unit (1) by rotating the Outer Bowl (5) counter-clockwise to unlock it. Refer to Fig (D) for position.
12. Remove the Outer Bowl Lid (6) from the Outer Bowl (5) by rotating counter clockwise to unlock. Remove the Dessert Tub (7) from the Outer Bowl (5).

Use - Mix In

If adding Mix-in ingredients, use a spoon to create a 40mm wide hole that reaches the bottom of the mixture.

Add chopped or broken mix-ins to the hole and repeat steps 6-10 to process again using the **Mix In** Auto Function.

The Respin Auto Function can be used on crumbly ice cream to provide a creamy texture.

Use - Respin

Respin is often required for very cold bases. If the base is crumbly, repeat steps 6-10 to reprocess using the Respin Auto Function.

Standby Mode

If you do not press a button for 3 minutes, the unit will switch off.

Care and Cleaning





This appliance contains no user serviceable parts. Before cleaning, ensure the appliance is switched off and unplugged from the mains outlet.

Do not use abrasives or brushes to clean components.

Do not place parts in boiling liquids.

Do not immerse Base Unit (1) in any liquid.

Clean using a damp cloth and dry:

1	Base Unit	
2	Control Panel	
3	Door	
4	Drive Shaft	

Remove, clean and dry:

5	Outer Bowl	
6	Outer Bowl Lid	
7	Dessert Tub	
8	Dessert Tub Lid	
9	Mixing Paddle	
10	Outer Lid Gasket	

Troubleshooting

If platform is obstructed, raise manually:

- Press and hold the ICE CREAM and SORBET buttons simultaneously for 5 seconds.
- The platform will raise.
- The platform will stop when buttons are released.

If platform is obstructed, lower manually:

- Push and hold the MIX IN and

RESPIN buttons simultaneously for 5 seconds.

- The platform will lower.
- The platform will stop when buttons are released.

Appliance Error

In the event of an error, the appliance will beep three times and the On/Off button will flash.

- Check to ensure the Jar/Lid/Blade assembly is correctly installed, the door is closed, and the platform is in the correct position. If the error code persists, please contact customer service.
- If the platform is will not move, it can be raised or lowered by pressing and holding the ICE CREAM and SORBET buttons or the MIX IN and RESPIN buttons together for 5 seconds.

Recipes



Recipe sample - Milkshake

Ingredients:

- ½ cup milk
- 1/3 cup bananas
- ¼ cup oats
- 3 tablespoons honey
- ½ cup Greek yogurt
- ½ cup water

Preparation:

1. Mix ¼ cup oats with ½ cup water evenly and then heat it in a microwave until the oats become soft (about 1 minute).
2. After heating, add ½ cup Greek yogurt, 1/3 cup bananas, and 3 tablespoons of honey, and use a blender to mix them evenly.
3. Pour into the Inner Jar and freeze for 24 hours.
4. Add ½ cup milk and mix using the MILKSHAKE auto function.

Recycling



To avoid environmental and health problems due to hazardous substances, appliances and rechargeable and non-rechargeable batteries marked with one of these symbols must not be disposed of with unsorted municipal waste. Always dispose of electrical and electronic products and, where applicable, rechargeable and non-rechargeable batteries, at an appropriate official recycling/collection point.

ERP

For ErP energy consumption information, please refer to website en.russellhobbs.com/erp

Service

If you contact Customer Service, please have the Model Number to hand, as we won't be able to help you

without it. It's on the rating plate (usually underneath the product). The product isn't user-serviceable. If it's not working, read the instructions, check the plug fuse and main fuse/circuit breaker. If it's still not working, consult your retailer.

If that doesn't solve the problem – ring Customer Service – they may be able to offer technical advice. If they advise you to return the product to us, pack it carefully, include a note with your name, address, day phone number, and what's wrong. If under guarantee, say where and when purchased, and include proof of purchase (till receipt). Send it to:

Customer Service

Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester
M35 0HS.

Email: support@russellhobbs.com

telephone: 0345 658 9700 (local rate number)

Please note, If you have purchased the product within the last 6 months, please contact the retailer in the first instance to deal with any matters relating to warranty.

Guarantee

Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected. This warranty shall not be valid where it is contrary to U.S. and other applicable laws, or where the warranty would be prohibited under any economic sanctions, export control laws,

embargos, or other restrictive trade measures enforced by the United States or other applicable jurisdictions. This includes, without limitation, any warranty claims implicating parties from, or otherwise located in, Cuba, Iran, North Korea, Syria and the Crimea region.

Guarantee period = 2 years from first retail purchase. To claim an extra 1 year guarantee, register your product online within 28 days of purchase.

Register at: **uk.russellhobbs.com/product-registration**

Consumables are guaranteed only for their recommended lifecycle.

Replacement/Spare parts* are excluded and are only covered by a 1 year warranty.

* Examples include filters, removable grill plates, drip trays/crumb trays etc.

Ref. No. 28750

25/UK/ 28750

T22-9004304-A

Version 09 /25

Russell Hobbs is a Registered Trade
Mark of Spectrum Brands, Inc., or one
of its subsidiaries.

Spectrum Brands (UK) Limited

Fir Street,

Failsworth,

Manchester

M35 0HS

www.russellhobbs.com

© 2025 Spectrum Brands, Inc.