









# Russell Hobbs



instructions

**£10,000 prize draw**  
**EXTRA year guarantee**  
**FREE rewards gallery**  
[www.productregister.co.uk/rhobbs](http://www.productregister.co.uk/rhobbs)  
Register online now!  
See back for details

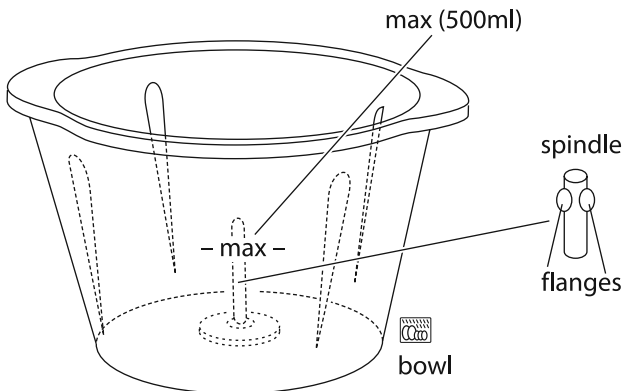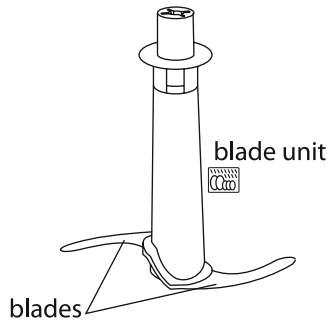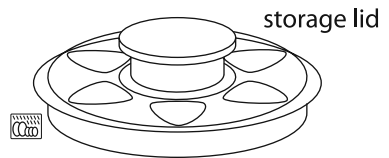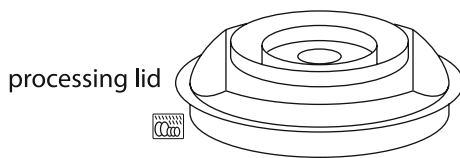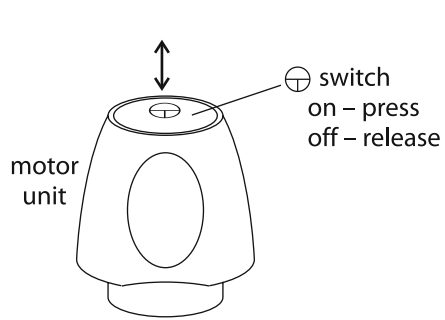

 = dishwasher safe

Read the instructions, keep them safe, pass them on if you pass the appliance on.  
Remove all packaging before use.



## **IMPORTANT SAFEGUARDS**

Follow basic safety precautions, including:

- 1 This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved.
  - Children must not use or play with the appliance.
  - Keep the appliance and cable out of reach of children.
- ⚠ To avoid injury, take care handling the blades, emptying the jug, and cleaning.
- ⚠ Don't add hot liquid (over 40°C), as it may be ejected due to sudden steaming.
- 2 Misuse of the appliance may cause injury.
- 3 Unplug the appliance before assembly, disassembly, or cleaning.
- 4 Don't leave the appliance unattended while plugged in.
- 3 If the cable is damaged, return the appliance, to avoid hazard.
- ⊘ Don't immerse the appliance in liquid.
  - 3 Don't open the processor till the blades have stopped moving.
  - 6 The motor won't operate unless the processor has been properly assembled.
  - 9 This processor is designed to process small quantities of food. Larger quantities may be processed in batches, but it shouldn't be used instead of a full size processor. Do this and you'll break it.
- 11 Don't process raw meat of any description – meat must be fully cooked and fit to eat before processing.
- 12 Don't try to crush or chip ice, you'll damage the blades.
- 13 Don't process big bits – nothing bigger than about 12mm (half inch) cubes.
- 14 Don't fill above **max** (500ml) – don't fill more than half full with liquids.
- 15 Don't run the motor for more than 1 minute at a time, then leave it for 3 minutes to cool down before using it again.
- 16 Route the cable so it doesn't overhang, and can't be tripped over or caught.
- 17 Don't fit any attachment or accessory other than those we supply.
- 18 Don't use the processor for any purpose other than those described in these instructions.
- 20 Don't use the processor if it's damaged or malfunctions.

### **household use only**




## **BEFORE USING FOR THE FIRST TIME**

- Dismantle and clean the processor (page 4), to remove any manufacturing residues, dust, etc.



## **DISMANTLING THE PROCESSOR**

- 1 Unplug the processor (switch the socket off first, if it's switchable).
- 2 Lift the motor unit off the processing lid.
- 3 Lift the processing lid off the bowl – hold it at an angle, to let anything on it drip back into the bowl.
- 4 Hold the blade unit by the plastic part, and lift it off the spindle.
- 5 You may have to turn it slightly to free it from the spindle flanges.
- 6 Take care – the blades are very sharp.

## **CLEANING**

- 7 Take care when you're handling and cleaning the blade unit – if you can't see what you're doing, don't do it.
- 8 Wipe the outer surfaces of the motor unit with a damp cloth.
- 9 You may wash the whisk, chopper, spindle, bowl, and beaker in warm soapy water, or in a dishwasher .
- 10 If you use a dishwasher, the harsh environment inside the dishwasher will affect the surface finishes.
- 11 The damage should be cosmetic only, and should not affect the operation of the appliance.
- 12 Clean the inside of the blade unit with a toothpick, or the end of a small bottle brush.
- 13 Take care when storing the blade unit – whenever possible, store the processor assembled, with the blade unit fitted inside the bowl.
- 14 Don't put the motor unit in water or any other liquid.

## **ASSEMBLING AND USING THE PROCESSOR**

- 15 Hold the blade unit by the plastic part, and lower it over the spindle in the bottom of the bowl.
- 16 You may have to turn it slightly, to fit over the spindle flanges.
- 17 It's spring-loaded, so you'll feel some resistance as you push it down.
- 18 Put the food to be processed in the bowl:
  - a) don't fill above **max** (that's 500ml)
  - b) don't fill more than half full with liquids, or the bowl may overflow in use
  - c) process raw meat of any description – meat must be fully cooked and fit to eat before processing
  - d) don't process large amounts in batches – if you need to process large amounts, you need a full size processor
- 19 Align the central hole in the processing lid with the top of the blade unit, and lower the lid on to the bowl.
- 20 Lower the motor unit on to the processing lid – you may have to turn it slightly to fit.
- 21 Put the plug into the power socket (switch the socket on, if it's switchable).
- 22 Press the switch , on top of the motor unit, gently down to start processing.
- 23 Keep an eye on the contents of the bowl, to avoid over-processing.
- 24 Release the switch , to stop the motor.
- 25 It's best to run the motor in bursts of a few seconds at a time, and inspect the results between bursts.

26 You're extremely unlikely to come across anything that needs a full minute of processing, but, if you do, don't run the motor for more than 1 minute at a time, then leave it for 3 minutes to cool down before using it again.

### **DONE?**

27 Lift the motor unit off the bowl.

28 Lift the processing lid off the bowl – hold it at an angle, to let anything on it drip back into the bowl.

29 Put a finger on top of the blade unit, to prevent it dropping out.

30 Tip the processed contents out of the bowl.

31 Alternatively, hold the plastic part of the blade unit, turn it to free it from the spindle flanges, and lift it straight up and out of the bowl. Take care – the blades are very sharp.

32 Fit the storage lid to the bowl.

### **A COUPLE OF TIPS**

33 Cut your ingredients into uniformly sized pieces before processing, for better control.

34 Chocolate, nuts, and cheese will chop/grind better if thoroughly chilled first.

### **HOT LIQUIDS**

35 At higher temperatures, the lid may soften enough to lose its seal, allowing the contents of the bowl to escape, so, when using hot liquids:

- a) before pouring into the bowl, let the liquid cool down to the sort of temperature you can handle comfortably (i.e. liquid temperature below 40°C)
- b) if the lid is too hot for comfort, remove it and let the liquid cool down further

## **a few simple recipes to get you started**

### **leek & potato soup** (serves 2)

75g leeks, trimmed

75g potatoes, peeled

1 vegetable or chicken stock cube

400ml water

salt and pepper to taste

- Put the leeks and potatoes into the bowl, and process for a couple of seconds (you want them lumpy, not mushy).
- Transfer to a pan, and add the water and stock cube.
- Bring to the boil, stirring, then reduce the heat, cover the pan, and simmer for 20 minutes.
- Let the mixture cool for about 30 minutes, then process till the mixture is silky smooth.
- Return the mixture to the pan, and heat to serving temperature (don't let it boil, or it may separate).
- Taste, adjust the seasoning, and serve with crusty bread.

### **coriander pesto** (dip, topping or sauce)

2 handfuls fresh leaf coriander

3 cloves fresh garlic

60g pine nuts

125ml olive oil

60g freshly grated Parmesan

salt and freshly ground black pepper to taste

- Put the coriander, garlic, pine nuts, and a bit more than half the oil into the bowl, and process till the mixture looks smooth.
- Add the Parmesan
- To adjust the thickness, add a little oil and give it a short burst of speed.
- Repeat till the consistency looks about right.
- Taste, and adjust the seasoning.
- Serve as a dip (fairly thick), as a topping for soup (not too thick, but not runny), or tossed through warm pasta (fairly runny).

### **black olive and anchovy tapenade/sauce**

250g pitted black olives

60g anchovy fillets, drained

3 tbsp capers, drained

150ml olive oil

2 tbsp brandy (optional)

fresh ground black pepper

- Reserve half the oil, and put everything else into the bowl.
- Process for a couple of seconds, then check the mixture.
- Adjust the oil and process, till you achieve the consistency you need.
- For a tapenade, to spread on toast, you need a paste.
- For a sauce, to toss through warm pasta, it should be fairly runny.

### **horseradish and apple sauce**

250ml double cream

2 sharp flavoured apples, peeled and grated

6 tbsp horseradish relish

2 tsp paprika

- Put the cream into the bowl, and process till soft peaks form.
- Spoon the cream gently into a large bowl, and gently fold in the rest of the ingredients – “gently” means don’t knock the air out of the cream or it’ll collapse.
- Season with fresh ground black pepper, and serve with beef or sausage.

### **sweet and sour sauce**

4 shallots, peeled

a small piece of fresh ginger, peeled

2 cloves fresh garlic

2 tbsp soy sauce

2 tsp mustard

2 tsp tomato purée

a dash of white wine vinegar

- Put everything into the bowl, and process till smooth.
- Serve with chicken or fish, or as a dip.

### **breakfast smoothie**

2 tbsp natural yogurt

100ml milk

1 tbsp oatmeal or porridge oats

1 large banana, roughly chopped

1 tsp honey

1 apple, cored and roughly chopped

- Put everything into the bowl.
- Process for 15-20 seconds if you like a rough texture, 30-40 seconds if you prefer it smooth.

### **mango lassi** (a rich mango smoothie)

200ml natural yogurt

1 ripe mango

200ml milk

2 tsp honey

- Stone, peel and roughly chop the mango.
- Process for 15-20 seconds.

**recipes are available on our website:**

**processor:**

<http://www.russellhobbs.com/ifu/550931>

**smoothies:**

<http://www.russellhobbs.com/ifu/550941>



## ENVIRONMENTAL PROTECTION

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol mustn't be disposed of with unsorted municipal waste, but recovered, reused, or recycled.



## SERVICE

If you ring Customer Service, please have the **Model No.** to hand, as we won't be able to help you without it. It's on the rating plate (usually underneath the product).

The product isn't user-serviceable. If it's not working, read the instructions, check the plug fuse and main fuse/circuit breaker. If it's still not working, consult your retailer.

If that doesn't solve the problem – ring Customer Service – they may be able to offer technical advice.

If they advise you to return the product to us, pack it carefully, include a note with your name, address, day phone number, and what's wrong. If under guarantee, say where and when purchased, and include proof of purchase (till receipt). Send it to:

Customer Service

Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester M35 0HS

email: [support@russellhobbs.com](mailto:support@russellhobbs.com)

telephone: 0845 658 9700 (local rate number)



## GUARANTEE

Defects affecting product functionality appearing within two years of first retail purchase will be corrected by replacement or repair provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected. Documentation, packaging, and product specifications may change without notice.



## ONLINE

[www.russellhobbs.co.uk](http://www.russellhobbs.co.uk) for more products



## REGISTER ONLINE FOR –

£10,000 prize draw, **EXTRA** year guarantee, **FREE** rewards gallery

Visit [www.productregister.co.uk/rhobbs](http://www.productregister.co.uk/rhobbs)

You must register within 28 days of purchase.

