



Russell Hobbs



MODEL RHTSM4D Pictured



Toasted Sandwich Maker

RHTSM2D / RHTSM4D

INSTRUCTIONS & WARRANTY

RHTSM2D_ RHTSM4D_IB_RB_080212

Spectrum Brands Australia Pty Ltd

Locked Bag 3004 Braeside
Victoria 3195 Australia

Customer Service in Australia

TollFree: 1800 623 118

Email: info@spectrumbrands.com.au

Website: www.spectrumbrands.com.au

Spectrum Brands New Zealand Ltd

PO Box 9817 Newmarket
Auckland 1149 New Zealand

Customer Service in New Zealand

TollFree: 0800 736 776

Email: service@spectrumbrands.co.nz

Website: www.spectrumbrands.co.nz

Spectrum Brands Australia Pty Ltd and Spectrum Brands New Zealand Ltd Warranty Against Defects



In this warranty:

Australian Consumer Law means the Australian consumer law set out in Schedule 2 to the Competition and Consumer Act 2010;

CGA means the New Zealand Consumer Guarantees Act 1993;

Goods means the product or equipment which was accompanied by this warranty and purchased in Australia or New Zealand, as the case may be;

Manufacturer, We or us means:

1. for Goods purchased in Australia, Spectrum Brands Australia Pty Ltd ABN, 78 007 070 573;
or
2. for Goods purchased in New Zealand, Spectrum Brands New Zealand Ltd, as the case may be, contact details as set out at the end of this warranty;

Supplier means the authorised distributor or retailer of the Goods that sold you the Goods in Australia or in New Zealand; and

You means you, the original end-user purchaser of the Goods.

1. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law, or the CGA. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.
2. The benefits provided by this Warranty are in addition to all other rights and remedies in respect of the Goods which the consumer has under either the Australian Consumer Law or the CGA. The original purchaser of the Goods is provided with the following Warranty subject to the Warranty Conditions:
3. We warrant the Goods for all parts defective in workmanship or materials from the date of purchase (**Warranty Period**), for the period of:-
 - (a) Two (2) years for Russell Hobbs products (see product packaging for details)
 - (b) Two (2) years with five (5) year motor warranty for Russell Hobbs products (see product packaging for details)
 - (c) Limited Lifetime, Ten (10) years for Russell Hobbs cookware.
 - (d) One (1) year for George Foreman, iRobot, Westinghouse, Black & Decker and Spectrum Brands products.

If the Goods prove defective within the Warranty Period by reason of improper workmanship or material, we may, at our own discretion, repair or replace the Goods without charge.

Warranty Conditions

4. The Goods must be used in accordance with the manufacturer's instructions. This Warranty does not apply should the defect in or failure of the Goods be attributable to misuse, abuse, accident or non-observance of manufacturer's instructions on the part of the user. As far as the law permits, the manufacturer does not accept liability for any direct or consequential loss, damage or other expense caused by or arising out of any failure to use the Goods in accordance with the manufacturer's instructions.
5. Exhaustible components (such as batteries, filters and brushes) of the Goods are included under this Warranty only where there is a defect in workmanship or materials used.
6. The warranty granted under clause 3 is limited to repair or replacement only.
7. Any parts of the Goods replaced during repairs or any product replaced remain the property of the manufacturer. In the event of the Goods being replaced during the Warranty Period, the warranty on the replacement Goods will expire on the same date as for the Warranty Period on the original Goods which are replaced.
8. In order to claim under the warranty granted under clause 3 you must:
 - (a) Retain this warranty with your receipt/proof of purchase; and
 - (b) Return the Goods to us at the relevant address or to the Supplier by prepaid freight within the Warranty Period accompanied with (i) the legible and unmodified original proof of purchase, which clearly indicates the name and address of the Supplier, the date and place of purchase, the product name or other product serial number and (ii) this warranty.
9. This warranty is immediately void if:
 - (a) Any serial number or appliance plate is removed or defaced;
 - (b) The Goods have been serviced or otherwise repaired by a person not authorised to do so by us or where non approved replaced parts are used.
10. The Goods are designed for domestic use only. A limited 90-day Warranty applies to any industrial or commercial use of the Goods. The Goods must be connected to the electrical voltage requirements as specified in the ratings label located on the Goods.
11. This warranty does not cover the cost of claiming under the warranty or transport of the Goods to and from the Supplier or us.
12. This warranty is only valid and enforceable in Australia against Spectrum Brands Australia Pty Ltd and in New Zealand against Spectrum Brands New Zealand Ltd.

Contact us or the Supplier for further details.

Register your product online

If you live in Australia please visit: www.spectrumbrands.com.au/warranty


If you live in New Zealand Please visit: www.spectrumbrands.co.nz/warranty

Registration of your warranty is not compulsory, it gives us a record of your purchase AND entitles you to receive these benefits: Product information; Hints and tips; Recipes and news; Information on special price offers and promotions.

Any questions? Please contact Customer Service for advice.

Congratulations on the purchase of your Russell Hobbs appliance. Each unit is manufactured to ensure safety and reliability. Before using the appliance for the first time, please read the instruction booklet carefully and keep it for future reference. Pass it on if you pass on the appliance.

When using electrical appliances, basic safety precautions should always be followed.

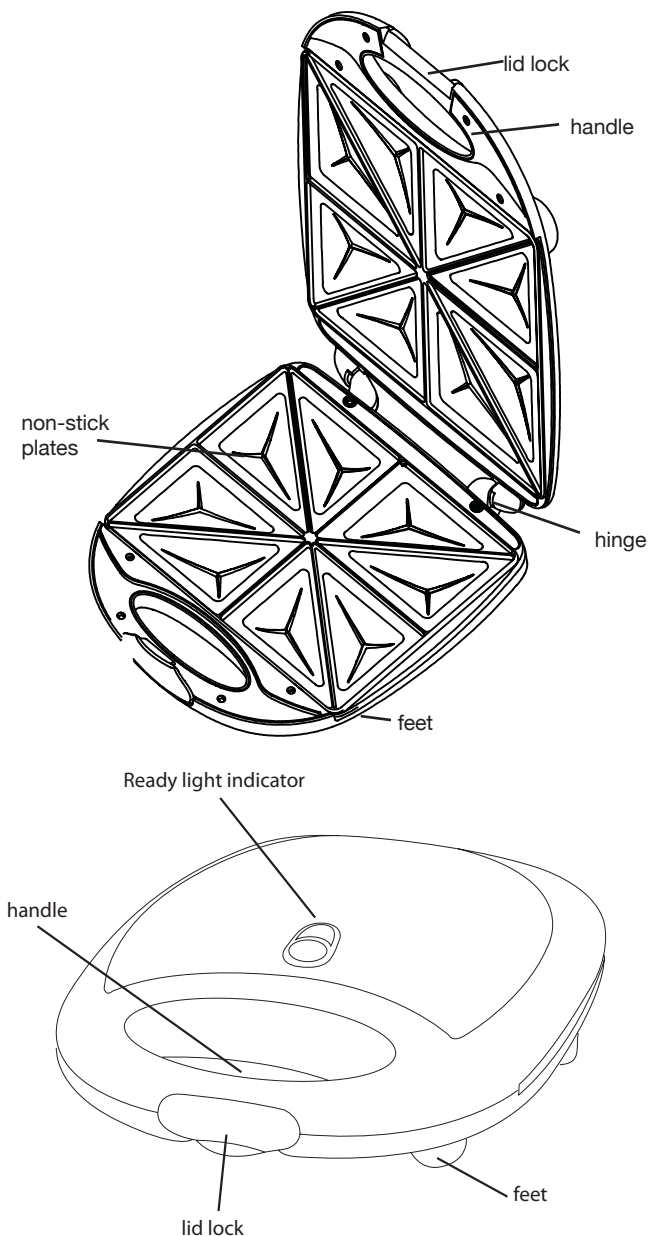

**Note - Toasted Sandwich Maker 4 Slice, Model RHTSM4D pictured*

BEFORE FIRST USE

NOTE: When using the Sandwich Maker for the first time the unit will emit a fine smoke smell. This is caused by the heating of the elements and new components. Please follow the steps below to prepare your sandwich maker.

- Remove the product from the box and remove all packaging surrounding the product.
- Wipe the surface of the cooking plates with a damp cloth and then dry the plates with a soft dry cloth.
- Place the product on an even surface in a well ventilated area.
- Wipe the cooking plates with cooking oil or butter. This will protect the non-stick surface of the plates during the pre-heating time.
- Ensure the unit is closed, and then plug the power cord into the wall power outlet and switch on. The indicator light will glow to indicate the appliance is heating. When the indicator light stops, the appliance has reached its maximum cooking temperature.
- Switch unit off, open the lid and let the appliance cool down and then wipe clean. Repeat this procedure a couple of times, remembering to wipe clean after each use.
- Now it is ready to use.

CONDITIONING THE COOKING PLATES

- Wipe the cooking plates with cooking oil or butter. Switch the power on at the wall power outlet and once the unit reaches cooking temperature, the green light will turn off. Wipe off the excess oil or butter with a kitchen towel.

CAUTION: *Take care as the cooking plates will now be hot.*

HOW TO USE YOUR RUSSELL HOBBS SANDWICH MAKER

- Plug the power cord into the wall power outlet and switch on. The indicator light will glow to indicate the appliance is heating. When the indicator light extinguishes, the appliance has reached its maximum cooking temperature.
- When toasting with bread, always butter the outside of the bread and the filling is placed between the unbuttered sides.
- Place the bread buttered side down on the bottom plate, then place the filling onto the bread.
- Place the top slice of bread (buttered side up) on top of the filling.
- Gently close the lid until you can lock the latch into position. Do not force lid closed. If the lid does not close you may have too much filling or your bread maybe too thick.
- Depending on the filling, cooking time is approximately 3-5 minutes. You can check the progress of your sandwich by unlocking the latch and lifting the lid. If your sandwich requires more cooking simply close the lid and lock the latch.

NOTE: Fillings such as cheese may melt during cooking and stick to the hot plates. Wait until sandwich maker has cooled then remove with plastic spatula. DO NOT use metal objects such as knives as this will scratch the non-stick surface.

COOKING WITH PASTRY

- The use of ready made pastry sheets such as puff and short crust are ideal. Simply place one pastry sheet on the bottom plate, then make a small hollow and place your fillings on top. Place remaining pastry sheet on top and close the lid.
- Cook until golden brown.

HINTS FOR BEST SANDWICHES

- All types of bread can be used – white, wholegrain, wholemeal etc. For different flavours try using a herb or garlic butter.
- Do not over fill your sandwich.
- Be careful when biting sandwich as filling can be hot and can burn if eaten too quickly.

CLEANING AND MAINTENANCE

- After use, wait for the unit to cool properly before cleaning and storage.
- Wipe the inside and edges of the heating plate with absorbent paper towel or a soft cloth.
- Should any filling be difficult to remove, pour a little cooking oil onto the heating plate and re-heat the unit for two minutes. Wait for the unit to cool for five minutes then try to remove the filling again.
- This appliance is for household use only and is not user-serviceable.
- Do not open or change any parts by yourself. Please refer to a qualified electrical service department or return to the supplier if servicing is necessary.
- Always remember to unplug the unit from the power outlet when not in use and before cleaning.
- The body of the appliance should be cleaned with a damp cloth. Do not let water enter the appliance.
- Do not use bleach or other abrasive substances or solvents to clean your appliance as it can be damaging to the finish.
- To remove stubborn spots/marks, wipe the surfaces with a cloth slightly dampened in soapy water or mild non-abrasive cleaner. Rinse and dry, with a clean soft cloth.

STORING THE APPLIANCE

- Unplug the unit from the wall power outlet and clean all the parts as instructed above. Ensure that all parts are dry before storing.
- Store the appliance in its box or in a clean, dry place.
- Never store the appliance while it is still wet or dirty.
- Never wrap the power cord around the appliance.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including:

1. To protect against electrical hazards do not immerse the power cord, plug or appliance in water or any other liquid.
2. Do not use in the bathroom or near any source of water. Do not use outdoors.
3. Always use the appliances handles as some parts will be hot. The temperature of accessible surfaces/parts may become very hot when the appliance is operating.
4. Do not touch the hot cooking surfaces.
5. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
6. Always turn off and unplug from the power outlet before cleaning the appliance.
7. Do not operate this appliance with a damaged cord/plug or after the appliance has malfunctioned, or been dropped or damaged in any manner. Contact Customer service for replacement, examination, repair or adjustment.
8. There are no serviceable parts. If the power cord or appliance is damaged, it must be replaced by the manufacturer or similarly qualified person in order to avoid a hazard.
9. Do not use on an inclined plane or unstable surface.
10. Do not move the appliance when in use.
11. Do not cover the appliance when in use.
12. Do not cook food items too large for the appliance.
13. Take care when opening the lid of the appliance, there may be some steam.
14. Always take care when removing food after cooking as it is hot.
15. Food may burn. Always monitor when using this appliance.
16. Do not use the appliance near or below any curtains or other combustible materials.
17. Keep the appliance and the power cord away from the edge of tables or countertops and out of reach of children and infirm persons.
18. To disconnect, turn off the wall power outlet, then grasp the plug and remove from wall power socket. Never pull by the cord.
19. Do not cook food wrapped in plastic film or polythene bags or aluminium foil. It will cause a fire hazard.
20. Always clean the appliance after use.
21. Do not place on or near any heat sources.
22. Do not leave the appliance unattended when in use.
23. Follow the instructions when cleaning this appliance.
24. Do not use appliance for other than its intended purpose.
25. This appliance is not a toy. Children should be supervised to ensure they do not play with the appliance.
26. This appliance is not intended to be operated by means of an external timer or separate remote control system.
27. For added safety, electrical appliances should be connected to a power outlet that is protected by a residual current device (RCD), also often referred to as a 'Safety Switch'. Your switchboard may already incorporate an RCD. If unsure, call an electrician for verification and fitting if necessary.



SAVE THESE INSTRUCTIONS
THIS APPLIANCE IS FOR HOUSEHOLD USE ONLY



Russell Hobbs



MODEL RHTSM4D Pictured

Recipes

Toasted Sandwich Maker

RHTSM2D/ RHTSM4D

For more recipes:



RUSSELL HOBBS and logo are Trade Marks of Spectrum Brands, Inc., or one of its subsidiaries.

©2011 Spectrum Brands, Inc. Recipes are to be used in conjunction with the Toasted Sandwich Maker by Russell Hobbs. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without prior permission of the copyright owner.

Photography: Salton Australia

Designed in Australia - Photography: Salton Australia

THAI SANDWICH

Serves 2

4 slices white or wholemeal bread

Extra light olive oil spray

Small chicken fillet, diced

A little extra light olive oil

½ clove of garlic, crushed or finely chopped

½ tsp dried crushed chilli (more or less, to taste)

1 tbsp chopped Thai basil leaves* (available in Asian grocers)

2 tsp nam pla (fish sauce)

Approx. 1 tbsp coconut cream

1. Lightly spray one side of each slice of bread with the extra light olive oil and set aside.
2. Heat oil in a small pan, add the diced chicken fillet and the garlic and stir until chicken is cooked through.
3. Remove from heat, stir in chilli, basil and nam pla. Allow to cool slightly before stirring through the coconut cream.
4. The mixture needs to be moist but not wet, so adjust coconut cream quantity accordingly.
5. Place two bread slices into Sandwich Maker, spoon in filling and top with remaining bread slices. Seal Sandwich Maker and cook until ready.

* If Thai basil is unavailable, use regular sweet basil or coriander.

BAKED BEANS SANDWICH

Serves 2

4 slices wholemeal bread

A little butter

Approx ½ - ⅔ baked beans in tomato sauce

1 slice ham, diced

1 small spring onion, chopped (optional)

3 tbsp grated mild or tasty cheese

1. Butter the bread and set aside. Spoon the beans into a saucepan, add ham and spring onion and heat through. Add a drop of tomato or vegetable juice if they are too dry.
2. Remove from heat, allow to cool a little before stirring through the cheese.
3. Spoon filling into bread slices in each compartment, top with second slice.
4. Close the Sandwich Maker and cook until ready.

MEDITERRANEAN TOASTED SANDWICH

Makes 2

4 slices preferred bread

A little virgin olive oil

1 clove garlic, cut

Approx. 3 tbsp diced
of shredded ham

4 cherry tomatoes, halved

1 tbsp chopped chives

3 - 4 tbsp grated tasty cheese

2 Kalamata olives, slivered

1 - 2 tbsp grated Parmesan
cheese

A few torn basil leaves

1. Brush one side of each of the bread slices with olive oil, then rub the cut surface of the garlic over each.
2. Arrange one slice in each of the Sandwich Maker cooking plates.
3. Divide ham between the two, place the cherry tomatoes on top, then sprinkle on the chopped chives and tasty cheese, scatter the olive slivers, sprinkle on Parmesan cheese and basil.
4. Set the second bread slice on top, close the Sandwich Maker and cook until ready.
5. Serve with a few slices of tomato on the side and some thinly sliced red onion, with a sprig of fresh basil.

FRUITY SANDWICH

Makes 2

4 slices fruit loaf

A little butter or jam

About 6 strawberries, sliced
(depending on size)

½ banana, sliced

A little cinnamon sugar
(castor sugar & cinnamon
mixed)

Icing sugar

A few additional strawberries
for serving

1. Lightly spread one side of each slice with butter or jam, place one slice into each plate, press down lightly.
2. Arrange sliced strawberries in each, then banana on top.
3. Sprinkle on cinnamon sugar to taste.
4. Place second slice on top, close the Sandwich Maker and cook until ready.
5. To serve, sift icing sugar on top and serve with a few strawberries on the side.

NOTE: A few thin slices of ripe mango or well drained canned peaches may be substituted for the banana.

NOTES

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.