

REMINGTON®

EST. NEW YORK 1937





Shine Therapy PRO Hairdryer AC9300

 remington-europe.com

Register online for an EXTRA year guarantee


Visit uk.remington-europe.com/product-registration You must register within 28 days of purchase.

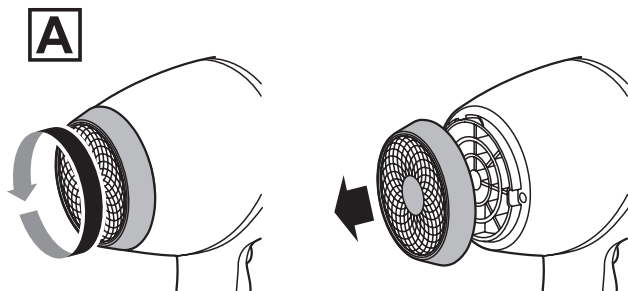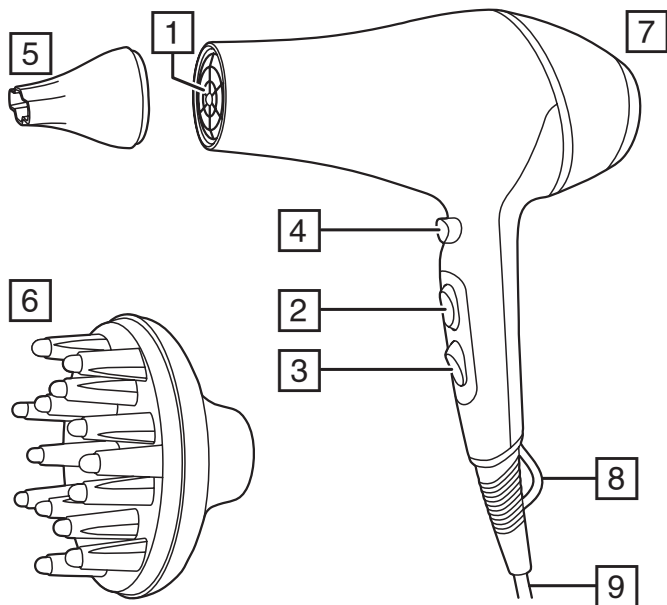

Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe. Remove all packaging before use.



IMPORTANT SAFEGUARDS

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
 -  Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
 - When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.
 - For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom*.
- * Currently, the fitting in a bathroom of an electrical socket suitable or capable of operating the appliance is not permitted in the UK (see BS7671).
- If the supply cord of this unit becomes damaged, discontinue use immediately and return the appliance to your nearest authorised Remington® service dealer for repair or replacement in order to avoid a hazard.
 - Always ensure the voltage to be used corresponds to the voltage stated on the unit before plugging the appliance into the mains socket.
 - Keep direct airflow away from eyes or other sensitive areas.

- Do not allow any part of the appliance touch the face, neck or scalp.
- During use, always ensure the inlet and outlet grilles are not blocked in any way as this will cause the unit to automatically stop. If this should occur, switch off and allow the unit to cool.
- Keep the power plug and cord away from heated surfaces.
- Do not leave the appliance unattended while plugged in.
- Do not place the appliance on any soft furnishings.
- Do not use attachments other than those we supply.
- Do not set the appliance down while still on.
- Do not twist or kink the cable, or wrap it round the appliance.
- Do not use the appliance if it is damaged or malfunctions.
- Check the cord regularly for any sign damage.
- This appliance is not intended for commercial or salon use.
- WARNING: Contains traces of nuts.

PARTS

- | | |
|--------------------------------------|-------------------------------------|
| 1. Grille | 6. Diffuser attachment |
| 2. Heat selector switch (I, II, III) | 7. Removable easy clean rear grille |
| 3. Speed selector switch (0, I, II) | 8. Hang up loop |
| 4. Cool shot (☼) | 9. Cord |
| 5. Styling concentrator attachment | |

INSTRUCTIONS FOR USE

- Wash and condition your hair as normal.
 - Squeeze out excess moisture with a towel and comb through.
 - Hairsprays contain flammable material – do not use while using this product.
 - Fit accessory attachments to the front of the hairdryer then twist clockwise to lock in place. Take care when you do this because the attachments can become hot during use.
1. Plug the product into the mains power supply.
 2. Switch your hairdryer on and select the desired speed setting (low I or high II) using the speed selector switch.
 3. Select the desired heat setting (low I, medium II or high III) using the heat selector switch.
 4. After use, turn the appliance off and unplug it.
 5. Let the appliance cool down before cleaning or storing away.

TIPS

- For fast drying use the high heat / high speed setting.
- To create smooth styles use the concentrator and a round hair brush (not included) whilst drying.
- To enhance natural curls and waves, attach the diffuser to the dryer. Turn your head upside down and gently place your hair into the diffuser bowl slightly rotating the dryer as you style.
- To create extra volume at the roots of the hair, keep your head upright and place the diffuser against the top of the head. Gently rotate the hairdryer allowing the diffuser fingers to gently massage the scalp being careful not to burn the scalp. Dry gently on a medium heat / low speed setting.
Caution: Do not use the diffuser on the highest heat setting (🔥).
- To set your style, press the cool shot button (❄️) whilst styling then release it to reactivate the heat.

STORAGE, CLEANING AND MAINTENANCE

Let the appliance cool down before cleaning and storing away

- To maintain peak product performance and to prolong motor life, it is important to regularly remove any dust and dirt from the inlet grille.
- Remove the grille as shown (FIG A), clean with a cloth or soft brush, then replace it.

OVERHEAT PROTECTION

In the event of overheating, the appliance may either stop unexpectedly or start to blow cold air. Overheating is usually caused by a blocked grille/filter. If this happens, immediately unplug the appliance and refer to STORAGE, CLEANING AND MAINTENANCE to clean the grille/filter. If, after doing this overheating continues to happen, stop using the appliance and contact Customer Service.

RECYCLING



To avoid environmental and health problems due to hazardous substances, appliances and rechargeable and non-rechargeable batteries marked with one of these symbols must not be disposed of with unsorted municipal waste. Always dispose of electrical and electronic products and, where applicable, rechargeable and non-rechargeable batteries, at an appropriate official recycling/ collection point.

SERVICE AND GUARANTEE

Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions.

This warranty shall not be valid where it is contrary to U.S. and other applicable laws, or where the warranty would be prohibited under any economic sanctions, export control laws, embargos, or other restrictive trade measures enforced by the United States or other applicable jurisdictions. This includes, without limitation, any warranty claims implicating parties from, or otherwise located in, Cuba, Iran, North Korea, Syria and the Crimea region.

Your statutory rights are not affected.

Consumables are excluded.

Defects from repair by an unauthorised dealer are not covered.




Guarantee period = 5 years from first retail purchase.

To claim the extra 1 year guarantee, register your product online within 28 days of purchase: **uk.remington-europe.com/product-registration**

If you call the Service Centre, please have the model number to hand, as we won't be able to help you without it. The model number can be found on the rating plate of the appliance.

SERVICE CENTRE

United Kingdom

 Tel 0800 212 438 (free call mainland UK)

Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester

M35 0HS, UK

www.remington.co.uk

Product support:

productsupport@Remington.co.uk

Ireland

 Tel 142 951 40

Remington Consumer Products,

Unit B12, Ballymount Corporate Park,

Ballymount, Dublin 12

<https://ie.remington-europe.com>

Product support:

productsupport@Remington.co.uk

شكرا لقيامك بشراء منتج Remington® الجديد. يرجى قراءة هذه التعليمات بعناية والاحتفاظ بها في مكان آمن. قم بإزالة جميع مواد التعبئة قبل الاستخدام.



إجراءات وقائية هامة

- يمكن استخدام هذا الجهاز بواسطة الأطفال الذين تتراوح أعمارهم من 8 سنوات وما فوق والأشخاص ذوي القدرات البدنية أو الحسية أو العقلية المنخفضة أو قليلي الخبرة والمعرفة إذا تم الإشراف عليهم/إرشادهم وبفهمون المخاطر المعنية. ويجب ألا يعبث الأطفال بالجهاز. ويجب ألا يقوم الأطفال بالتنظيف والصيانة إلا إذا كان عمرهم أكبر من 8 سنوات وتحت إشراف. احفظ الجهاز والكابلات بعيدا عن متناول الأطفال دون سن 8 سنوات.
- ⊗ لا تستخدم هذا الجهاز بالقرب من أحواض الاستحمام أو الحمامات أو أي أحواض أخرى تحتوي على ماء.
- عند استخدام الجهاز في حمام، قم بفصله بعد الاستخدام طالما أن القرب من الماء يمثل خطرا حتى عند إيقاف الجهاز.
- تحذير - للحماية الإضافية، ينصح بتركيب أي جهاز تيار متبقي (RCD) بمقنن تيار تشغيل متبقي لا يتجاوز 30 مللي أمبير في الدائرة الكهربائية المغذية للحمام. استشر كهربائي.
- وفي حالة تلف سلك تغذية هذه الوحدة، توقف عن استخدامها فوراً وأعد الجهاز لأقرب أخصائي خدمة معتمد من Remington® للإصلاح أو الاستبدال لتجنب الأخطار.
- لا تلف السلك حول الوحدة. تحقق من انتظام السلك للبحث عن أي علامة تلف.
- لا تستخدم الجهاز إذا كان تالفاً أو به خلل.
- لا تسمح لأي جزء من الجهاز بلمس الوجه أو العنق أو فروة الرأس.
- حافظ على تدفق الهواء المباشر بعيداً عن العينين أو الأماكن الحساسة الأخرى.
- تأكد دائماً أثناء الاستخدام من أن شبيكات المدخل والمخرج غير مسدودة بأي شكل من الأشكال لأن ذلك سوف يتسبب في إيقاف الوحدة تلقائياً.
- وإذا حدث ذلك، أوقف الوحدة ودعها تبرد.
- لا تترك الجهاز بدون مراقبة أثناء توصيله.
- لا تقيد الجهاز أثناء تشغيله.
- لا تضع الجهاز على أي مفروشات ناعمة.
- لا تستخدم ملحقات غير الملحقات التي تقوم بتوريدها.
- هذا الجهاز غير مخصص للاستخدام التجاري أو الصالونات.

الأجزاء

تعليمات الاستخدام

1. اغسل ورتب شعرك كالمعتاد.
2. قم بإزالة الرطوبة الزائدة بمنشفة ومشط.
- تحتوي سوائل رش الشعر على مواد قابلة للاشتعال - لا تستخدمها أثناء استخدام هذا المنتج.
- يجب تركيب المكثفات أو الموزع عن طريق تثبيتها في الجزء الأمامي من مجفف الشعر ولها في اتجاه عقارب الساعة لإحكام التركيب.
3. قومي بتركيب الملحقات في الجزء الأمامي من مجفف الشعر ثم لفي الملحق في اتجاه عقارب الساعة لتثبيتها في مكانه. يجب توخي الحذر عند القيام بذلك لأن الملحقات قد تصبح ساخنة أثناء الاستخدام.
4. يتم تشغيل مجفف الشعر واختيار إعدادات السرعة المطلوبة (منخفض ♪ أو مرتفع ♪) باستخدام مفتاح تحديد السرعة.
5. يرجى اختيار إعداد الحرارة المطلوب (منخفض، متوسط، مرتفع) باستخدام مفتاح تحديد الحرارة.
6. قم بإيقاف الجهاز وفصله بعد الاستخدام.
7. دع الجهاز يبرد قبل تنظيفه وتخزينه.

نصائح

- للتجفيف السريع، استخدم وظيفة الحرارة العالية / السرعة العالية.
- للتصفيف الناعم، استخدم المكثف وفرشاة شعر مستديرة (غير مضمنة) أثناء التجفيف.
- لتحسين تجديد الشعر الطبيعي والموجات، قم بإلحاق الناشر بالمجفف. أدر رأسك رأساً على عقب وضع شعرك برفق في وعاء الناشر مع تدوير المجفف قليلاً أثناء التصفيف.
- لإنشاء حجم إضافي في جذور الشعر، اجعل رأسك منتصباً وضع الناشر فوق الرأس. قم بتدوير مجفف الشعر برفق مع السماح لأصابع الناشر بتدليك فروه الرأس برفق والحرص على عدم حرق فروة الرأس. جفف برفق على إعداد حرارة منخفضة / سرعة منخفضة.
- تنبيه: لا تستخدم الناشر على أعلى وضع للحرارة.
- لضبط التصفيف، استخدم زر الهواء البارد أثناء التصفيف ثم اتركه لإعادة تنشيط الحرارة.

التنظيف والصيانة

- فصل الجهاز ودعه يبرد.
- للحفاظ على أفضل أداء وإطالة عمل الموتر، من المهم التخلص من الغبار والأوساخ على نحو منتظم من شبكة فلتر الهواء.
- يجب رفع الشبكة كما هو موضح في (الشكل A)، وتنظيفها باستخدام قطعة قماش أو فرشاة ناعمة ثم إعادة تركيبها.

إعادة التدوير

لتجنب المشاكل البيئية والصحية الناجمة عن المواد الخطرة، يجب عدم التخلص من الأجهزة، والبطاريات القابلة لإعادة الشحن والبطاريات غير القابلة لإعادة الشحن التي تحمل علامة واحدة من هذه الرموز مع نفايات البلدية غير المصنفة. يجب دائماً التخلص من المنتجات الكهربائية والإلكترونية، وكذلك إذا أمكن، البطاريات القابلة لإعادة الشحن وغير القابلة لإعادة الشحن، في نقطة رسمية مناسبة لإعادة التدوير/تجميع المخلفات.



الخدمة والضمان

سيتم تصحيح العيوب التي تؤثر على وظائف المنتج التي تظهر خلال مدة الضمان بالاستبدال أو الإصلاح وفقاً لخيارنا بشرط استخدام المنتج والحفاظ عليه وفقاً للتعليمات. لا تتأثر حقوقك القانونية.

لا يكون هذا الضمان ساري المفعول في حالة مخالفته للولايات المتحدة والقوانين المعمول بها، أو عندما يكون الضمان محظوراً بموجب أي عقوبات اقتصادية أو قوانين مراقبة الصادرات أو الحظر أو غيرها من التدابير التجارية التقييدية التي تطبقها الولايات المتحدة أو غيرها من الولايات القضائية المعمول بها. ويشمل ذلك، على سبيل المثال لا الحصر، أي مطالبات بالضمان تتعلق بأطراف من كوبا أو إيران أو كوريا الشمالية أو سوريا أو شبه جزيرة القرم أو تقع في هذه المناطق. يتم استبعاد المواد الاستهلاكية.

لا يتم تغطية العيوب الناجمة عن الإصلاح بواسطة موزع غير معتمد. إذا طلبت مركز الخدمة، يرجى أن يكون لديك رقم الموديل فلن نكون قادرين على مساعدتك دون ذلك. ويمكن العثور على رقم الموديل على لوحة مقنن الجهاز.

اطلب ضمانك الإضافي لمدة 1 سنة بتسجيل منتجك على الانترنت. فقط اذهب لموقع:

www.remington-europe.com/register/





Ref. No. AC9300

Type No. D18A

21/UK/ AC9300 T22-7002198 Version 06 /21

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.

Spectrum Brands (UK) Ltd

Fir Street,

Failsworth,

Manchester

M35 0HS

remington-europe.com

© 2021 Spectrum Brands, Inc.